



Tent Power & Lighting Guide

Beacon Hill Manor · For vendors and event staff · Updated Oct 10, 2026

If power fails during an event: call the Beacon Hill Manor day-of event manager to assist. Their contact is listed in the venue check-in instructions, which are sent to the couple the day before check-in.

Getting oriented

Every direction in this guide assumes you are standing at the tent entry, where the sidewalk from the house meets the tent, facing into the tent. "Right" and "left" are your right and left from that spot. The "front" is the entry end and the "back" is the far end.

The tent has three outlet posts, each on its own 20 amp circuit, at the front right, back right and back left corners. Both light switches are on the right side: the chandelier switch is in the front right corner, and the string lights switch is behind the third drape.

Quick reference


Location (facing in from the entry)	What's there	What it's for
Front right corner	Outlet post, 20 amp circuit	Vendor power
Front right corner, behind the white drape	Power strip	Chandeliers: press its switch ON
Right side, third drape from the front	Power strip on the tent pole	String lights: press its switch ON

Location (facing in from the entry)	What's there	What it's for
Back right corner	Outlet post, 20 amp circuit	Vendor power
Back left corner	Outlet post, 20 amp circuit	Vendor power

Tent map

Three outlet posts at the corners; both light switches on the right side

Laid out like the 1st-floor plan. Standing at the tent entry facing in, right is your right. Not to scale.

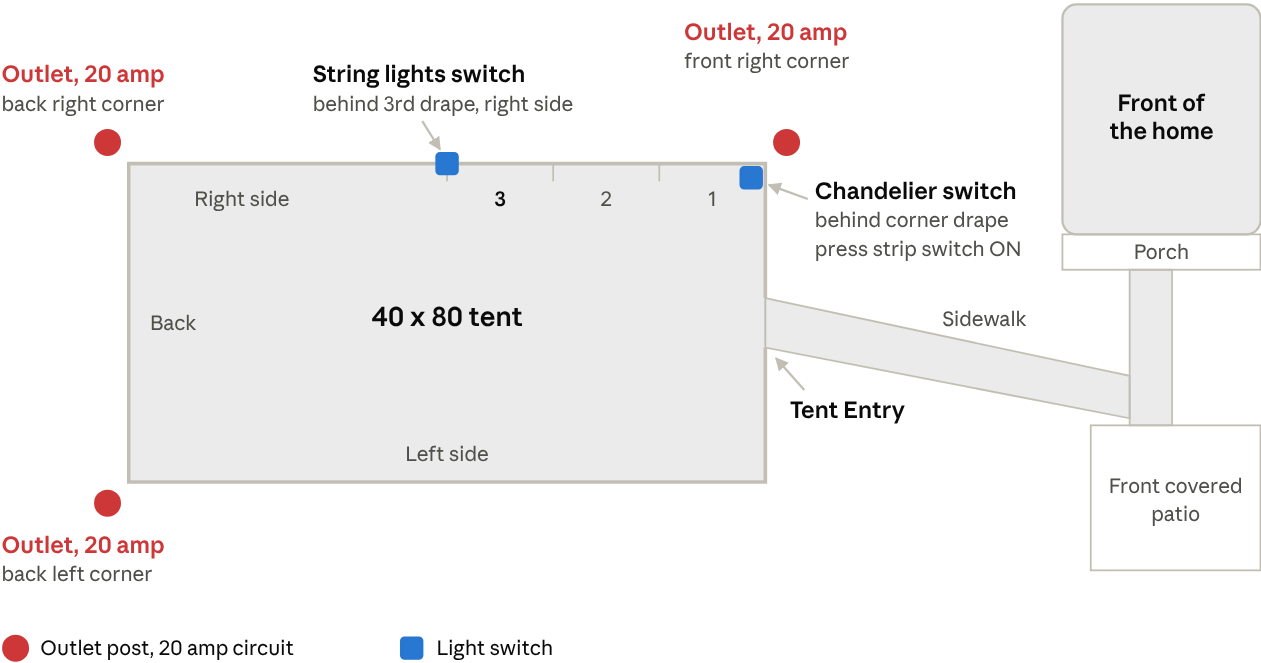

Tent power map · 3 outlets, 2 switches, front entry

Take the sidewalk from the front porch to the tent entry. Red dots mark the outlet posts and blue squares mark the light switches.

Turning on the lights

Chandeliers

1. Go to the front right corner of the tent.

2. Pull back the white drape in the corner. A black power strip is attached there.
3. Press the power strip's switch to ON. The chandeliers come on.

String lights

1. Along the right side of the tent, count three drapes in from the front right corner.
2. Pull that drape aside. A black power strip is mounted on the tent pole behind it.
3. Press the power strip's switch to ON. The string lights come on.

Vendor power

Each outlet post is a 20 amp circuit: one at the front right corner, one at the back right and one at the back left. The back corners work best for vendors set up along the back of the tent, such as a DJ or a caterer's warming station, so their cords don't cross the dance floor or guest walkways.

- **Outlet covers:** the outlet posts have weatherproof covers. Keep them closed over plugged-in cords so rain can't get in.
- **Outdoor cords only:** vendors supply their own extension cords and must use outdoor-rated ones for anything plugged into the outlet posts.
- **Spread the load:** put high-draw equipment on different outlet posts instead of stacking it on one.


Do not plug power strips into other power strips.

Photos

Light switches



Front right corner: chandelier switch on the power strip, and the front right outlet post outside.

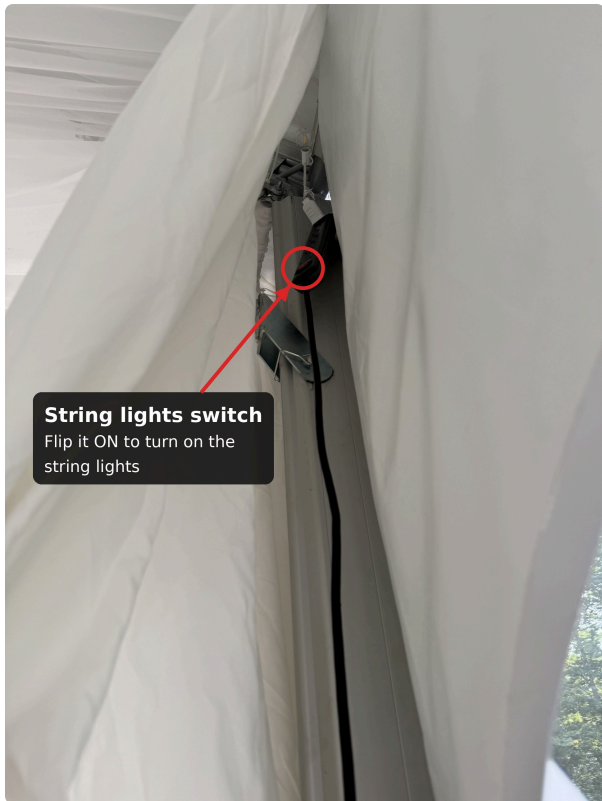

Right side, third drape: string lights switch on the tent pole.

Outlet posts



Back left outlet post.



Back right outlet post.

Beacon Hill Manor · 41166 Canter Lane, Paeonian Springs, VA 20129 ·

www.beaconhillmanor.com

Questions during an event? Contact the Beacon Hill Manor day-of event manager listed in the venue check-in instructions, sent to the couple the day before check-in.