


HQ™ 3 CORE BARREL KIT SELECTION

1.5 M / 5.0 FT AND 3.0 M / 10.0 FT CORE BARREL

ID #	PART #	DESCRIPTION				
	3542948	Core Barrel Kit, HQ3 1.5 M / 5.0 FT	3542948			
	3542944	Inner-tube Group, HQ3 1.5 M / 5.0 FT		3542944		
	3542949	Core Barrel Kit, HQ3 3.0 M / 10.0 FT			3542949	
	3542945	Inner-tube Group, HQ3 3.0 M / 10.0 FT				3542945
1	5001440MKII	Head Assembly, HQ	✓	✓	✓	✓
2	26517	Adapter, HQ3 Pump-out	✓	✓	✓	✓
3	26662	Plug, Piston	✓	✓	✓	✓
4	20651	O-ring, #229	✓	✓	✓	✓
5	26510	Piston, HQ3 Core Ejection	✓	✓	✓	✓
6	26512	Split Tube, HQ3 1.5 M / 5.0 FT	✓	✓		
	26513	Split Tube, HQ3 3.0 M / 10.0 FT			✓	✓
7	25258	Inner-tube, HQ 1.5 M / 5.0 FT	✓	✓		
	25236	Inner-tube, HQ 3.0 M / 10.0 FT			✓	✓
8	26515	Stop Ring, HQ3	✓	✓	✓	✓
9	26516	Core Lifter, HQ3 Fluted				
	3547137	Core Lifter, HQ3 Fluted, Diamond Coated				
10	26514	Case, HQ3 Core Lifter	✓	✓	✓	✓
11	5007789	HQ Stabilized Locking Coupling				
	5007791	HQ Stabilized Locking Coupling with Tang				
	5007790	HRQ Stabilized Locking Coupling				
	5007792	HRQ Stabilized Locking Coupling with Tang				
	3545410	Locking Coupling, HQ Full-hole				
	3545408	Locking Coupling, HRQ Full-hole				
	3545409	Locking Coupling, HQ Full-hole with Tang				
12	3545407	Locking Coupling, HRQ Full-hole with Tang				
	25241	Coupling, HQ Adapter	✓		✓	
13	25242	Landing Ring, HQ	✓		✓	
14	25259	Outer-tube, HQ 1.5 M / 5.0 FT				
	24910CP	Outer-tube, HQ 1.5 M / 5.0 FT, Chrome Plated				
	25243	Outer-tube, HQ 3.0 M / 10.0 FT				
	25243CP	Outer-tube, HQ 3.0 M / 10.0 FT, Chrome Plated				
15	44408	Stabilizer, HQ Inner-tube	✓		✓	
16	25245	Protector, HQ Outer-tube Thread	✓		✓	
	3542987	Drift Tool, Link Latch N / H / P	✓	✓	✓	✓
	3542638	Loading sleeve, HQ / HRQ	✓	✓	✓	✓
	3541994	In-Hole Tools Product Manual	✓		✓	
	306390	Core Barrel Safety Poster	✓		✓	
	5006293	Split Tube Loader Tool	✓	✓	✓	✓

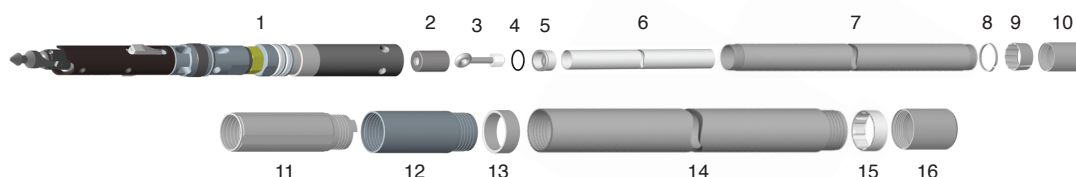

LEGEND: ✓ Standard Component Required - Choose One [OPT] Optional Component Not a Kit Item