

Our Erotic™
Journey


Gratifier

Instructions

PLEASE READ CAREFULLY BEFORE USING THE PRODUCT

Fully Charge before use.

PRODUCT INFORMATION

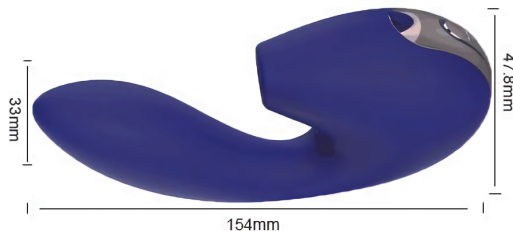


Material: silicone&ABS Noise: less than 50db
Waterproof: Life waterproof lasting time: 60-90 minutes
Modes: 10 Powerful Vibration & 3 Sucking Modes

WARM REMINDER

Fully powered about 1.5 hours.
Please fully charged before use vibrator, for better experience.
Please wash vibrator with running water and wipe it with dry towel before & after use.
Please stop using immediately if any discomfort during use vibrator.
Please don't use while charging for your safety.

PRODUCT BUTTON DESCRIPTION

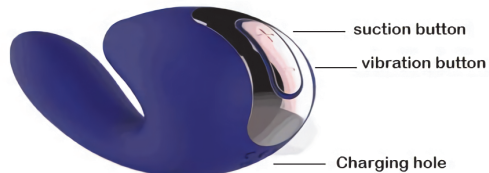

- 1.Indicator light on the vibrator flash means it is charging.
Indicator light on the vibrator always on means it is fully charged.
- 2.Press the "suction button"/"vibration button" for 2s to turn on(off) suck /vibrate mode(suck and vibrate modes controlled independently by suction and vibration button).
- 3.Click "suction button"/ "vibration button" to switch modes.

Storage:

- 1.We recommend store vibrator in ventilated place.Avoid direct sun exposure, high temperature and humidity moisture place
- 2.Keep the surface dry without any water stains and then store it in a storage bag.

Sweet Tips:

- 1 Vibrator is personal product. Please don't share it with others and avoid caused health issues
- 2.Please stop use if any discomfort when you using
- 3.Please don't use it when you are ill or wake for your safety
- 4.It is designed to help release tight muscles,prevent injury and lead to more effective warm up and recovery.