

Our Erotic Journey™

Wild at Heart

Instructions

PLEASE READ CAREFULLY BEFORE USING THE PRODUCT

Fully Charge before use.


Specifications:

- | | |
|-------------------------------|-----------------------------|
| 1.Product Name: Wild at Heart | 3.Battery: 3.7V/220mAh |
| 2.Main Material: Silicone+ABS | 5.Max Sound: ≤55dB |
| 4.Working Time: 70 minutes | 7.Frequency: 10 Frequencies |
| 6.Waterproof Grade: IPX6 | 9.Size: 2.44*2.40*1.18/in |
| 8.Power Supply: USB | |

Usage Instructions:

- 1.Press power button(ON/OFF) for 2 seconds still the indicator light on(vibrator power on).
- 2.After turn on vibrator,it will enter the preset 10 different frequency.Click the ON/OFF button to switch vibration modes that you love.
- 3.Press the ON/OFF button for 2 seconds to turn off vibrator.

Product Diagram:

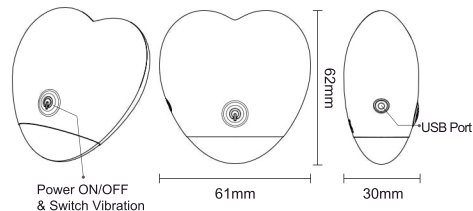

Notes:

- 1.Please ensure fully charged before use.
- 2.Please keep it away from children.
- 3.Please clean with warm water and soap before and after each use and wipe with clean towel or paper.
- 4.No soaking in water.
- 5.No using while it charging.
- 6.It is charging when Indicator on and flash continuously. It's fully charged when indicator continued light on.

Storage:

- 1.We recommend store vibrator in ventilated place.Avoid direct sun exposure, high temperature and humidity moisture place.
- 2.Keep the surface dry without any water stains and then store it in a storage bag.

Sweet Tips:

- 1.Vibrator is personal product. Please don't share it with others and avoid caused health issues.
- 2.Please stop use if any discomfort when you using.
- 3.Please don't use it when you are ill or wake for your safty.
- 4.It is designed to help release tight muscles,prevent injury, and lead to more effective warm up and recovery.