


Micron IP Remote Access Setup

Setting up an account in the Micron IP Viewer app


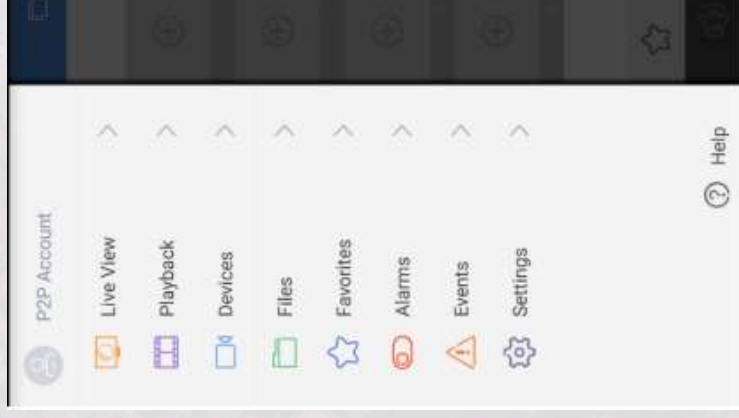


After opening the app tap on the options menu at the top left of the screen. (Image 1)

Tap on the “P2P Account” link at the top of the screen. (Image 2)

Tap on the “Sign Up” link to create a new Account. (Image 3)

Micron IP Remote Access Setup

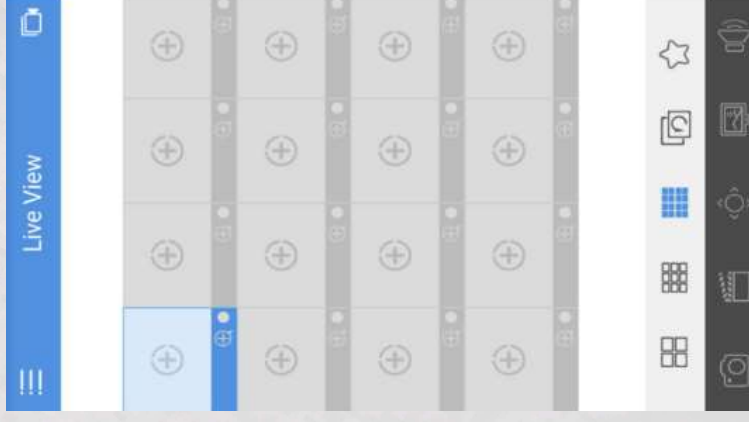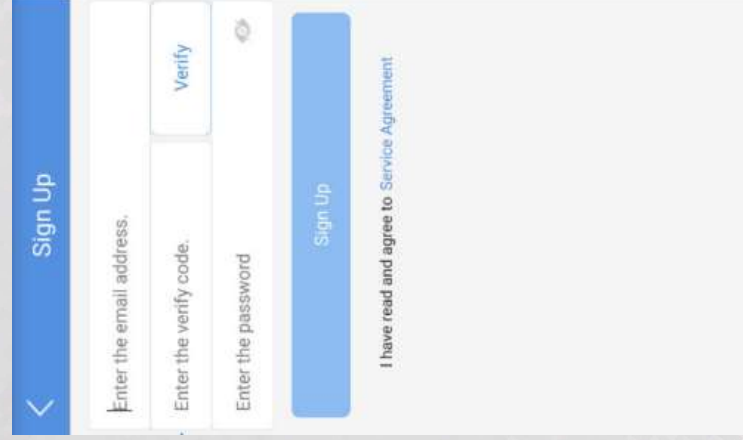


Enter your email address and a password (this will be the login details for your new account)

Then Tap “Verify”. You will receive an email with a verification code to enter into the box above.
Then Click the “sign up” button. (Image 4)

Your account is now setup ready to add a new device.

Tap on the options menu at the top left side of the screen (Image 5) .

Micron IP Remote Access Setup

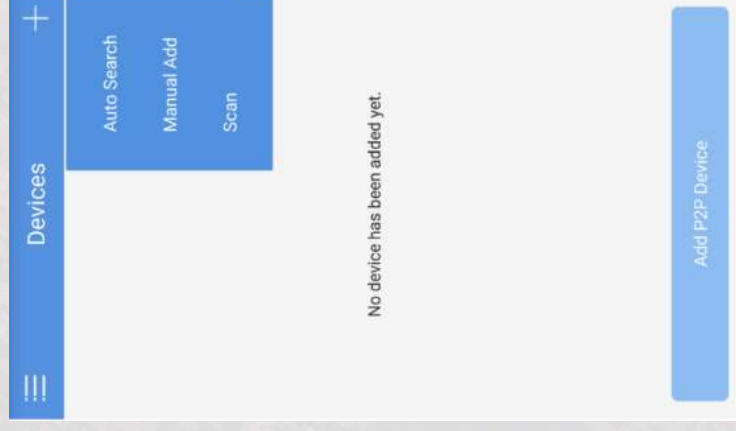


Select the “Devices” Menu (Image 6).

Tap on the “ +” symbol and select the “scan” option to scan the NVR QR code. This will bring up your smartphone camera and allow you to scan the QR code of the NVR. (Image 7)

On the NVR Right click and login. Click the “System” Menu and select the “Network” Menu Then “P2P”. This will bring up the QR code to scan with your smart phone. (Image 8)

Micron IP Remote Access Setup

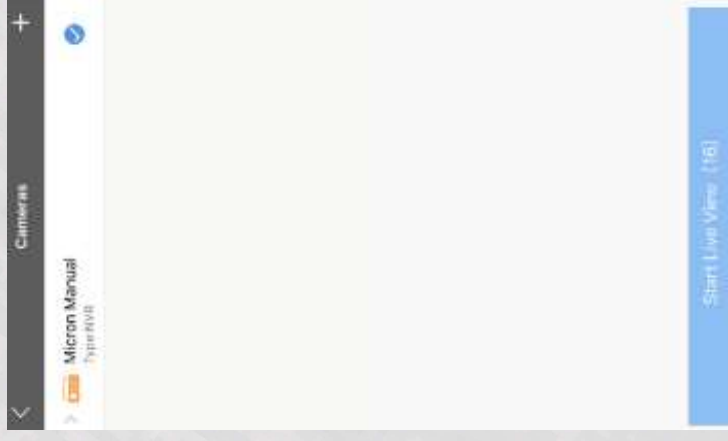

Once it has scanned the code you will be returned to the devices menu to enter your username/password and a site name for your system. (Image 9) Tap the “save” icon at the top right of the screen.

Tap the “camera” icon at the top right of screen (Image 10)

Here you can tick the box on the right then select “start live view” to view all cameras, or click the machine on the left to select individual cameras.