

Dash Bezels and knobs Instructions

Wiper knob

1. (if applicable) Remove old knob from shaft. **2.** Place knob and position the set screw so it tightens on the flat on the shaft, allow for approx. 1/16" of movement of the knob to the attachment nut to allow for the washer to activate. Then tighten set screw. **3.** Confirm function of the Wiper switch.



Headlights knob with shaft

1. Remove knob and shaft by turning knob all the way clockwise and then pushing the button on the Headlight Electrical Switch which is located behind the dash. **2.** Insert the knob with shaft into the Headlight Electrical switch thru the opening in the attachment nut. **3.** Confirm the shaft clicks into the switch. (If it does not click into the switch then loosen the set screw and remove knob from shaft. Then push shaft into switch. Then place knob over shaft and align set screw to a flat section on the shaft and tighten) **4.** Rotate the shaft counter-clockwise about ½ turn and confirm Parking light (first click) and Headlights (2nd click) functions correctly.