


Firewall Bulkhead Connection Plug Instructions

www.disruptiverestomods.com

Revision
May 23, 2022

1. Establish **bottom** of Firewall Bulkhead Connection Plug.

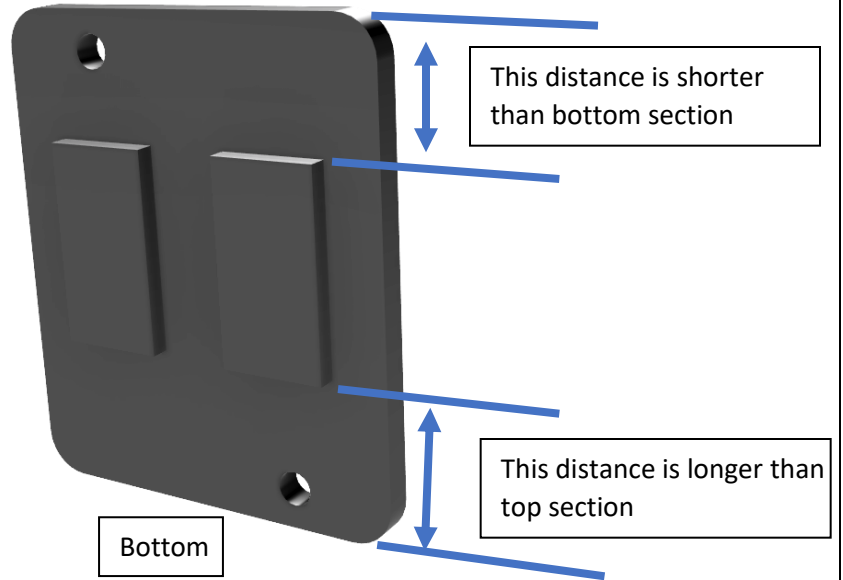

2. Position Plug so its protrusions fill the rectangular holes in the firewall and use (2) #10-24 x 3/8" screws to tighten Plug to the firewall.



View from engine bay



View from inside vehicle