

Window Crank Assembly Instructions

Window Crank Assembly

1. If applicable remove old Window Crank Assembly - typically by unscrew screw with a screwdriver
2. Position new Window Crank Assembly onto the gear of the window regulator. Use the supplied hardware and a 9/64" Allen Wrench to tighten the Window Crank Assembly on to the window regulator. **(Do not over tighten screw as window regulator can strip out)**
3. Roll window up and down to confirm everything is working correctly.
4. **(Optional)** – Apply Mirror insert into the Knob of the Window Crank Assembly by removing the white sticker on the backside and applying it to the knob. Then remove the clear film which covers the mirror insert.

