

YOOSURE CAMPING

Multi-Functional Waterproof Bag Instruction Manual

Please read this manual carefully before using the



Product Information

Brand		Yoosure		Product Name		Multi - functional IPX7 Waterproof Bag	
Specification		37×14×14 inches		Code	TR1003 Series	Colors	Black/Yellow/Gray
Material	PVC	Weight	approx. 5lb	Waterproof	IPX7	Max Load	110L

Product Accessories



IPX7
Waterproof bag



Shoulder
straps



4 x Roof
fixing straps

 
 
 
 
Installing the Waterproof

一、Preparation

- 1.Clean the roof: Remove dust and gravel from the roof to prevent friction from damaging the bottom of the waterproof bag.
- 2.Check the roof rack: Ensure the roof rack is firm and stable, and that the roof rack and roof can bear the full load weight of the waterproof bag.

二、Roof Installation Steps

- 1.Unfold the waterproof bag, remove the shoulder straps, lay the waterproof bag flat on the roof and find the 4 included fixing straps.
 - 2.Pass one end of the fixing strap under the roof rack (preferably cross-fix to avoid unilateral stress), pass the end of the strap without the loop through the loop of the other end, and tighten the strap.
 - 3.Correctly thread the end of the strap without the loop through the "figure-eight" buckle of the bag (see the diagram below), pull it down tightly to ensure no looseness.
 - 4.Complete the installation of the 4 fixing straps in the above steps, check the installation status of the waterproof bag on the roof again, and use it only after ensuring it is secure.
- The webbing is equipped with a secondary safety lock. Ensure the safety lock is correctly locked before use.

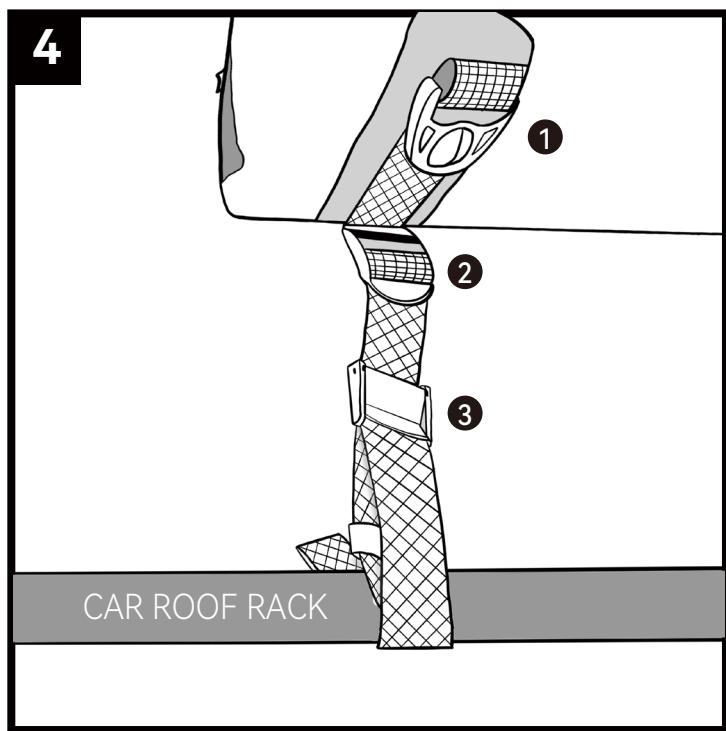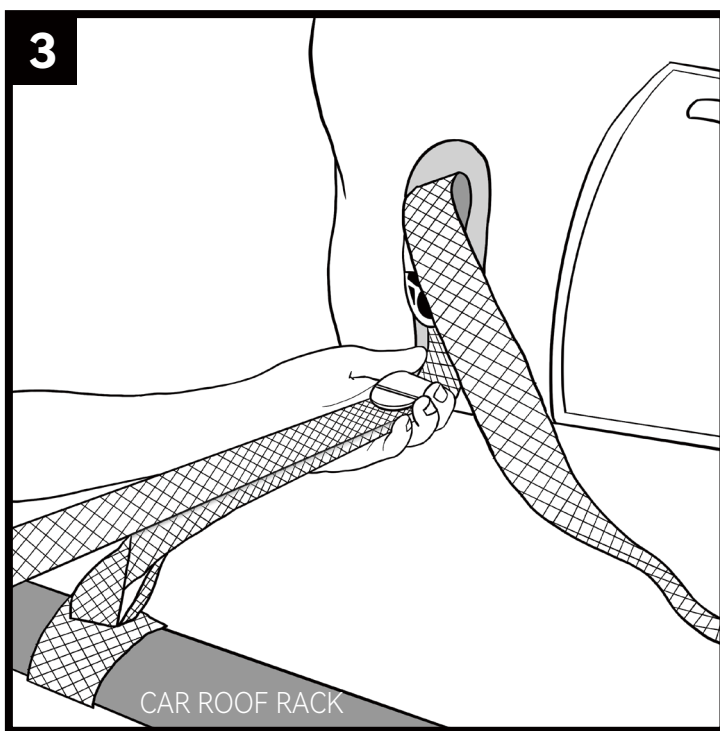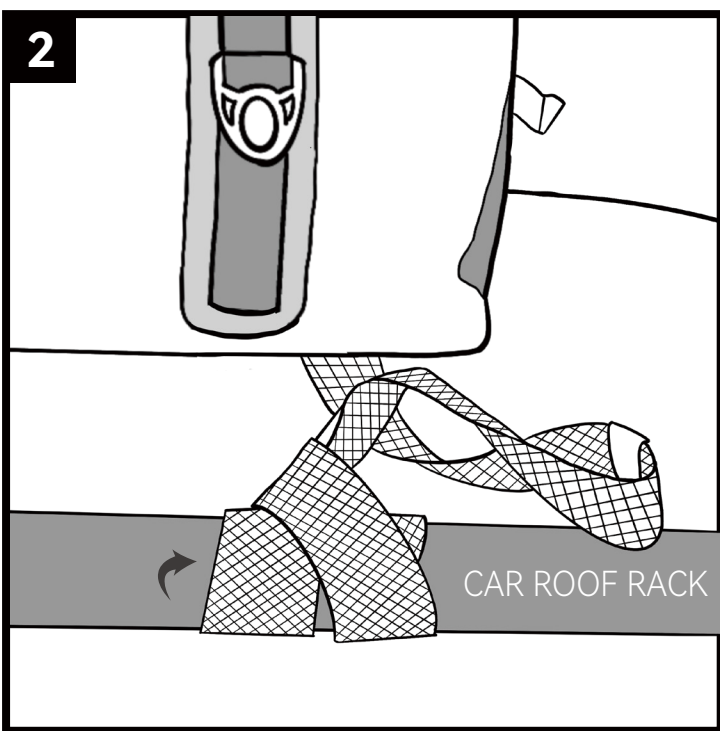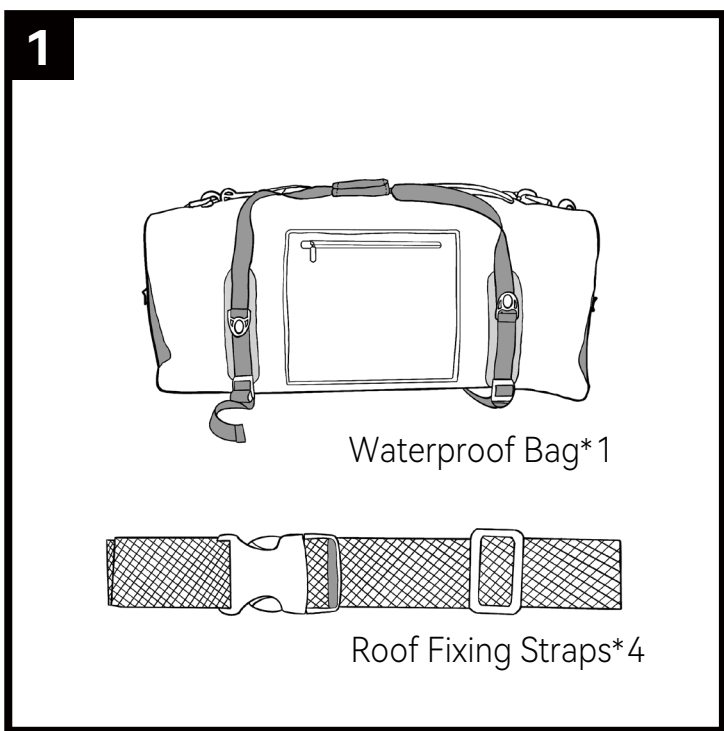

⚠ WARNING ⚠

Small parts (if applicable, e.g., buckle accessories) pose a choking risk to children.
Keep the product and its components out of reach of children under 3 years old.

Usage Instructions

一、Roof Loading

- 1.Capacity limit: Do not exceed the standard capacity (110L). Overloading may cause the bag to deform.
- 2.Distribute weight reasonably: Place heavy items at the bottom, light/soft items on the top, and ensure left-right balance.
- 3.Sealing zipper: Tighten the zipper to the end to ensure it is fully closed, preventing water from entering the bag due to loose closure. The zipper is a high-quality airtight zipper. After tightening test the airtightness by gently pressing the bag. If no air escapes from the bag, it indicates the zipper is reliably sealed.

Daily Multi-Functional Usage

In addition to the roof usage, it can be carried on both shoulders by installing the included shoulder straps, or carried by the handles at both ends of the bag.

WARNING: RISK OF ACCIDENT

Overloading or incorrect installation may cause luggage to fall off during driving, creating a severe risk of traffic accidents. FAILURE TO FOLLOW INSTRUCTIONS MAY RESULT IN SERIOUS INJURY OR DEATH.

Do not exceed the standard capacity (110L) or place heavy items unevenly.

Ensure all fixing straps are tightly secured and the secondary safety lock is engaged (see Diagram 1).

Never climb onto the roof or adjust the package while the vehicle is in motion.

Environmental Response

- 1.Rainy weather: It is recommended to cover with a waterproof cover or add a waterproof protective layer inside the bag during heavy rain.
- 2.Windy weather: Add extra reinforcing straps or suspend use in strong winds.

Maintenance and Care

- Cleaning: Wipe surface stains with a damp cloth. For stubborn stains, use a neutral detergent. Do not machine wash or bleach.
- Storage: Fold and store in a cool place after completely drying, avoiding heavy pressure.
- It is recommended to remove and store it when not in use to avoid aging caused by long-term exposure to the sun.

Other Tips

- 1.Reduce speed on complex road conditions such as sharp turns and strong winds; roof loading will extend braking distance. Avoid sudden braking and predict road conditions in advance.
- 2.Check the fixing status of the waterproof bag before use, and regularly check the tightness of the straps and the stability of the package when parking.

After-Sales Service

- Warranty: 12 months from purchase date for defects in materials or workmanship (excluding damage caused by misuse, abuse, or improper installation).
- For after-sales service, please contact customer service and provide the purchase certificate.

Prohibitions

- Do not use the waterproof bag as a life-saving device.
- Do not climb onto the roof or adjust the package while driving.