

SST AND SSM

	Page
SST (SPECIAL SERVICE TOOLS)	C-2
SSM (SPECIAL SERVICE MATERIALS)	C-20


 
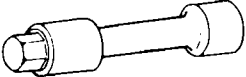



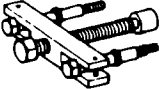
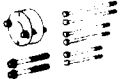
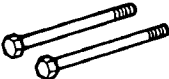

SST (SPECIAL SERVICE TOOLS)

NOTE: Classification

A = SST required for vehicle inspections and minor repairs and multipurpose SST.

B = SST required for major repairs involving disassembly of components.


C = SST required for rather special, less frequent work not of classifiable as either A or B.

Section	Classification	Part Name	EM	TC	FI	CO	LU	ST	CH	CL	MT	AT	PR	FA	RA	BR	SR	BE	BO
	09032-00100	(Oil Pan Seal) Cutter	A				●												
	09043-38100	(Hexagon 10 mm) Wrench	A								●	●							
	09043-88010	(Hexagon 8 mm Wrench)	A											●					
	09201-41020	(Valve Stem Oil) Seal Replacer	B					●*1											
	09201-60011	(Valve Guide Bushing) Remover & Replacer	A								●*2								
	09213-14010	(Crankshaft Pulley) Holding Tool	A	●*3															
	09213-31021	(Crankshaft Pulley) Puller	A	●*3															
	09213-54015	(Crankshaft Pulley) Holding Tool	A	●															
	(09214-00030)	(Bolt)		●*4															
	09213-60017	(Crankshaft Pulley) & Gear Puller Set	A	●															

Remarks:

- *1 Starter front bearing for 1.4 kW type
- *2 Speedometer driven gear oil seal
- *3 3S-GE and 3S-GTE
- *4 3S-FE only

 
 


 



 


 
SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section	Classification	Part Name	Part No.	Illustration	EM	TC	FI	CO	LU	ST	CH	CL	MT	AT	PR	FA	RA	BR	SR	BE	BO
						*1															
			(09213-00020)	(Body with Bolt)		●															
			(09213-00030)	(Handle)		*1															
			(09213-00050)	(Bolt Set)		*1															
			09221-25024	(Piston Pin Remover & Replacer)	B	●															
			(09221-00020)	(Body)		*1															
			(09221-00030)	(Spring)		*1															
			(09221-00060)	(Bushing "C")		*1															
			(09221-00160)	(Guide "I")		*1															
			(09221-00170)	(Guide "J")		*1															
			09222-30010	(Connecting Rod Bushing Remover & Replacer)	B	*2															
			09223-15010	(Crankshaft Rear Oil Seal Replacer)	B								*3			*4					
			09223-46011	(Crankshaft Front Oil Seal Replacer)	B	*5															

Remarks:

- *1 3S-FE only
- *2 3S-GE and 3S-GTE
- *3 Transmission case oil seal
- *4 Camshaft oil seal
- *5 Camshaft oil seal for 3S-FE

 
 
 

 
 




 
 
SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section	Classification	Part Name	Part No.	Illustration	EM	TC	FI	CO	LU	ST	CH	CL	MT	AT	PR	FA	RA	BR	SR	BE	BO
					09223-50010	(Crankshaft Front Oil Seal Replacer)	B	*1													
					09223-63010	(Crankshaft Rear Oil Seal Replacer)	B														
					09226-10010	(Crankshaft Front & Rear Bearing Replacer)	B	*2													
					09228-06500	(Oil Filter Wrench)	A		*3												
					09228-07500	(Oil Filter Wrench)	A		*4												
					09230-00010	(Radiator Service Tool Set)	B														
					09236-00101	(Water Pump Overhaul Tool Set)	B														
					(09237-00010)	(Water Pump Bearing Remover & Replacer)															*5
					09240-00020	(Wire Gauge Set)	A														
					09248-55010	(Valve Clearance Adjusting Tool Set)	A														
					09268-41045	(Injection Measuring Tool Set)	B														
					(09268-41060)	(No. 3 Union)															

Remarks:

- *1 Camshaft oil seal for 3S-GE and 3S-GTE
- *2 Crankshaft front oil seal
- *3 3S-FE and 3S-GE
- *4 3S-GTE only
- *5 Column main shaft bearing
- *6 3S-GE and 3S-GTE

 
 
 
 

 
 
 


 
 
SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section	Classification	Part Name	EM	TC	FI	CO	LU	ST	CH	CL	MT	AT	PR	FA	RA	BR	SR	BE	BO
Illustration	Part No.																		
	(09268-41080)	(No. 6 Union)			●														
	(09268-41090)	(No. 7 Union)			●*1														
	(90405-09015)	(No. 1 Union)			●														
	09268-45012	(EFI Fuel Pressure Gauge)	A		●														
	09278-54012	(Drive Shaft Holding Tool)	A	●*2															
	09285-76010	(Injection Pump Camshaft Bearing Cone Replacer)	C					●*3	●*4										
	09286-46011	(Injection Pump Spline Shaft Puller)	C					●*5	●*6										
	09301-17010	(Clutch Guide Tool)	A							●									
	09301-32010	(Clutch Guide Tool)	A							●									
	09307-12010	(Extension Housing Bushing Replacer)	B								●*7								
	09308-00010	(Oil Seal Puller)	A								●			●	●				
	09308-10010	(Oil Seal Puller)	A												●				

Remarks:

- *1 3S-FE only
- *2 Camshaft timing pulley for 3S-FE
- *3 Starter front bearing for 1.0 kW type
- *4 Rotor rear bearing
- *5 Starter bearing
- *6 Rectifier end frame
- *7 Output shaft front bearing












 
SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section	Classification	Part Name	Part No.	Illustration	EM	TC	FI	CO	LU	ST	CH	CL	MT	AT	PR	FA	RA	BR	SR	BE	BO	
													●									
		(5th Driven Gear Replacer)	09309-32050		B																	
														●				● ^{*1}				
		(Transmission Rear Bearing Replacer)	09309-36010		B																	
														●								
		(Transaxle Gear Remover & Replacer)	09310-17010		B																	
														●								
		(Plate)	(09310-07010)																			
														●								
		(Center Bolt)	(09310-07020)																			
														●								
		(Set Bolt)	(09310-07030)																			
														●								
		(Claw)	(09310-07040)																			
													●									
		(Adaptor)	(09310-07050)																			
														●			●					
		(Countershaft Bearing Replacer)	09310-35010		B																	
														●								
		(Detent Ball Plug Socket)	09313-30021		A																	
														●								
		(Transfer Bearing Replacer)	09316-20011		B																	
														●			●					
		(Transmission & Transfer Bearing Replacer)	09316-60010		B																	

Remark:

*1 Rear axle hub


 
 





 



SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section	Classification	Part Name	EM	TC	FI	CO	LU	ST	CH	CL	MT	AT	PR	FA	RA	BR	SR	BE	BO
Part No.	Illustration																		
(09316-00010)		(Replacer Pipe)									●			●					
(09316-00020)		(Replacer "A")									●								
(09316-00040)		(Replacer "C")									●								
(09316-00050)		(Replacer "D")									●								
(09316-00060)		(Replacer "E")									●								
(09316-00070)		(Replacer "F")									●								
09318-20010		(Transfer Side Bearing Adjusting Nut Wrench)	B								●								
09325-20010		(Transmission Oil Plug)	A								● ^{*1}	●	●				●		
09326-20011		(Output Shaft Bearing Lock Nut Wrench)	B								●								
09330-00021		(Companion Flange Holding Tool)	A	● ^{*2}								● ^{*3}	●		●				
09332-25010		(Universal Joint Bearing Remover & Replacer)	B										●						
09333-00013		(Clutch Diaphragm Spring Aligner)	B							●									

Remarks:

- *1 Extension housing oil seal
- *2 Crankshaft pulley
- *3 Counter driven gear

SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section	Classification	Part Name	EM	TC	FI	CO	LU	ST	CH	CL	MT	AT	PR	FA	RA	BR	SR	BE	BO
	09350-32014	(TOYOTA Automatic Transmission Tool Set)	B									●			●				
	(09308-10010)	(Oil Seal Puller)										●							
	(09351-32010)	(One-way Clutch Test Tool)										●							
	(09351-32020)	(Stator Stopper)										●							
	(09351-32032)	(Counter Driven Gear Holding Tool)										●							
	(09351-32040)	(No. 1 Piston Spring Compressor)										●							
	(09351-32050)	(Snap Ring Expander)										●							
	(09351-32061)	(Oil Pump Puller)										●	*1						
	(09351-32070)	(No. 2 Piston Spring Compressor)										●							
	(09351-32080)	(Lock Nut Wrench)										●							
	(09351-32090)	(Oil Seal Remover & Replacer)										●	*2						
	(09351-32100)	(Drive Pinion Bearing Replacer)										●							

Remarks:

- *1 Counter driven gear
- *2 Differential side bearing and counter driven gear bearing

 

 
 





 


SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section	Classification	Part Name	Part No.	Illustration	EM	TC	FI	CO	LU	ST	CH	CL	MT	AT	PR	FA	RA	BR	SR	BE	BO
			(09351-32111)	(Side Bearing Race) Replacer										*1							
			(09351-32120)	(Overdrive Bearing) Replacer										*2							
			(09351-32130)	(Handle)																	
			(09351-32140)	(Oil Seal Replacer)																	
			(09351-32150)	(Oil Seal Replacer)																	
			(09351-32190)	(Measure Terminal)																	
			(09351-32200)	(No. 3 Piston Spring) Compressor																	
			09502-10012	(Differential Side) Bearing Puller	B																
			09504-22011	(Differential Side) Washer Remover & Replacer	B																
			09506-30012	(Differential Drive) Pinion Bearing Cone Replacer	B																
			09506-35010	(Differential Drive) Pinion Rear Bearing Replacer	B																
			09520-32012	(Differential Side) Gear Shaft Puller	A																

Remarks:

- *1 Drive pinion bearing race
- *2 Differential side bearing

 


 






 

SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section	Classification	Part Name	Part No.	Illustration	EM	TC	FI	CO	LU	ST	CH	CL	MT	AT	PR	FA	RA	BR	SR	BE	BO
					09520-32060	(Drive Shaft Remover & Replacer)	A										●				
					09527-20011	(Rear Axle Shaft Bearing Remover)	B										●		●	*1	
					09527-21011	(Rear Axle Shaft Bearing Remover)	B								●						
					09550-10012	(Replacer Set "B")	B						●				●				
					(09252-10010)	(No. 1 Replacer Handle)							●								
					(09552-10010)	(No. 2 Replacer Handle)												●			
					(09554-10010)	(Differential Drive Pinion Oil Seal Replacer)												●			
					(09555-10010)	(Differential Drive Pinion Rear Bearing Replacer)							●								
					(09558-10010)	(Rear Axle Shaft Oil Seal Replacer)												●			
					09550-22011	(Rear Axle Bearing & Differential Tool Set)	B										●				
					(09550-00020)	(Handle)												●			
					(09550-00031)	(Replacer)												●			

Remarks:

- *1 Column main shaft bearing
- *2 Rear axle hub bearing

SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section	Classification	Part Name	EM	TC	FI	CO	LU	ST	CH	CL	MT	AT	PR	FA	RA	BR	SR	BE	BO
Part No.	Illustration																		
09554-22010		(Differential Oil Seal Replacer)	A												●				
09556-22010		(Drive Pinion Front Bearing Remover)	B												●				
09557-22022		(Companion Flange Remover & Replacer)	A										●		●				
09564-32011		(Differential Preload Adaptor)	B								●	●							
09605-60010		(Steering Knuckle Bearing Cup Replacer)	B											●					
09608-12010		(Front Hub & Drive Pinion Bearing Replacer Set)	B								●								
(09608-00020)		(Remover & Replacer Handle)									●								
(09608-00060)		(Drive Pinion Front Bearing Cup Replacer)									●								
(09608-00070)		(Drive Pinion Rear Bearing Cone Replacer)									●								
(09608-00080)		(Differential Side Bearing Cone Replacer)									●								
09608-16041		(Front Hub Bearing Adjusting Tool)	B											●	●				
(09608-02020)		(Bolt & Nut)												●	●				

Remarks:

*1 Front driven gear and radial ball bearing

*2 Hub bearing



 





 


 
SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section	Classification	Part Name	Part No.	Illustration	EM	TC	FI	CO	LU	ST	CH	CL	MT	AT	PR	FA	RA	BR	SR	BE	BO
			(09608-02040)	(Retainer)												*1	*1				
			09608-20012	(Front Hub & Drive Pinion Bearing Tool Set)	B						●		●			●					
			(09608-00030)	(Replacer)							*2		*3								
			(09608-00060)	(Replacer)									*3								
			(09608-00080)	(Replacer)									*3								
			(09608-03020)	(Handle)									*3								
			(09608-03060)	(Replacer)									*3								
			(09608-03070)	(Replacer)									*3								
			09608-30012	(Front Hub & Drive Pinion Bearing Tool Set)	B													●			
			(09608-00060)	(Drive Pinion Front Bearing Cup Replacer)															●		
			(09608-04020)	(Handle)																●	
			(09608-04100)	(Drive Pinion Front Bearing Cup Replacer)																●	

Remarks:

- *1 Hub bearing
- *2 Rotor front bearing
- *3 Input shaft front oil seal, LH side oil seal, LH side bearing outer race, RH side bearing outer race, control shaft cover oil seal, fourth gear and radial ball bearing







 


 


SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section	Classification	Part Name	Part No.	Illustration	EM	TC	FI	CO	LU	ST	CH	CL	MT	AT	PR	FA	RA	BR	SR	BE	BO
		(Drive Pinion Rear Bearing Cup Replacer)	(09608-04110)														*1				
		(Steering Knuckle Oil Seal Replacer)	09608-32010		B												*2				
		(Axle Hub & Drive Pinion Bearing Tool Set)	09608-35014		B								●			●					
		(Handle)	(09608-06020)										●			●					
		(Drive Pinion Rear Bearing Cup Replacer)	(09608-06180)										●			●					
		(Rear Axle Bearing Replacer)	(09608-06210)										●								
		(Steering Wheel Puller)	09609-20011		A														●		
		(Tie Rod End Puller)	09611-22012		A											●			●		
		(Rack & Pinion Steering Rack Housing Stand)	09612-00012		B														●		
		(Steering Gear Housing Overhaul Tool Set)	09612-10093		B														●		
		(Ball Joint Lock Nut Wrench)	(09628-10020)																●	*3	
		(Tilt Handle Bearing Replacer)	09612-22011		B								●	*4					●	*5	

Remarks:

- *1 Rear axle hub inner oil seal
- *2 Rear axle hub
- *3 Rack end
- *4 No. 3 hub sleeve assembly
- *5 Cylinder end stopper



 







 
 
SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section	Classification	Part Name	EM	TC	FI	CO	LU	ST	CH	CL	MT	AT	PR	FA	RA	BR	SR	BE	BO
	09612-24013	(Steering Gear Housing Overhaul Tool Set)	B														●		
	(09612-10022)	(Hexagon Wrench)															●		
	(09612-10061)	(Steering Pinion Bearing Replacer)															●	*1	
	(09617-24010)	(Steering Rack Wrench)															●		
	(09617-24020)	(Steering Pinion Bearing Adjusting Screw Lock Nut Wrench)															●	*2	
	09612-65014	(Steering Worm Bearing Puller)	B								●								
	09616-00010	(Steering Worm Bearing Adjusting Socket)	B														●		
	09616-30011	(Steering Worm Bearing Adjusting Screw Wrench)	B	●															
	09616-30020	(Steering Worm Bearing Adjusting Screw Wrench)	B														●	*5	
	09620-30010	(Steering Gear Box Replacer Set)	B				●				●						●		
	(09624-30010)	(Steering Sector Shaft Oil Seal Replacer)															●	*6	
	(09625-30010)	(Steering Main Shaft Bearing Replacer)									●								

Remarks:

- *1 Cylinder end stopper
- *2 Rack guide spring cap lock nut and bearing guide lock nut
- *3 Input shaft front bearing
- *4 Oil pump pulley
- *5 PS pump pulley
- *6 Rack housing oil seal (3S-GTE only)


 


 
 
 
 
 

 

SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section	Classification	Part Name	Part No.	Illustration	EM	TC	FI	CO	LU	ST	CH	CL	MT	AT	PR	FA	RA	BR	SR	BE	BO
		(Steering Sector Shaft Bushing Replacer)	(09627-30010)						*1				●								
		(Handle)	(09631-00020)						*1				●						*2	●	
		(Ball Joint Puller)	09628-62011		A									●		●					
		(Steering Rack Oil Seal Tool Set)	09630-24013		B															●	
		(Valve Cup Oil Seal Remover)	(09620-24010)																	*3	●
		(Valve Cup Oil Seal Replacer)	(09620-24020)																	*3	●
		(Valve Cup Bearing Replacer)	(09620-24030)																	*4	●
		(Seal Ring Guide)	(09620-24040)																		●
		(Seal Ring Tool)	(09620-24050)																		●
		(Oil Seal Replacer)	(09631-24070)																		●
		(Handle)	09631-12020		B											●				●	
		(Steering Rack Oil Seal Test Tool)	09631-12070		B																●

Remarks:

- *1 Oil pump oil seal
- *2 3S-GTE only
- *3 Control valve housing oil seal
- *4 Control valve shaft bearing

 









 
 
SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section	Classification	Part Name	Part No.	Illustration	EM	TC	FI	CO	LU	ST	CH	CL	MT	AT	PR	FA	RA	BR	SR	BE	BO	
					09631-20031	(Oil Seal "B" Remover)	B												●			
					09631-20051	(Steering Rack "C" Cover)	B												*1	●		
					09631-20070	(Seal Ring Guide)	B												*1	●		
					09631-20081	(Seal Ring Tool)	B												*1	●		
					09631-20102	(Steering Rack Cover "H")	B													●		
					09631-22020	(Power Steering Hose Nut 14x17 mm Wrench Set)	A													●		
					09631-22070	(Oil Seal Replacer)	B													●		
					09631-32010	(Oil Seal Replacer)	B													*1	●	
					09633-00020	(Power Steering Hose Nut Wrench)	A													●		
					09636-20010	(Upper Ball Joint Dust Cover Replacer)	B														*3	●
					09650-17011	(Hub Bolt Remover)	A										●	●				
					09703-30010	(Brake Shoe Return Spring Tool)	A												●			

Remarks:

- *1 3S-GTE only
- *2 Fuel line flare nut
- *3 Rear axle shaft

SST (SPECIAL SERVICE TOOLS) (Cont'd)






 


 


 
Section	Classification	Part Name	Part No.	Illustration	EM	TC	FI	CO	LU	ST	CH	CL	MT	AT	PR	FA	RA	BR	SR	BE	BO
			09710-14012	 (Rear Suspension Bushing Tool Set)	B											●					
			(09710-00050)	 (Handle)												●					
			09710-22020	 (Front Suspension Bushing Tool Set)	B												●				
			(09710-01030)	 (Upper Arm Bushing Replacer)													*1				
			09717-20010	 (Brake Shoe Return Spring Remover)	A													●			
			09718-20010	 (Brake Shoe Return Spring Replacer)	A													●			
			09720-00012	 (Shock Absorber Overhaul Tool Set)	B											●					
			(09721-00071)	 (Front Shock Absorber Ring Nut Wrench)												●					
			09726-10010	 (Lower Suspension Arm Bushing Remover & Replacer)	B											●					
			(09726-00030)	 (Spacer)												*2					
			09727-22032	 (Coil Spring Compressor)	B											●	●				
			09727-30020	 (Coil Spring Compressor)	B											●	●				

Remarks:

*1 Differential

*2 Front drive shaft

 
 
 
 


 
 
SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section	Classification	Part Name	Part No.	Illustration	EM	TC	FI	CO	LU	ST	CH	CL	MT	AT	PR	FA	RA	BR	SR	BE	BO
					09729-22031	(Front Spring Upper Seat Holder)	B									●					
					09737-00010	(Brake Booster Push Rod Gauge)	A											●			
					09751-36011	(Brake Tube Union Nut 10 x 12 mm Wrench)	A					●					●	●			
					09806-30010	(Windshield Moulding Remover)	C														●
					09812-00010	(Door Hinge Set Bolt Wrench)	C														●
					09820-00021	(Alternator Rear Bearing Puller)	B					●									
					09820-63010	(Alternator Pulley Set Nut Wrench Set)	B					●									
					09842-30050	(Wiring "A" EFI Inspection)	B		●												
					09842-30060	(Wiring "E" EFI Inspection)	B		●*1												
					09842-30070	(Wiring "F" EFI Inspection)	B		●*2												
					09910-00015	(Puller Set)	B						●								
					09921-00010	(Spring Tension Tool)	A						●*3								

Remarks:

- *1 3S-GTE only
- *2 3S-FE and 3S-GTE
- *3 Speedometer driven gear oil seal

SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section	Classification	Part Name	Part No.	Illustration	EM	TC	FI	CO	LU	ST	CH	CL	MT	AT	PR	FA	RA	BR	SR	BE	BO
															●						
													●	●		●	●				
													●		●	●	●				
																		●			
																		●			
																		●			
														●							
							●														●

Remark:

*1 3S-GTE only

NOTE: For reference to SSTs for the Air Conditioning System see page AC-16.

SSM (SPECIAL SERVICE MATERIALS)

Part Name	Part No.	Sec.	Use etc.
Seal packing or equivalent	08826-00080	EM	Cylinder head, Camshaft bearing cap
		LU	Oil pan
Seal packing 1281, Three bond 1281 or equivalent	08826-00090	MT	(S53) Transmission case Control shaft cover Transmission case cover (E50F2) Transfer case Transfer inspection hole cover Transfer right case
		RA	Differential carrier
Seal packing 1121, Three bond 1121 or equivalent	08826-00801	PR	Universal joint cover
		FA	The contact surface of the outer race and cover of the drive shaft
Adhesive 1324, Three bond 1324 or equivalent	08833-00070	EM	Flywheel or drive plate mount bolt
		EC	EVAP BVSV EGR BVSV for 3S-FE and 3S-GE
		CL	Release fork support
		MT	Rear bearing retainer set bolt
		AT	Differential LH bearing retainer set bolt Differential carrier cover set bolt
Adhesive 1344, Three bond 1344, Loctite 242 or equivalent	08833-00080	LU	Oil pressure sender gauge
		MT	(S53) Straight screw plug for reverse restrict pin Straight screw plug for shift fork shaft Side bearing retainer set bolt No. 2 lock ball assembly Transmission case cover set bolt (E50F2) Straight screw plug Transmission case cover set bolt Transmission case set bolt Transaxle case set bolt Transfer case set bolt Transfer right case set bolt Shift and select lever shaft assembly set bolt
		SR	Bearing guide nut Bearing guide lock nut Rack guide spring cap Rack guide spring cap lock nut

SSM (SPECIAL SERVICE MATERIALS) (Cont'd)

Part Name	Part No.	Sec.	Use etc.
Dupont paste No. 4817	—	BE	Rear window defogger wire
Super adhesive	08850-00051	BO	Outside moulding
Windshield glass adhesive set No. 15	08850-00070	BO	Windshield glass (0 – 15°C or 32 – 59°F) Rear window glass Back door window glass
Windshield glass adhesive set No. 35	08850-00080	BO	Windshield glass (15 – 35°C or 59 – 95°F) Rear window glass Back door window glass
Windshield glass adhesive set No. 45	08850-00090	BO	Windshield glass (35 – 45°C or 95 – 113°F) Rear Window Glass Back door window glass
Dam kit	04562-30040	BO	Windshield glass Rear window glass Back door window glass
Butyl tape set	08850-00065	BO	Quarter window glass
Three cement black	08833-00030	BO	Windshield glass

NOTE: For reference to SSMs for the Air Conditioning System see page AC-16.