



-JAA\*\*\*\*\* ERROR CODES-

E0	indoor (EEPROM) error		
E1	Indoor and outdoor unit communication malfunction		
E3	Indoor fan speed malfunction		
E4	Indoor room temperature sensor error		
E5	Indoor coil temperature sensor error		
EC	Refrigerant leak detection system malfunction		
F0	Overload Protection		
F1	Outdoor Temperature sensor error		
F2	Outdoor condenser pipe sensor error		
F3	Discharge air temperer sensor error		
F4	Outdoor EEPROM error		
F5	Outdoor fan speed (DC fan motor) malfunction		
F6	T2b sensor error		
FF	Indoor pipe and air sensor error		
P0	Inverter module IMP protection		
P1	High/low voltage protection		
P2	Compressor top overheating protection		
P3	Outdoor low Temperature protection		
P4	Compressor drive Error		
P5	Mode conflict		
P6	Compressor low-pressure rotation		
P7	Outdoor IGBT sensor error		