


CODE RESET INSTRUCTIONS:

- 1. Please read all instructions thoroughly before resetting combination code
- 2. Ensure combination lock is in the locked position (numbers horizontal)
- 3. Your 3 dial combination cam lock is factory preset to '000'
- 4. Using the 'reset tool' provided, press and firmly hold down the reset button until step 5 is complete
- 5. While holding down the reset button, scroll the 3 dials to select your desired code
- 6. Release the reset button and your new code is now set
- 7. Take note or a photo of your new code for future reference

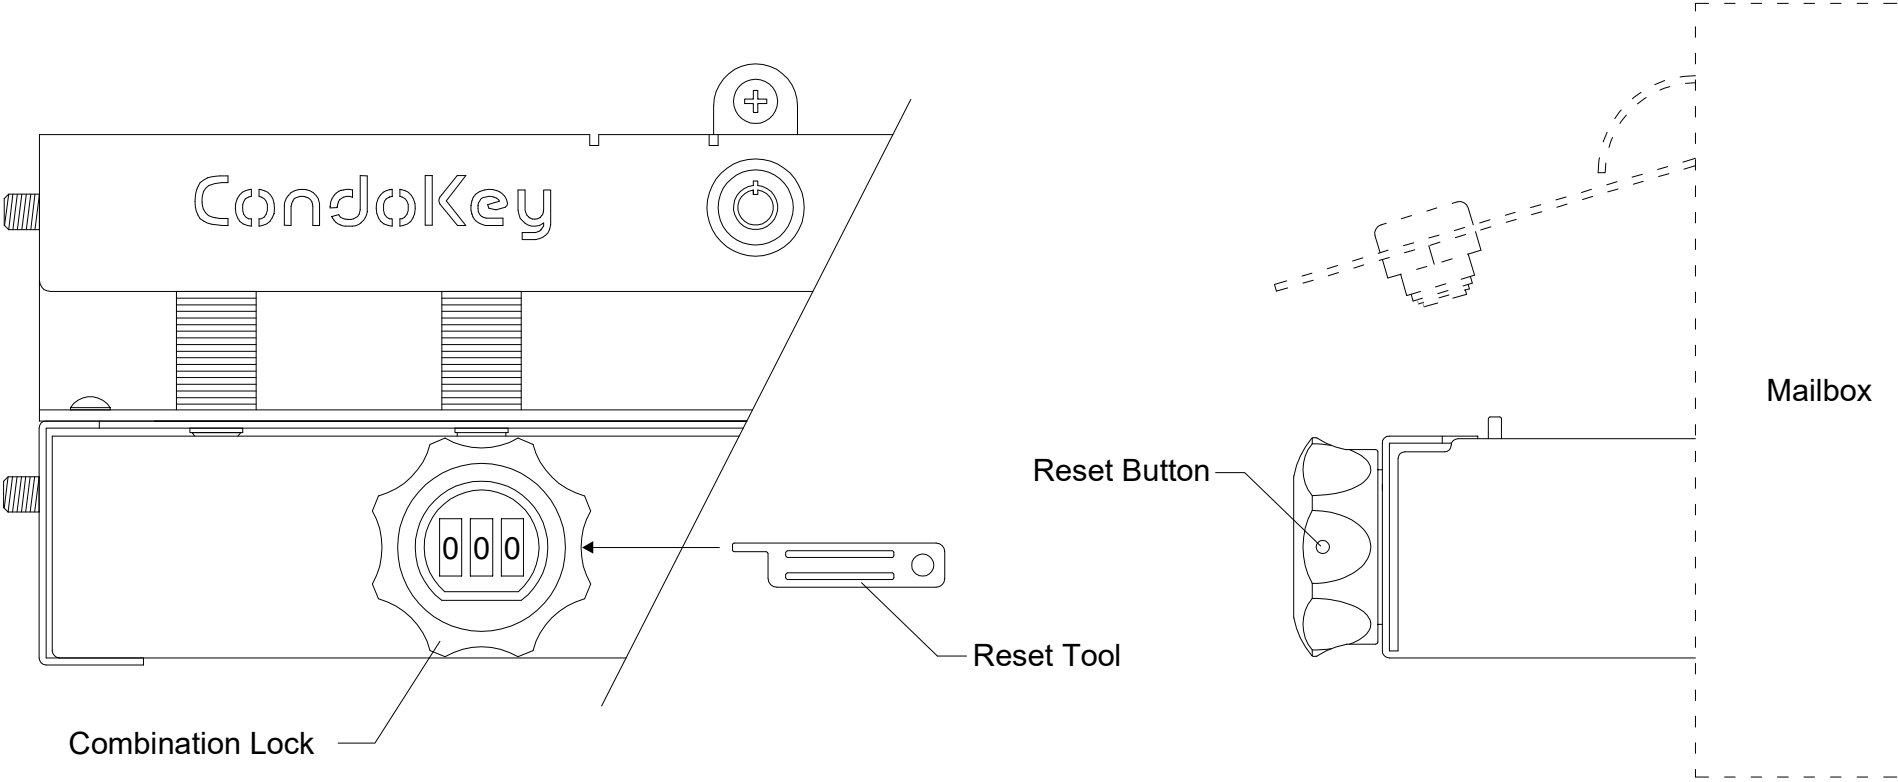

				<div>CondoKey[®]</div>	T: +61 420 832 846	REV 0
					E: sales@condokey.com.au	
0	COMBINATION LOCK - CODE RESET INSTRUCTIONS	MEP	07.12.24		A:	
REV	DESCRIPTION	BY	DATE		W: www.condokey.com.au	