





User Manual


Ver. 1.0



FOR HIRE/STOPPED/HIRED

A) Taxi in "FOR HIRE"


When the Taxi is parked or it moves without any passenger on board, the taxi driver selects the **FOR HIRE** position by **OP**. The clock is displayed and the keys will have the following functions:

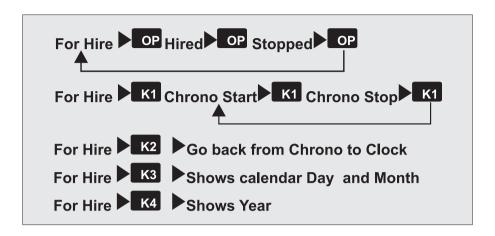

Statistical Reading	(K1+K2)
Time and Date setting	(K1+K3)
Auto-test report showing	(K2+K3)
Last service showing	(K3+K4)
Display test and Autocheck	(K1+K4)

B) Taxi in "HIRED"

Once the taxi starts the trip, the taxi driver selects the **HIRED** position by **OP**. The "Taxi" roof sign will turn off and the taximeter starts the fare calculation by distance or time. The "**K**" keys will have the following functions:

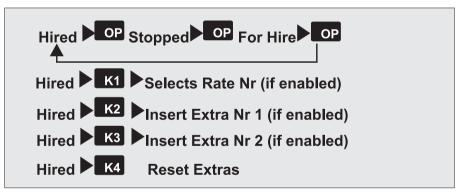

C) Taxi in "STOPPED"

At the end of the trip, the taxi driver has to select the Stopped position by **OP**.

The waiting time counting is thus blocked.





Statistical Memory

The Taximeter has, inside, 2 memory blocks. Each one is divided in 45 memory locations. Each location is enabled to record and keep the taximeter's activity. **Block 1** is the Partial Block since the activity information contained in its 45 locations can be read, printed and erased whenever desired (See specific procedure). This "Partial Function" is very useful and may be utilized for working shift data's control and analisys. **Block 2** is the Total or Cumulative Block since the activity information contained in its 45 locations can only be read and printed.

You can handle memory block content by pressing **K1** and **K2** at the same time.

The right display will show: in the left digit, the block number being read, in the right digit, the location number.

Press **K1** or **K2** buttons to decrease or increase respectively memory location's Nr. (memory location Nr. is indicated on right side of right display)


Press **K3** to switch from **Block 1** to B**lock 2** and viceversa. After reading 45th memory location, the Taximeter will go back to **FOR HIRE** mode.


Press OP button to go back to **FOR HIRE** mode and to end the Reading Procedure

*TIP -Pressing **K4** in the 19th memory location, the **Block 1** will be completely erased.





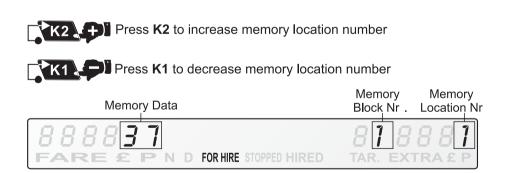

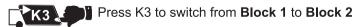



Statistical Memory

Memory Location List

- 1) Trips total number
- 2) Taximeter units total number
- 3) Total Kilometers
- 4) Total Kilometers in FOR HIRE
- 5) Total Kilometers in HIRED
- 6) Km in for FOR HIRE with passenger on board
- 7) Km in Over speed
- 8) Collected Total (Fare+Extras+Tax)
- 9) Collected by Credit Card Total
- 10) Fare Total Amount (excluded Extras+Tax)
- 11) Extras Total Amount
- 12) Tax Total Amount
- 13) Run time in FOR HIRE
- 14) Run time in HIRED and STOPPED
- 15) Waiting time in HIRED
- 16) Meter on total time
- 17) Total Tariff 1 collection
- 18) Total Tariff 2 collection
- 19) Total Tariff 3 collection
- 20) Total Tariff 4 collection
- 21) Total Tariff 5 collection
- 22) Total Tariff 6 collection
- 23) Total collections from 7th to 64th
- 24) Total tariff 1 units
- 25) Total tariff 2 units
- 26) Total tariff 3 units
- 27) Total tariff 4 units
- 28) Total tariff 5 units
- 29) Total tariff 6 units
- 30) Total units from 7th to 64th tariff
- 31) Total Kilometers in tariff 1
- 32) Total Kilometers in tariff 2
- 33) Total Kilometers in tariff 3
- 34) Total Kilometers in tariff 4
- 35) Total Kilometers in tariff 5
- 36) Total Kilometers in tariff 6
- 37) Total Km from 7th to 64th
- 38) Not used
- 39) Not used
- 40) Not used
- 41) Not used
- 42) Not used
- 43) Not used44) Not used
- 45) Tips income



WARRANTY TERMS AND CONDITIONS

Digitax warrants this product to be free from defects in materials and workmanship for a period of twelve calendar months from the date of installation.

To obtain the benefits of this warranty, the registration card must be completed and returned to the factory or your national importer within 14 days of purchase.

In case the taximeter needs to be repaired, it must be sent, free of transportation cost, back to the manufacturer or to the service center as indicated by the local representative.

This warranty is void if the equipment is modified or misused in any way or serviced by unauthorized persons.

No responsibility can be accepted for any or damage caused in transit, except for repair or substitution of defective parts.

No other liability will be recognized by Digitax for any kind of damage or loss to person or goods.






Serial Nr
Date of installation
Name
Address
Tel. No



ELECTRICAL CONNECTIONS

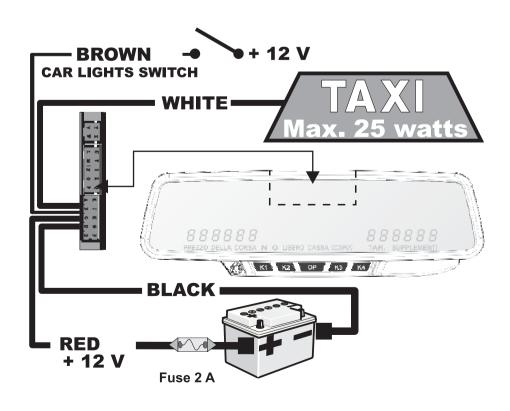



HOW TO: Set Time and Date

In order to manually set the clock, please check that you are in **FOR HIRE** position (by **OP**) and then press **K1** and **K3** at the same time.

The sign "time" appears on the left display for a few seconds and then **FOR HIRE** and **STOPPED** will flash at the same time. In the two left digits of the left display, the day is displayed, in the right ones the month. On the right display, in the left digit, the hours are displayed and in the right ones the minutes. Please find here below the functions of the keys in this programming menu:

PROGRAMMING START: PRESS K1 + K3 AT THE SAME TIME

K	1	Sets	the	day	nııı	mber
		ocio	u = v	uav	Hui	IIDCI

K2 Sets the month number

K3 Sets the hour

K4 Sets the minutes

OP By pushing it, you move to the year set up

When you select the year to change by **OP**, **K** keys have the following functions:

K1 Decreases the year of one unit

K2 Increases the year of one unit

K3 Sets the taximeter manufacturing year

PROGRAMMING END AND CONFIRMATION:

PRESS OP

HOW TO: Set Time and Date












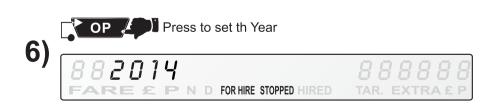

- 7) Press K2 to incremet one unit
 Press K1 to decrement one unit
- 8) Press to end programming and confirm data