

Quick User Guide

Model MCN-AS1020

Before using this machine, read the operator's manual in its entirety. Failure to follow operating instructions could result in death or serious injury. Full operation manual available at www.moe-cleaner.com




Step 1

Insert Handle



Step 2

Insert Clevis Pin

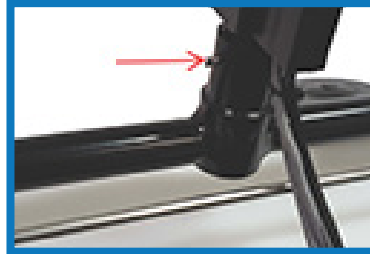

Connect Electrical Connectors from Handle to Cleaning Head

Step 3

Insert Locking Taper Pin




Step 4

Connect 4 Pin (Female) into 4 Pin Receiver. Turn threads to lock.




Step 5

Connect 3 Pin same as 4 Pin Cable

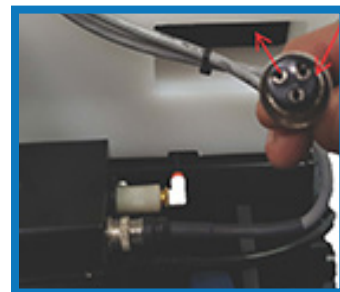

Step 6

Connect Power Cable from Pump to Cleaning Head

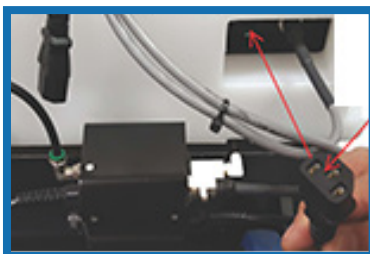

Step 7

Connect Power Cable from Handle to Pump



Step 8

Add 2 gallons clean cold water and approved Encapsulator Cleaning Solution



Step 9

Connect Power Cord to Electrical Outlets

- A) Check Power is ON
- B) Turn Cable Lock to locked position



Step 10

- A) Check tank water level before use
- B) Do not activate Spray Lever (STEP 13) without water in Tank
- C) Check water pressure to Spray Nozzle by holding Spray Lever up
- D) DO NOT OPERATE MOE-CLEANER if water pump is making a 'vibrating noise'
- E) Clean and flush Water Filter Screen (STEP 14) to correct Water Pump noise, then refill tank with water



Step 11

INSTRUCTIONS FOR CLEANING CARPET
 Vacuum Carpet Before Using Moe-Cleaner

- A) Vacuum carpet to remove all debris, loose hair, twine, rope, and loose soils to avoid damage to Cleaning Head
- B) Refer to STEP 14 to clean Brushes properly



Step 12

INSTRUCTIONS FOR CLEANING CARPET

Pre-Spray Heavy Soils and Traffic Patterns

Use Pre-Sprayer Commercial Pump and Moe Stick Nylon Brush (pictured here)

Add 2 gallons of cold water and approved Pre-Spray Cleaners solution to Pump Sprayer.

Spray carpets as needed and agitate to loosen soils while wet. Do not allow Pre-Spray to dry on carpets before cleaning with Moe-Cleaner. High-quality Pre-Spray Cleaner Solution will promote carpet fibers to 'soften and release' soils, diminishing stains and traffic patterns if used properly with Moe-Cleaner.



Step 13

INSTRUCTIONS FOR CLEANING CARPET



Lift 'Kick Stand' into 'upward and locked position' as shown



Release 'Moe-Cleaner 'Locking Handle Bar' downward as shown, to lower Handle into 'Operating Position'. When Moe-Cleaner is not in use, ALWAYS release Kickstand to 'down position' to protect Moe Brushes.

Step 14 INSTRUCTIONS FOR CLEANING CARPET

With Moe-Cleaner Handle in operating position, press Green Button to start Moe-Cleaning Head Brushes. Gently push Moe-Cleaner forward to begin cleaning carpet, and walk forward while **holding the Spray Lever Handle 'up'**. SPRAY 'Encapsulator Solution' from the Moe-Cleaner Tank onto the carpet path ahead, but **ONLY while walking in a forward motion**.

Release Spray Handle at the end of forward motion path (row), and **'walk backward' in the same path** to allow Moe to PICK UP excess moisture and to dry carpet. To begin cleaning the 'next row' of carpet, reposition Moe-Cleaner and overlap prior row by 2-3". Begin cleaning next row in forward motion as described above. Remember to **release Spray Handle while walking backward** to dry carpet.

PRESS RED BUTTON TO TURN MOE- CLEANER Brushes 'OFF'

ALWAYS DISCONNECT MOE-CLEANER FROM ELECTRICAL POWER SOURCE BEFORE REMOVING SOIL TRAY OR WHEN WORKING UNDER MOE CLEANING HEAD.

Remove and clean Soil Tray every 800-1,000 SF and replace as described in STEP 9



ON/OFF Switch


Green = ON, Red = OFF

Step 15

ALWAYS DISCONNECT MOE-CLEANER FROM ELECTRICAL POWER SOURCE BEFORE PERFORMING MAINTENANCE

NOTE: IT IS NOT NECESSARY TO REMOVE BRUSHES TO CLEAN THEM PROPERLY


Clean Brushes by (a) rinsing undercarriage of Cleaning Head with water hose. Use caution not to wet electrical connections from handle or tank, (b) Use scissors to cut and remove hair and other debris from brushes, following along the rows of bristles. Remove hair from both ends of brushes to avoid hair tangling and interfering with axle bearings. Do not rinse or wash top of Moe-Cleaner, Moe Handle, or Pump with water hose.

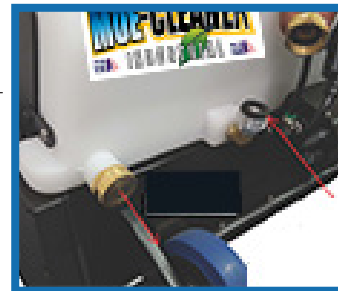

Clean Water Filter Screen weekly. Loosen this cap to drain tank.

Step 16 Daily Routine Maintenance

To **REMOVE SOIL TRAY** - Hold the SOIL TRAY AND **SLIDE SOIL TRAY** to Right → side of SOIL TRAY COMPARTMENT towards the Retractable PINS. This **SLIDING ACTION** will release the LEFT Side of SOIL TRAY and allow removal of the SOIL TRAY.

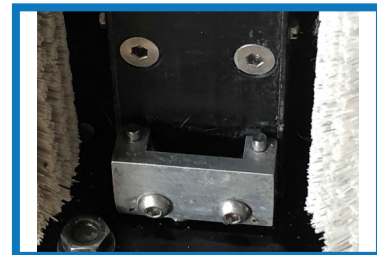

RETRACTABLE PINS are located at top RIGHT SIDE of SOIL TRAY Compartment

(STEP 16 cont.)

To **RE-ATTACH SOIL TRAY** - Place top side (w/ TABS) of SOIL TRAY in between the Retractable PINS on RIGHT SIDE of Compartment. SLIDE SOIL TRAY UP and to the RIGHT → This SLIDING ACTION will depress the PINS, and allow the SOIL TRAY to SLIDE UP and to the ← LEFT inside the Compartment. This will RE-POSITION AND RE-ATTACH THE SOIL TRAY, **LOCKING IT into the Compartment**. **CHECK TO ENSURE THAT THE SOIL TRAY IS FIRMLY ATTACHED AND 'LOCKED IN' BEFORE CONNECTING TO ELECTRICAL POWER STARTING THE MOE-CLEANER.**


To **CLEAN SOIL TRAY** - Dip the SOIL TRAY into a bucket half-full of water to rinse off debris collected from carpet. Replace the SOIL TRAY in Compartment when clean. **BE CERTAIN THAT SOIL TRAY IS 'LOCKED IN' BEFORE RE-STARTING MOE-CLEANER.**

Annual Maintenance Tips

Step 17

Remove Brushes annually to inspect, clean and rotate - front to back etc.

To remove brushes, lift and PULL this Pin by pulling on Pin Ring. Use and insert Pin on opposite side of Cleaning Head to push the Axle out. Repeat for both brush axles.

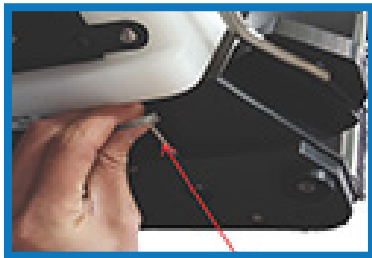

Step 18

To Remove Brushes- Push Axle out from this direction and pull out and remove Axle from opposite side of cleaning head



Step 19

Remove Brush by pulling out Axle in this direction

