



VIGIL CLIENT

Adding Servers




Version 1.0


Date Created:

25 Feb 2025


1. Start by opening Vigil Client and navigating to the “Servers” section located on the top bar of the program. Click “Servers” in the drop down.

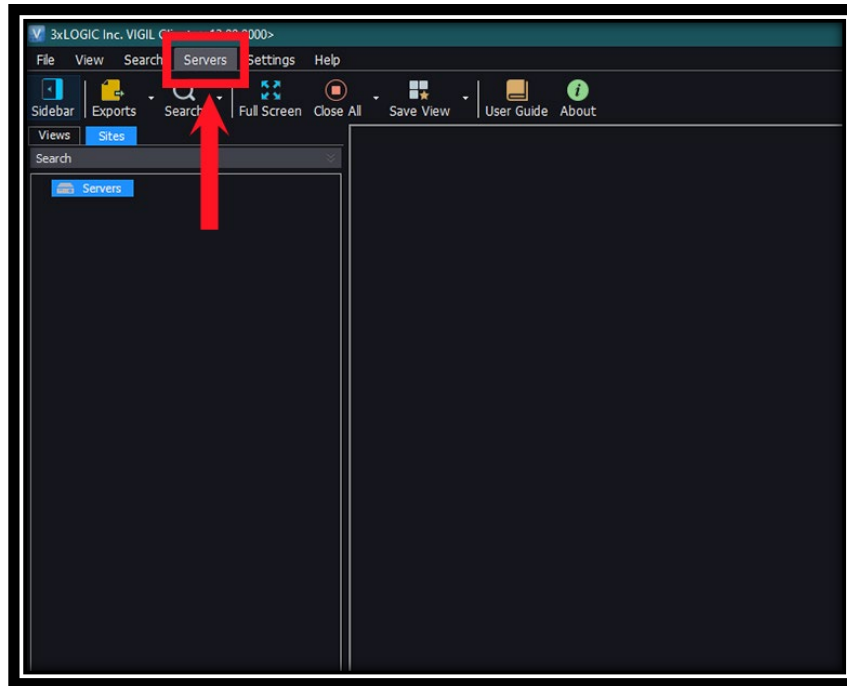

2. Then another window will open, navigate to the left side of the window and click “Add”.

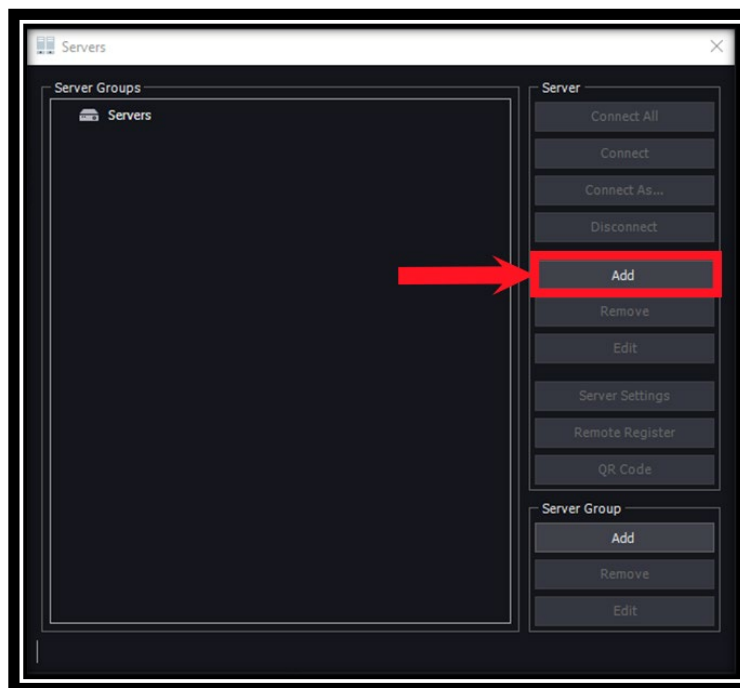


- Another window will then pop up, and this is where you will enter the information to connect to a Vigil Server. If you are using a Vigil Connect Alias/Serial to connect to a server, check the box labelled "Use VIGIL Connect." If you are using an IP address to connect to the server, leave this box unchecked.

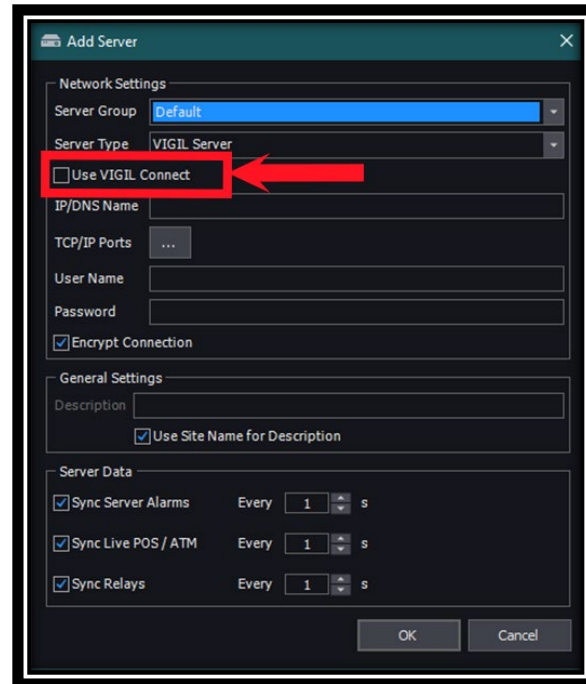


The screenshot shows the 'Add Server' dialog box. Under the 'Network Settings' section, 'Server Group' is set to 'Default' and 'Server Type' is 'VIGIL Server'. The checkbox 'Use VIGIL Connect' is unchecked and highlighted with a red box and a red arrow. Below this are fields for 'IP/DNS Name', 'TCP/IP Ports', 'User Name', and 'Password'. The 'Encrypt Connection' checkbox is checked. Under 'General Settings', there is a 'Description' field and a checked 'Use Site Name for Description' checkbox. Under 'Server Data', there are three checked items: 'Sync Server Alarms' (Every 1 s), 'Sync Live POS / ATM' (Every 1 s), and 'Sync Relays' (Every 1 s). 'OK' and 'Cancel' buttons are at the bottom right.

- If you are using VIGIL Connect, you will enter the server's Alias or Serial No. in the box labelled "Serial No./Alias." You can click the "Test VIGIL Connect" to ensure you are getting a connection to the server.

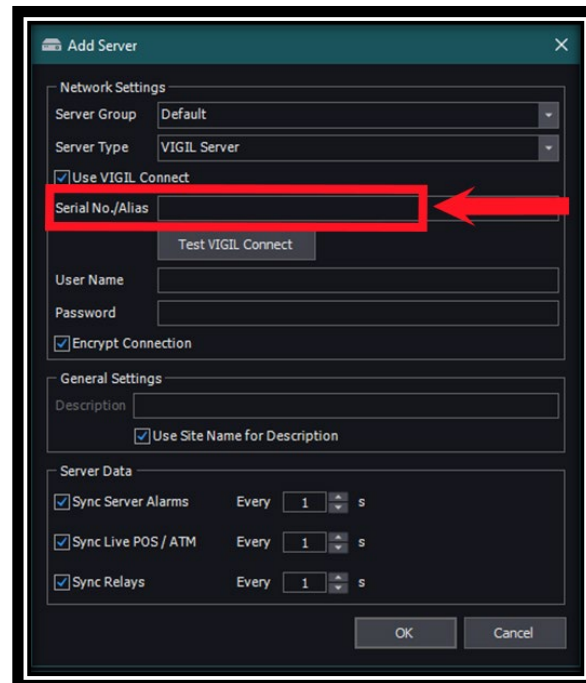

The screenshot shows the 'Add Server' dialog box with 'Use VIGIL Connect' checked. The 'Serial No./Alias' field is highlighted with a red box and a red arrow. A 'Test VIGIL Connect' button is located below this field. The other settings, including 'Server Group', 'Server Type', 'Encrypt Connection', 'General Settings', and 'Server Data', are the same as in the previous screenshot. 'OK' and 'Cancel' buttons are at the bottom right.

5. If you are connecting to the server with an IP address, enter the IP in the “IP/DNS Name” Section.

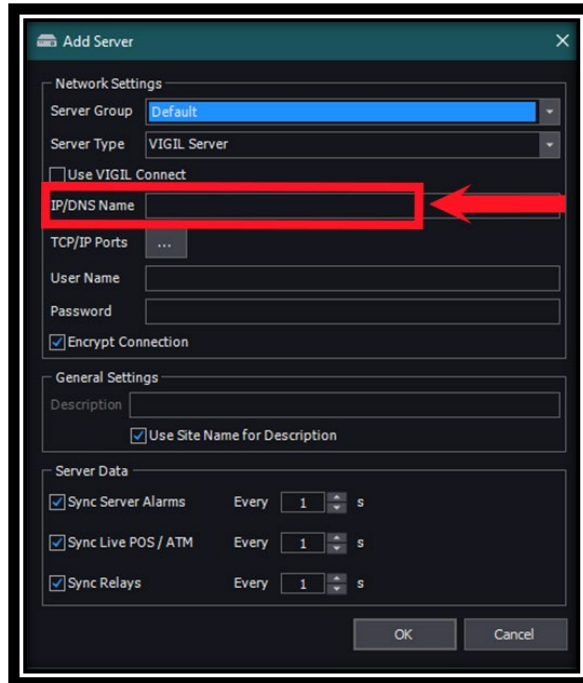


The screenshot shows the 'Add Server' dialog box with the following settings:

- Network Settings:**
 - Server Group: Default
 - Server Type: VIGIL Server
 - ☐ Use VIGIL Connect
 - IP/DNS Name:** (This field is highlighted with a red box and a red arrow pointing to it from the right.)
 - TCP/IP Ports: ...
 - User Name: (empty)
 - Password: (empty)
 - ☒ Encrypt Connection
- General Settings:**
 - Description: (empty)
 - ☒ Use Site Name for Description
- Server Data:**
 - ☒ Sync Server Alarms Every 1 s
 - ☒ Sync Live POS / ATM Every 1 s
 - ☒ Sync Relays Every 1 s

Buttons: OK, Cancel

6. Next, enter your username and password for the server in the corresponding username and password sections.

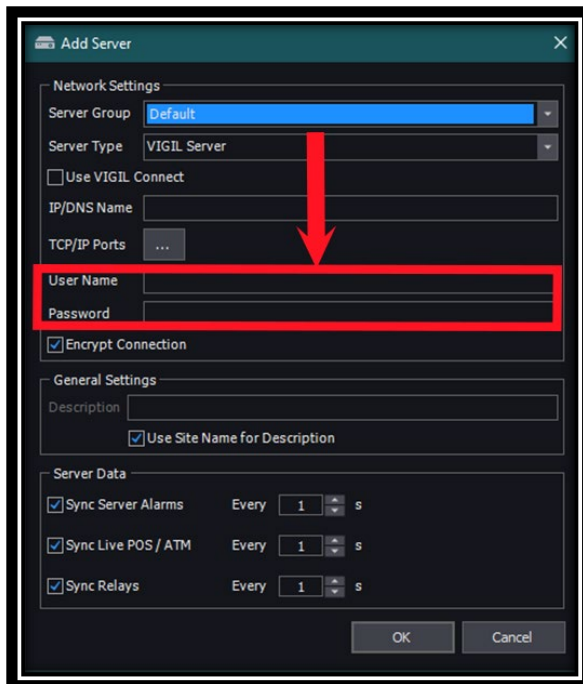


The screenshot shows the 'Add Server' dialog box with the following settings:

- Network Settings:**
 - Server Group: Default
 - Server Type: VIGIL Server
 - ☐ Use VIGIL Connect
 - IP/DNS Name: (empty)
 - TCP/IP Ports: ...
 - User Name:** (This field is highlighted with a red box, and a red arrow points down to it from the IP/DNS Name field.)
 - Password:** (This field is also highlighted with a red box.)
 - ☒ Encrypt Connection
- General Settings:**
 - Description: (empty)
 - ☒ Use Site Name for Description
- Server Data:**
 - ☒ Sync Server Alarms Every 1 s
 - ☒ Sync Live POS / ATM Every 1 s
 - ☒ Sync Relays Every 1 s

Buttons: OK, Cancel

7. Finally, if you'd like to name the server a specific name, uncheck "Use site name for description" and enter the name you'd like into the "description" section.

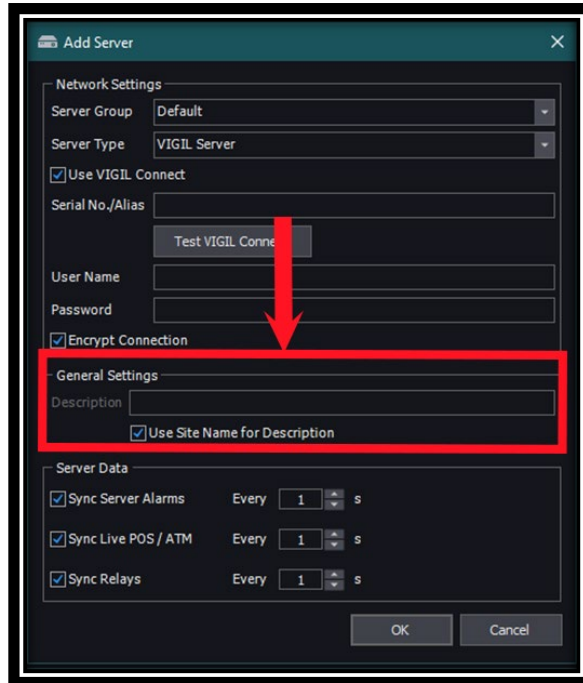

The screenshot shows the 'Add Server' dialog box with the following settings:

- Network Settings:**
 - Server Group: Default
 - Server Type: VIGIL Server
 - ☒ Use VIGIL Connect
 - Serial No./Alias: [Empty]
 - Test VIGIL Connect: [Button]
 - User Name: [Empty]
 - Password: [Empty]
 - ☒ Encrypt Connection
- General Settings:** (Highlighted with a red box)
 - Description: [Empty]
 - ☒ Use Site Name for Description
- Server Data:**
 - ☒ Sync Server Alarms: Every 1 s
 - ☒ Sync Live POS / ATM: Every 1 s
 - ☒ Sync Relays: Every 1 s

Buttons: OK, Cancel

8. Click "Ok" at the bottom of the window and your server will verify connection before being added to your server list.