

## TABLET PRINTER SERVER CONFIGURATION

The Snappic print server allows you to connect to our printer, via either a wired or wireless connection, and print in real-time when using the Snappic Photo Booth App.


**Wireless Connection** (NO cable connecting the iPad to the Windows tablet):

The iPad and tablet must both be connected to the same hotspot/wifi connection.

Note that some venues WIFI connection can have a security setting that blocks the communication between the iPad and print server.

**Wired Connection:** The iPad is connected to the Windows tablet with a lightning cable (#3)

1. Click on Photo Booth Printer Server on the tablet.

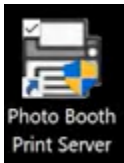

2. Choose the **DNP DS40** printer from the drop-down menu



## IPAD PRINTER SERVER CONFIGURATION

1. Open the Snappic app on the iPad and select your event. Then tap on the "Configure Printer" button.



2. On the pop up, select the "Photo Booth Print Server" option. **Choose USB (for wired) or wireless.** Then tap "Done"



3. Start your event by tapping "Start Photo Booth"

