

Please Read Before Cutting

The kerf has not been set in these tool path files.

Please be sure to perform a test cut to confirm the correct kerf width has been entered. If the kerf is not set correctly it can lead to uneven weight distribution and reduce the weight capacity of the water table.

If cutting more than one slat, the array function on the table can be used to populate the workspace with multiple toolpaths of the same part.

Cut Plate Dimensions (mm):

