

**IMPORTANT!  
REGISTER YOUR NEW WIRELESS REMOTE CONTROL**



*This warranty registration card must be completed and mailed to JL Marine Systems, Inc. to validate your warranty. Or you can save postage by registering online at [www.power-pole.com](http://www.power-pole.com).*

Name \_\_\_\_\_

Address \_\_\_\_\_

City \_\_\_\_\_ State \_\_\_\_\_ Zip \_\_\_\_\_

Email address \_\_\_\_\_

Date of purchase \_\_\_\_\_ Age \_\_\_\_\_

Place of purchase \_\_\_\_\_

Type of boat \_\_\_\_\_ Length \_\_\_\_\_

*I have read and understand the warranty of this product.*

Signature \_\_\_\_\_

**One (1) year warranty**

**Conditions of warranty**

A wireless remote control manufactured by JL Marine Systems Inc. is warranted against defects in material and workmanship in the transmitters and the receiver box, to the original owner according to the following stipulations.

1. Wireless Remote Control warranty is activated on the date of purchase by JL Marine Systems, Inc. You may also register your wireless remote control on our web site or send in the registration card. Please retain your sales receipt as proof of purchase.
2. Install Genuine Power-Pole Merchandise ONLY. This warranty is void if any non authorized parts are used or installed.
3. This warranty is void if the Power-Pole® Wireless remote control is used commercially structurally altered or subject to stress beyond the physical limits of the manufactured material. This Warranty is void if the Power-Pole® Wireless Remote Control is exposed to excessive water or submersion.
1. Parts which prove defective within (90) days from the date of purchase, JL Marine Systems, Inc. will pay for the replacement product shipping and handling fees to and from the JL Marine Systems, Inc. manufacturing plant or some other place which JL Marine Systems, Inc. might designate. Warranty shipping procedures only apply in the continental USA.
2. Parts which prove defective after (90) days but before (12) months from the date of purchase will also be repaired or replaced free of charge, but there may be a shipping charge to JL Marine Systems, Inc. manufacturing plant or some other place which JL Marine Systems, Inc. might designate. Warranty shipping procedures only apply in the continental USA.

THE WARRANTY CONTAINED HEREIN IS THE EXCLUSIVE WARRANTY MADE BY JL Marine Systems, Inc. AND THERE ARE NO OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING A WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE OR OF MERCHANTABILITY MADE WITH RESPECT TO SUCH ANCHORS. JL MARINE SYSTEMS, INC. IS NOT LIABLE FOR ANY INJURY OR MISHAPS SUSTAINED IN THE USE OF THIS PRODUCT. THE USER OF THIS PRODUCT ACKNOWLEDGES ASSUMED RISKS AND WAIVES ANY AND ALL CLAIMS AGAINST JL Marine Systems, Inc. AND ANY OF IT'S AGENTS.

This warranty applies under conditions of normal use. The warranty does not cover:

- 1) defects caused by improper assembly or disassembly;
- 2) defects occurring after purchase due to product modification, intentional damage, accident, misuse, abuse, negligence or exposure to corrosive elements;
- 3) cosmetic damage and
- 4) labor or assembly costs.

Except as provided herein, JL Marine Systems, Inc. makes no express warranties, and any implied warranty, including without limitation any implied warranty of merchantability or fitness for a particular purpose, is limited in its duration to the duration of the written limited warranty set forth herein.

Except as provided herein, JL Marine Systems, Inc. shall have no liability or responsibility to the purchaser or any other person or entity with respect to any liability, loss or damage caused or alleged to be caused directly or indirectly by use of the product, including, but not limited to, any incidental or consequential damages. Some states do not allow limitation on how long an implied warranty lasts or the exclusion of limitation of incidental or consequential damages, so the above limitation and exclusion may not apply to you. This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

Place  
First-Class  
Postage

Post office will not  
deliver without  
proper postage.



**JLMarine**  
SYSTEMS, INC.

9208 Palm River Road  
Suite 303  
Tampa, FL 33619

## Installation and programming Instructions

### Wireless Remote Control

### Featuring MAG SYNC™ Technology

Congratulations! Enclosed is your new JL Marine Systems Remote Control unit featuring state-of-the-art Mag-Sync™ Technology. This package includes your new receiver box and two pre-programmed transmitters.

#### Installation Instructions:

- 1) Mount the receiver box in an area not susceptible to submersion or constant drenching. The receiver box should also be mounted in the same general area as the pump and reversing relay. Mount the receiver so that the wires are coming out from under the box on a vertical or horizontal surface. Do not mount the receiver box upside down.
- 2) Attach the black ground wire directly to the -12v side of the main battery (the same battery the Power-Pole is connected to).
- 3) Locate the black male/female plugs on the Reversing relay and console switch wiring harness, coat with a small amount of dielectric grease and connect to the mating plugs on the Remote Control box. *Note: For best results apply dielectric grease to both male and female electrical connection. Dielectric grease included with every remote control unit.*

**NOTE:** *The two transmitters and the receiver box in this package are matched and pre-programmed prior to shipping. The following instructions are for any additional transmitters purchased.*

#### Additional Transmitter Programming Instructions:

After the receiver box has been installed and attached to the appropriate plugs:

- 1) Place the new transmitter on the Mag-Sync logo on the receiver box until the red programming LED is lit. Only a current Mag-Sync transmitter with internal magnet can be programmed using this process.
- 2) Push the up button on the transmitter three consecutive times at one second intervals.
- 3) The receiver and transmitter are now programmed to match and are ready for use.

Repeat these steps for additional transmitters, a maximum of five transmitters can be programmed to a receiver box.