

NO	PART NUMBER	DESCRIPTION	COND
1	032430	JUNCTION SX-16 QUICK CHNG JUNCTIONBOX	NS
2	3035725	ELEMENT FILTER, P3 PRESB5309	NS
3	29022971	SQUIB ASSEMBLY KIT	NS
4	066-01143-2001	TRANSPONDER ELS MST67A	NS
5	102-00002	BULB OIL TEMPERATURE	NS
6	1209-3226-CA-01	ACCELEROMETER TAIL ROTOR AXIAL	NS
7	124-043	INDICATOR HYDRAULIC TEMP& PRESS	NS
8	124-044	INDICATOR FUEL PRESSURE	NS
9	124-044	INDICATOR FUEL PRESSURE	NS
10	17-50-01	ANTENNA VHF	NS
11	20042-0000-01	PROBE FUEL	NS
12	201-0001	CONVERTER TORQUE	NS
13	204-011-463-001	BOLT	NS
14	204-011-463-001	BOLT	NS
15	204-011-463-109	BOLT	NS
16	204-011-463-109	BOLT	NS
17	204-011-463-109	BOLT	NS
18	204-011-463-109	BOLT	NS
19	204-011-463-109	BOLT	NS
20	204-011-463-109	BOLT	NS
21	204-011-463-109	BOLT	NS
22	204-011-463-109	BOLT	NS
23	204-031-920-003	DAMPER FRICTION	NS
24	204-031-920-003	DAMPER FRICTION	NS
25	204-040-376-003	SWITCH OIL PRESSURE	NS
26	204-040-376-003	SWITCH OIL PRESSURE	NS
27	204-040-623-109	BEARING BALL	NS
28	204-040-623-109	BEARING BALL	NS
29	204-060-762-103	ACTUATOR TWIN BEEP	NS
30	204-070-907-104	CONVERTER RH WIPER MOTORASSY	NS
31	204-070-907-104	CONVERTER RH WIPER MOTORASSY	NS
32	204-075-705-103	INDICATOR INDICATOR	NS
33	205-076-044-007	SWITCH HYDRAULIC PRESSURE	NS
34	205-076-044-007	SWITCH HYDRAULIC PRESSURE	NS
35	209-011-712-101	LEVER LEVER ASSY	NS
36	209-011-713-003	LINK LINK ASSEMBLY	NS
37	209-062-002-001	INDICATOR DIFF. PRESSURESWITCH	NS
38	209-062-002-001	INDICATOR DIFF. PRESSURESWITCH	NS
39	209-062-002-001	INDICATOR DIFF. PRESSURESWITCH	NS
40	209-062-002-001	INDICATOR DIFF. PRESSURESWITCH	NS
41	209-062-003-001	SWITCH ENGINE OIL PRESSURE	NS
42	209-062-003-001	SWITCH ENGINE OIL PRESSURE	NS
43	209-062-780-101	ACTUATOR LINEAR, RPM GOVERNOR CONTROL	NS
44	209-070-262-109	INDICATOR ENGINE OIL PRESSURE	NS
45	209-070-262-109	INDICATOR ENGINE OIL PRESSURE	NS
46	209-070-262-111	INDICATOR ENGINE OIL / TEMP	NS

47	209-075-325-009	ANNUNCIATOR MASTER CAUTIONPANEL	NS
48	212-001-323-001	BOLT LOWER MAIN SERVO	NS
49	212-001-323-001	BOLT LOWER MAIN SERVO	NS
50	212-001-323-001	BOLT LOWER MAIN SERVO	NS
51	212-001-323-001	BOLT LOWER MAIN SERVO	NS
52	212-010-706-001	NUT	NS
53	212-062-514-101	BLOWER OIL COOLER	NS
54	212-070-116-009	INDICATOR TRANSMISSION OIL / TEMP	NS
55	212-073-916-001	SWITCH FLOAT	NS
56	212-075-036-101	INDICATOR OIL TEMP / PRESS - 412SP	NS
57	212-075-036-109	INDICATOR OIL TEMP / PRESS - 412EP	NS
58	212-075-036-109	INDICATOR OIL TEMP / PRESS - 412EP	NS
59	212-075-036-109	INDICATOR OIL TEMP / PRESS - 412EP	NS
60	212-075-037-119	INDICATOR N1	NS
61	212-075-067-123	INDICATOR ITT	NS
62	212-075-199-001	RELAY START CONTACTOR	NS
63	212-075-199-001	RELAY START CONTACTOR	NS
64	212-075-782-001	RELAY GENERATOR CONTACTOR	NS
65	214-066-226-103	VALVE CHECK	NS
66	214-074-280-107	DETECTOR RPM LIMIT	NS
67	214-077-092-001	ANTENNA GLIDE SLOPE	NS
68	214-077-092-001	ANTENNA GLIDE SLOPE	NS
69	214-175-257-109	INDICATOR FUEL QUANTITY	NS
70	2C27-3	CARTRIDGE FUEL PUMP	NS
71	2C27-3	CARTRIDGE FUEL PUMP	NS
72	30-326ET-1	AMPLIFIER FIRE PROTECTION CONTROL	NS
73	3045478-01	COMPENSATOR TEMPERATURE	NS
74	3054939-01	CONTROL UNIT TORQUE	NS
75	3118098-12	CONTROL UNIT FUEL, AUTOMATIC	NS
76	32005-037	GENERATOR TACHOMETER	NS
77	32005-037	GENERATOR TACHOMETER	NS
78	32005-037	GENERATOR TACHOMETER	NS
79	412-010-182-101	BEARING ROD END ASSY	NS
80	412-010-182-101	BEARING ROD END ASSY	NS
81	412-010-182-101	BEARING ROD END ASSY	NS
82	412-010-408-101	LEVER ASSY COLLECTIVE	NS
83	412-010-422-103	PIN	NS
84	412-010-422-103	PIN	NS
85	412-076-620-101	ASSY UNIVERSAL	NS
86	412-076-620-101	ASSY UNIVERSAL	NS
87	412-310-146-103	DAMPER YOKE SET	NS
88	412-310-146-103	DAMPER YOKE SET	NS
89	412-310-400-101	BEARING PCL LOWER	NS
90	412-310-400-101	BEARING PCL LOWER	NS
91	412-310-400-103	BEARING ROD END	NS
92	412-330-437-101	CAP ASSY	NS
93	412-375-006-103	TRANSMITTER TORQUE	NS

94	412-375-006-103	TRANSMITTER TORQUE	NS
95	412-941-109	SWITCH PWR SUPPLY/IMMERSION SWITCH	NS
96	412-941-109	SWITCH PWR SUPPLY/IMMERSION SWITCH	NS
97	412-941-110	SWITCH ASSY IMMERSION SWITCH ASSY	NS
98	412-941-110	SWITCH ASSY IMMERSION SWITCH ASSY	NS
99	42D218	SWITCH DIFF FUEL PRESS	NS
100	42D399	SWITCH PRESSURE	NS
101	520-5160-006	INDICATOR COURSE SELECTOR	NS
102	7002353-913	SENSOR AIR DATA	NS
103	7007700-114	INDICATOR WEATHER RADAR-MODEL WI-440	NS
104	7015480-902	COMPUTER DIGITAL FLIGHTCONTROL FZ-706	NS
105	7G1191	SWITCH FUEL PRESSURE	NS
106	7G1191	SWITCH FUEL PRESSURE	NS
107	9080-17250-02	CONTROL PANEL CONTROL PANEL	NS
108	98505-60024	SWITCH	NS
109	98505-60024	SWITCH	NS
110	98505-60024	SWITCH	NS
111	98505-60024	SWITCH	NS
112	APTE-138A-100G	TRANSMITTER OIL PRESSURE	NS
113	APTE-138A-100G	TRANSMITTER OIL PRESSURE	NS
114	APTE-138A-150G	TRANSMITTER OIL PRESS	NS
115	APTE-138A-150G	TRANSMITTER OIL PRESS	NS
116	APTE-138A-50G	TRANSDUCER PRESSURE	NS
117	APTE-139-1500SG	TRANSDUCER HYDRAULIC PRESSURE	NS
118	APTE-139-1500SG	TRANSDUCER HYDRAULIC PRESSURE	NS
119	APTE-139-1500SG	TRANSDUCER HYDRAULIC PRESSURE	NS
120	AV24B1119B	VALVE	NS
121	BAS-212-412-100G	TRANSMITTER OIL PRESSURE	NS
122	BAS-212-412-1500SG	TRANSDUCER HYDRAULIC PRESSURE	NS
123	BAS-212-412-150G	TRANSMITTER OIL PRESS	NS
124	BAS-212-412-50G	TRANSDUCER PRESSURE	NS
125	BAS-212-412-50G	TRANSDUCER PRESSURE	NS
126	CB-2100-T6-D	COMPASS STANDBY MAGNET	NS
127	DGSC20-02	COUPLER VOR/LOC, NAV	NS
128	DGSC20-02	COUPLER VOR/LOC, NAV	NS
129	DRC20-04	COUPLER NAVIGATION - DRAYTON	NS
130	EMB10-14	ANTENNA MARKER BEACON	NS
131	GEU-7-A	TACHO GENERATOR	NS
132	L10-16	ANTENNA DME/TRANSPONDER (HN CONNECTOR)	NS
133	M800-5V-BAT	CLOCK	NS
134	MIL-LDCBS1X2-TNC	GPS SPLITTER (LDCBS1X2-TNC)	NS
135	VF10-210	ANTENNA VHF	NS
136	10544G	HEATER OIL TO FUEL	OH
137	10635-111129	INDICATOR ALTIMETER	OH
138	124-043	INDICATOR HYDRAULIC TEMP& PRESS	OH
139	124-043	INDICATOR HYDRAULIC TEMP& PRESS	OH
140	124-044	INDICATOR FUEL PRESSURE	OH

141	124-044	INDICATOR FUEL PRESSURE	OH
142	200SG119Q	GENERATOR STARTER	OH
143	204-031-927-107	MOUNT MAIN TRANSMISSION	OH
144	204-060-762-103	ACTUATOR TWIN BEEP	OH
145	204-070-907-001	ASSY WIPER MOTOR CONVERTER	OH
146	205-060-606-003	PUMP FUEL BOOSTER	OH
147	205-060-612-003	VALVE FUEL SHUT OFF	OH
148	205-060-612-003	VALVE FUEL SHUT OFF	OH
149	206-070-475-005	BLOWER AIR	OH
150	209-011-711-001	IDLER IDLER ASSY	OH
151	209-062-502-101	BLOWER OIL COOLER	OH
152	209-062-780-101	ACTUATOR LINEAR, RPM GOVERNOR CONTROL	OH
153	209-070-262-109	INDICATOR ENGINE OIL PRESSURE	OH
154	209-070-263-003	VOLTMETER DUAL AC/DC	OH
155	209-070-263-003	VOLTMETER DUAL AC/DC	OH
156	209-070-263-003	VOLTMETER DUAL AC/DC	OH
157	209-070-263-003	VOLTMETER DUAL AC/DC	OH
158	209-070-264-003	INDICATOR DUAL AMP METER	OH
159	209-070-264-003	INDICATOR DUAL AMP METER	OH
160	212-070-116-009	INDICATOR TRANSMISSION OIL / TEMP	OH
161	212-070-116-009	INDICATOR TRANSMISSION OIL / TEMP	OH
162	212-070-238-007	INDICATOR ALTIMETER	OH
163	212-075-037-119	INDICATOR N1	OH
164	212-075-037-119	INDICATOR N1	OH
165	212-075-139-001	LIGHT LANDING ASSEMBLY (G-5400-6)	OH
166	212-075-418-107	ACTUATOR STEP	OH
167	212-076-005-111	ACTUATOR SERVO - MAIN	OH
168	212-076-010-101	PUMP HYDRAULIC	OH
169	212-076-011-101	PUMP HYDRAULIC	OH
170	212-076-015-001	VALVE CHECK	OH
171	212-076-015-001	VALVE CHECK	OH
172	214-175-257-109	INDICATOR FUEL QUANTITY	OH
173	214-175-278-101	INDICATOR ALTIMETER, ENCODING	OH
174	2C27-3	CARTRIDGE FUEL PUMP	OH
175	30-231-9	DETECTOR SMOKE	OH
176	30402901-3	EXTINGUISHER FIRE BOTTLE (209-062-908-105)	OH
177	3045802-01	PUMP FUEL	OH
178	3A67.22.20F.05.1.PM	ALTIMETER ENCODING	OH
179	412-010-425-133	LINK ASSY PITCH	OH
180	412-010-425-133	LINK ASSY PITCH	OH
181	412-010-425-135	LINK ASSY PITCH	OH
182	412-010-425-135	LINK ASSY PITCH	OH
183	412-074-101-103	TRANSDUCER TRANSDUCER	OH
184	412-075-009-105	INDICATOR AIRSPEED	OH
185	412-075-010-111	INDICATOR TACHOMETER	OH
186	412-075-010-111	INDICATOR TACHOMETER	OH
187	412-075-101-101	INVERTER STATIC 450VA	OH

188	412-375-007-113	INDICATOR TORQUE	OH
189	412-375-007-113	INDICATOR TORQUE	OH
190	51539-002N	CONTROL UNIT DC	OH
191	7001840-913	TRANSCEIVER RADIO ALTIMETER	OH
192	9029000-40000	TRANSPONDER NGT-9000RD LYNX MSS	OH
193	AV24B1119B	VALVE	OH
194	AV24B1119B	VALVE	OH
195	G6250-4	LIGHT SEARCHLIGHT CONTROLLABLE	OH
196	H321FBM	INDICATOR STANDBY ATTITUDE	OH
197	7001482	ACTUATOR CYCLIC PITCH	SV
198	011-00562-00	RECEIVER GARMIN GPS 500	SV
199	011-01060-00	GNS UNIT GARMIN GNS 430W	SV
200	066-01143-0201	TRANSPONDER MST67A	SV
201	066-3012-01	MARKER LIGHT ASSEMBLY	SV
202	071-01284-0009	CONTROLLER ADF, KFS586A (071-1284-09)	SV
203	071-1282-80	CONTROL UNIT VHF COMM, KFS598A	SV
204	145130-7010	UNIT ATT, HEADING & REF SYS-LCR-100	SV
205	175519-33-01	CONTROL PANEL CVR	SV
206	206-062-687-101	PUMP FUEL BOOST	OH
207	209-062-214-101	ACTUATOR PARTICLE SEPARATOR	SV
208	209-062-214-101	ACTUATOR PARTICLE SEPARATOR	SV
209	209-062-214-101	ACTUATOR PARTICLE SEPARATOR	SV
210	209-062-780-101	ACTUATOR LINEAR, RPM GOVERNOR CONTROL	SV
211	209-070-263-003	VOLTMETER DUAL AC/DC	SV
212	209-075-395-001	CONTROL UNIT FIRE DETECTION	SV
213	212-001-759-101	BELLCRANK ASSY	SV
214	212-010-750-113	BLADE TAIL ROTOR	SV
215	212-070-116-009	INDICATOR TRANSMISSION OIL / TEMP	SV
216	212-070-239-001	INDICATOR INDICATOR	SV
217	212-075-036-109	INDICATOR OIL TEMP / PRESS - 412EP	SV
218	212-075-067-123	INDICATOR ITT	SV
219	212-075-067-123	INDICATOR ITT	SV
220	212-075-067-123	INDICATOR ITT	SV
221	212-075-199-001	RELAY START CONTACTOR	SV
222	212-075-418-107	ACTUATOR STEP	SV
223	212-075-962-001	POWER SUPPLY 5 VOLT	SV
224	212-075-962-001	POWER SUPPLY 5 VOLT	SV
225	212-076-004-101	SERVO TAIL ROTOR	SV
226	212-076-006-105	VALVE & FILTER ASSEMBLY, INTEGRATED	SV
227	212-076-011-101	PUMP HYDRAULIC	SV
228	212-077-200-105	CONTROL UNIT COMM	SV
229	214-074-280-107	DETECTOR RPM LIMIT	SV
230	214-175-257-109	INDICATOR FUEL QUANTITY	SV
231	214-175-257-109	INDICATOR FUEL QUANTITY	SV
232	2316-1203-01	RECORDER VOICE&FLIGHT DATA MADRASFA23XX	SV
233	30-231-9	DETECTOR SMOKE	SV
234	3045478-01	COMPENSATOR TEMPERATURE	SV

235	39563-001	POWER SUPPLY BATTERY STORAGE NICKEL-CADMIU	SV
236	39563-001	POWER SUPPLY BATTERY STORAGE NICKEL-CADMIU	SV
237	412-010-405-111	LINK DRIVE ASSY	SV
238	412-010-405-111	LINK DRIVE ASSY	SV
239	412-010-406-117	LINK TUBE, SWASHPLATE	SV
240	412-010-406-117FM	LINK TUBE, SWASHPLATE	SV
241	412-015-300-119	BLADE MAIN ROTOR	SV
242	412-040-625-101	ADAPTER ADAPTER	SV
243	412-050-013-117	BAG FLOAT - FWD	SV
244	412-074-101-103	TRANSDUCER TRANSDUCER	SV
245	412-075-101-103	INVERTER STATIC	SV
246	412-301-300-101	ACTUATOR ROTARY	SV
247	412-375-006-101	TRANSMITTER TORQUE	SV
248	412-375-006-103	TRANSMITTER TORQUE	SV
249	51539-002N	CONTROL UNIT DC	SV
250	51539-002N	CONTROL UNIT DC	SV
251	622-5656-001	PROBE ANTENNA COUPLER PAC-200	SV
252	7000299-910	CONTROL PANEL AUTOPILOT	SV
253	962830-1A	COMPUTER AIR DATA , ADC-2000	SV
254	APTE-138A-150G	TRANSMITTER OIL PRESS	SV
255	MD41-1408A(5V)	ANNUNCIATOR GPS CONTROL UNIT - 5 VOLT	SV
256	PV3-044-8A	PUMP HYDRAULIC ASSY	SV
257	QAR200-02-00	RECORDER QUICK ACCESS	SV