

Fridge Settings:

We have set the Fridges on Default Low and Eco at 2 degrees. It is important to understand your power supply and at what voltage you should not go past, then set the fridge accordingly, by reading the table in the instructions. For Low Med High

Take your time with settings let the unit take 6-8 seconds between you making changes on each option.

Between settings let the unit stop flashing which stores the setting then press the setting button once for changing ECO – MAX then flashing stop.

To make it simple the settings button which you can press a singular time to scroll through options that are flashing.

+ or – Plus or Minus can be pressed to simply change the Temp setting at any time or settings. Such as below

1. It is important to note that holding down the settings button for 3 seconds once the unit is turned on will allow you to scroll between the L M H (Low Medium High) option and the **degree or Fahrenheit setting on temp**, by clicking the setting button once it will scroll between those 2 settings, then use the plus and minus buttons to choose your setting. (you can change the Degree and Fahrenheit reading by the above method.)
2. **Setting Max or Eco** : Once the above settings are done , to put the setting on Max or Eco, press the settings button once and the Max or eco will flash, then you can use + or – to adjust. Use the Eco setting when you are out camping and running off battery power or a vehicle, run MAX if you are at home and running off the 240/12 adapter . You can run Max off the battery but once the unit is at temp it is best to set on eco.

The Battery bars on the left will not show anything as these will illuminate only if there is an internal battery installed which these do not come with.

Basic maintenance – Keep fridges away from the elements where possible, do not expose to rain or sea water directly and always keep them upright. Handle with care.

3 Year Manufacturer Warranty under normal use – please read care instructions.

IF YOU ARE AT ALL CONFUSED SIMPLY EMAIL CONTACT@NOMADPDU.COM.AU OR GIVE US A CALL ON THE BELOW TO TALK YOU THROUGH ANY ISSUE YOU MIGHT BE HAVING.

WWW.NOMADARCTIC.COM.AU

Perth
Level 28/140 ST Georges Terrace
WA, 6000 PH: 08 9467 7389
<http://www.nomadpdu.com.au>
contact@nomadpdu.com.au

Melbourne
Level 2, Riverside Quay
1 Southbank Boulevard VIC, 3006
PH: 03 9028 5996

Sydney
Level 2, Chifley Tower
NSW, 2000 Australia
PH: 02 8006 0911

