



11.1.1 SYSTEM OF THE CHILLER ASSY

If you want to change/add the Cooling liquid, follow the steps below:





11.1.2 HOW TO FILL THE COOLING LIQUID


1. Switch off the processor using the **Main power switch**
2. Open the marked Stop cock to the Chiller Assy

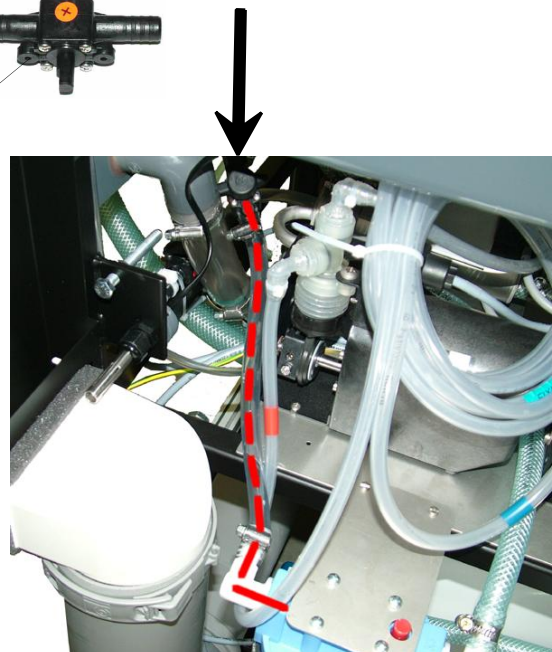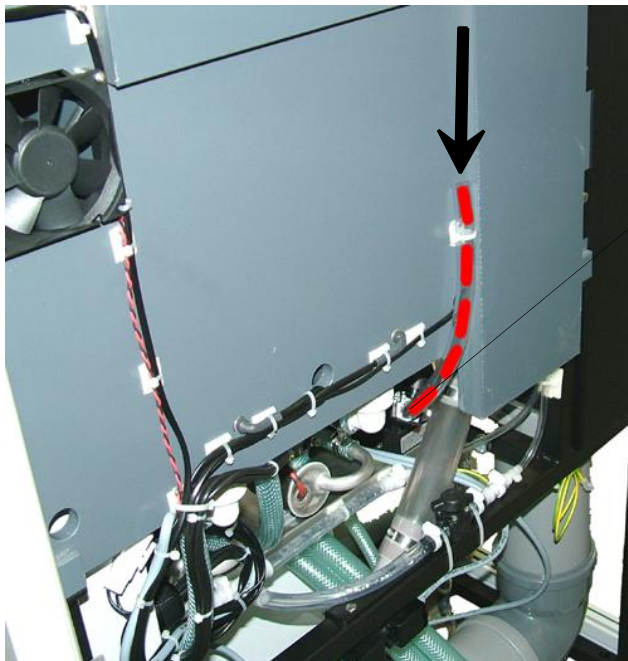

3. Press the red button all the time during the filling!

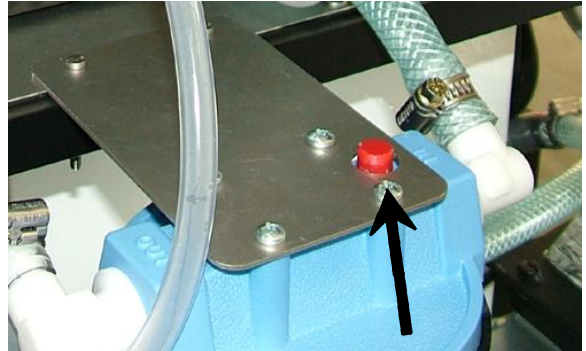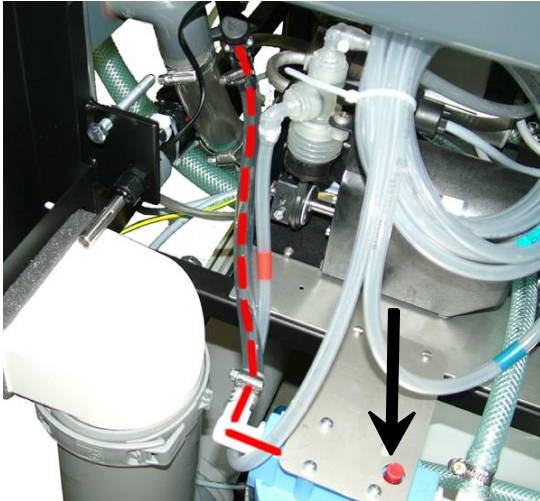

4. Fill in Cooling Liquid carefully up to 3/4 of the Filter using a funnel, while pressing the red button!

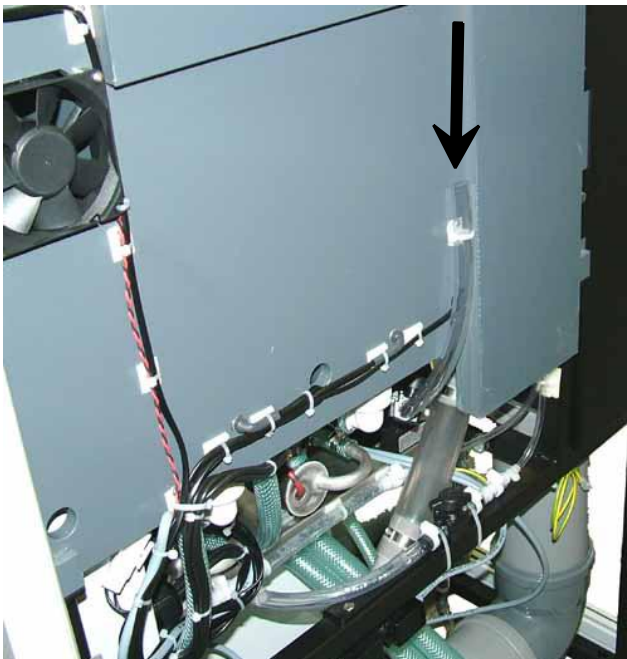

CAUTION:
Do not fill in more than
up to 3/4 of the
Cooling Liquid Tank!

Fill in up to 3/4
(about 2 litres)



5. Close the marked Stop cock to the Chiller Assy



IMPORTANT:
After the first cooling cyclus, control
the level of the cooling liquid.
Contingently fill up the cooling liquid
to the right level.
Inspection glass should filled 3/4.