

Luv Subbin's Spring Maintenance Checklist

RV Items

Clean out any grease from ball receiver.
Lubricate coupler latch with 3 in One oil.
Clean pigtail contacts with electrical contact cleaner.
Pull breakaway wire and lubricate pin with 3 in One oil.
Clean battery terminals and battery lugs.
Check water level in battery.
Exercise breakers 3 – 4 times.
Remove jack head and lubricate gears with grease.
Lubricate stabilizer screw mechanism with Boeshield T-9.
Check propane tank recertification date. Recertify if required. Lube hold down screw with 3 in One oil
Lubricate Zip Dee awning arms with silicone.
Lubricate entry step mechanism with 3 in One oil.
Spray dry graphite onto door keys, insert, and operate multiple times.
Lubricate main door latch mechanism with WD-40.
Carefully inspect tires and inflate to 65 psi @ 70 F.
Check mileage of last wheel bearing repack (every 10,000 miles). Repack bearings if necessary.
Torque lug nuts to 85 ft./lbs.
Reinstall T.P.M.S. sensor caps.
Dress all window seals and main door seal with silicone spray.
Inspect roof for missing rivets or other issues.
Wash and Walbernize.
Sanitize jerry cans and hoses prior to de-winterizing fresh water system. Boil all fresh water fittings.
De-winterize fresh water system (See de-winterization checklist)
Purchase and date new in-line water filter.
Change smoke detector battery. Use only Duracell.
Remove and clean oven overhead fan filter.
Remove and clean air conditioner filters.
Remove and clean Fantastic Fan screens.
Replace fridge fan filter.
Check expiration date of first aid kit items.
Check charge and shake fire extinguisher.



Luv Subbin's Spring Maintenance Checklist

Tow Vehicle Items

Change oil.
Clean air filter.
Top off windshield washer fluid.
Inspect and inflate tires to 35 PSI @ 70 F.
Clean pigtail connector with electrical contact cleaner.
Dress all door seals with silicone spray.
Wax.
Replace batteries in the CB radio. Use only Duracell.
Check and inspect expiration date in the first aid kit.
Check and inspect Emergency Roadside kit.
Check charge and shake fire extinguisher.
Switch EZ Pass transponder from 2 axle to 4 axle.
<u>Miscellaneous Items</u>
Check oil level in generator.
Re-lube hitch ball with high temperature grease.
Lubricate point on Equal-i-zer hitch as per manual with high temperature grease