

### **Making your Bulb Slowly Blink for AP Mode**

1. If your bulb is not blinking, turn on-off-on-off-on to make it blink. It should now be blinking (2 blinks per second).
2. Now switch your bulb off and then repeat process of turning on-off-on-off-on.
3. Your bulb should now be blinking slowly (1 blink every 3 seconds) and is ready to be paired in AP mode