

**RFG Nozzle Installation Instructions:**

You MAY have to adjust the fitment, the instructions below are a guide to help if so.

Hold at the collar between your thumb and first 2 fingers. Push straight on the ball of the segmented output slowly & straight on. You will feel it seat onto the ball. If the nozzle feels loose, you can heat it at the BASE ONLY with a hair dryer, HOT close to boiling water or heat gun on low & squeeze it around the ball segmented line. Use gloves or a cloth to protect your hands. It is best to do so with the output removed from the aquarium. Sometimes it works best if you adjust on the line, then pull off and let the nozzle cool. They will shrink a little and snug up even more. Not all Fluval parts are exactly the same unfortunately. Each & every item is hand fitted here on the R&D tank prior to shipment but may need adjustment for your tank