

CLEANING & STORAGE INSTRUCTIONS

Cleaning the Server Wheels

We recommend regular cleaning of the internal server wheels to remove build-up from the coating and coloration on new balls.

- **Ensure the pickle power is OFF.**
- Using a 100 grit sandpaper sponge (recommended) or sandpaper, reach into the ball ejection opening and hold one of the throwing wheels still. Sand the entire wheel, one section at a time, going around each wheel 2-3 times to remove the build-up.

If cleaning the throwing wheels does not improve performance, please contact us.

Cleaning the Machine

Turn the power OFF when cleaning the machine. The outside of the machine may be wiped with a mild detergent. The inside of the machine may be vacuumed to remove dirt and debris (i.e. leaves, sand particles, dirt, etc). To help keep the inside the machine clean, remove all small debris from the balls before refilling the hopper.

Storing the Machine

Always store the machine indoors in a clean, dry location. Exposure to rain and snow will damage the electronics. Never store the machine in a closed vehicle—which can reach 180°—as excessive heat can negatively affect the machine’s electronics and battery. We recommend the **storage cover** to protect machine from dust and moisture.

TROUBLESHOOTING

Machine Errors

The electronics are programmed to help diagnose a machine error. The LED on the control panel will flash in the patterns listed below. If the error message continues to flash after trying the below fixes, call Lobster Customer Service at 800.526.4041 or email customerservice@lobstersports.com for assistance.

LED INDICATORS	MACHINE ERROR
2 flashes, pause, 2 flashes, pause	Feed motor error - If the feed wheel jams, turn machine off, remove jammed ball, and turn the machine back on.
3 flashes, pause, 3 flashes, pause	Top serve motor error - Turn machine off, check for jammed balls, remove case, remove jammed ball, close case and turn machine on.
4 flashes, pause, 4 flashes, pause	Bottom serve motor error - Turn machine off, check for jammed balls, remove case, and remove jammed ball, close case and turn machine on.
5 flashes, pause, 5 flashes, pause	Sweep motor error - Turn machine off, check for any impediment to ability to sweep, remove it, and turn machine on.

Additional troubleshooting information and help videos can be found on our website’s support section. Please visit www.lobstersports.com/support.