


CONTROL PANEL

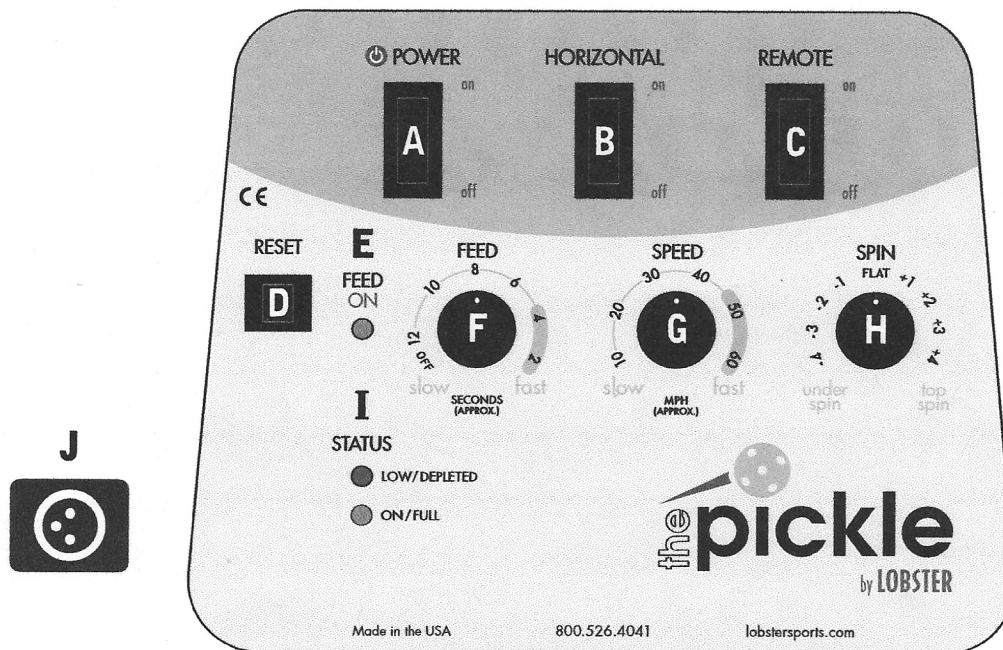

- A. Power Switch** – Powers the machine on and off.
- B. Horizontal Switch** – Turns on/off the random horizontal oscillation.
- C. Remote Switch** – Activates the handheld remote control. (If remote was not purchased, this switch is not active until you upgrade your machine.)
- D. Reset Button** – Pops out in event of malfunction. If this happens, turn off the machine; push the reset button back in, and power up machine. Please contact Customer Service if the issue persists.
- E. Feed On LED** – LED will light up when the feed motor begins to turn.
- F. Feed Knob** – Adjusts feed interval between 2-12 seconds. Turn completely counter-clockwise to turn off the feed.
- G. Speed Knob** – Adjusts the speed the balls are thrown from 10-60 mph.
- H. Spin Knob** – Controls the amount of spin on the ball.
- I. Battery Status Indicator** – LED indicates battery charge when machine in use.
- J. Charger Port** – Located on the red base to left of the control panel. Slide black cover in either direction to expose the jack.
- K. Elevation Crank** – Adjusts the ball trajectory up and down. Located on the side of the red base.