


OPERATION DIRECTION

After installing, inserting the plug into the socket steadily and safely.
Hot plate will heat the food in a constant temperature during it is working.

CONTROL PANEL

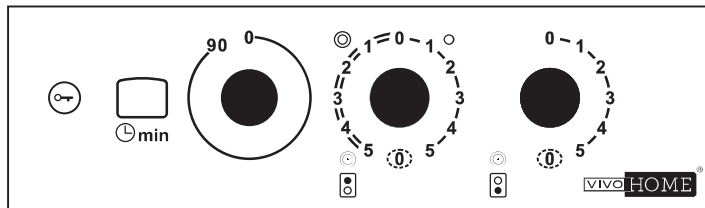


CHILD LOCK

Do not allow unsupervised children do operate this appliance. The Child Lock indicator light will show on display screen, and the hob cannot be operated while the Child Lock is set.

Lock manually – unlock manually:

Lock manually - Press and hold the  button for 1 seconds, lock indicator light turns on.


Unlock manually - Press and hold the  button for 1 seconds until the lock indicator light is turned off.

Lock automatically - unlock manually:

After plugging in, the CHILD LOCK will be set automatically.


When timer is not set, after 1 minute without operating, the CHILD LOCK will be set automatically.

(This function is to prevent unsupervised operation of the hob by little children, after users leave the cooking hob. Please do not think it is a malfunction.)

Unlock manually - Press and hold the  button for 1 seconds until the lock indicator light is turned off.


TURN ON/OFF THE BURNER POWER & SELECT THE POWER & SELECT THE HEATING CIRCLES

When plugging in and the child lock is on unlocking status, rotate the knob to turn on/off the burner. When turning on the burner, the burner indicator light is turned on. When turning off the burner, the burner indicator light is turned off.

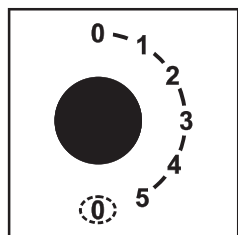




1 circle burner

Rotate the knob to select different power, or turn off the burner.

* 0 /  position --- turn off the burner.

* 1, 2, 3, 4, 5 position --- turn on the burner, and power level 1 (min level), 2, 3, 4, 5(max level).

Tips:  position is near level 5. Rotate knob from  to 5 = Boost into max power level.

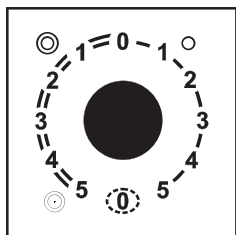

1 circle / 2 circles
burner

Rotate the knob to select different circle mode / different power, or turn off the burner.

- * ① position --- turn off the burner.
- * ○ 1, 2, 3, 4, 5 position --- turn on the burner in 1 circle mode, and power level 1(min level), 2, 3, 4, 5(max level).
- * ◎ 1, 2, 3, 4, 5 position --- turn on the burner in 2 circles mode, and power level 1(min level), 2, 3, 4, 5(max level).

Tips: ① position is near level 5. Rotate knob from ① to 5 = Boost into max power level.



SET THE TIMER

When the burner power is turned on and the child lock is on unlocking status, rotate the timer knob from 0 position to any other position, to activate the timer, you can rotate to set the timer (from 3 minute to 90minutes), and the window will show the timer time accordingly.

There are 11 kinds of fixed time (minutes) 3 → 5 → 7 → 10 → 15 → 20 → 30 → 45 → 60 → 75 → 90.

Tips: 0 position is near 90minutes . Rotate knob from 0 to 90 = Boost into max fixed time. After setting the timer, the timer starts working immediately.

During timer cooking, if you want to change the timer time, you can rotate the knob into the time position directly, the new timer start working immediately .

After the time finished, there is a beep alarm for 6seconds, the burners stop working and their indicator lights turned off.

For next burner cooking, you need rotate the burner knob 1-2 times to activate the burner (until its indicator light is turned on.)

(This function is for safety. Please do not think it is a malfunction.)



WASTE HEAT DIRECTION

After the heat plate stops working, if the temperature for the surface of panel is higher than 80°C, it will show "H"(High temperature. Please do not touch the hot burner area).

After the heat plate stops working, if the temperature for the surface of panel is lower than 80°C, It will be no display.