





V1.1

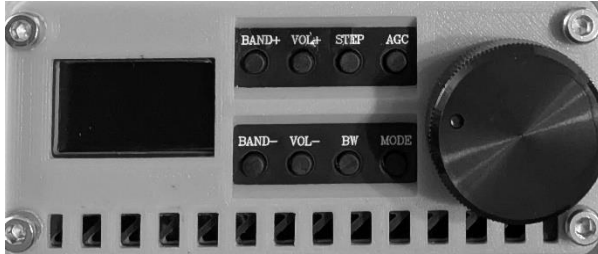

Front

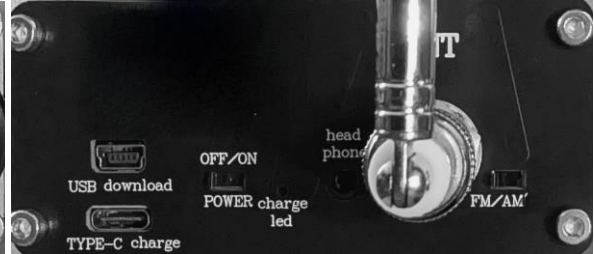

Back

### Switching On/Off:

- Use the on/off switch located on the back of the device to switch the device on and off.

### Selecting Frequencies

- Select Frequency: Press the Band+ button to enter the frequency select mode, then turn the knob on the right to choose your desired frequency.
- When switching between FM and AM frequencies, use the toggle switch on the back of the box to select the relevant antenna.

### Modes

- Enter/Exit Sweep Mode: Press and hold the knob for a few seconds and release to enter and exit sweep mode.
- Adjust Sweep Rate (in Sweep Mode): While in sweep mode, turn the knob to change the sweep rate. You'll see the current rate displayed in the top right of the screen. The lower the number the faster the sweep.
- Change Sweep Direction: Use the Band+ and Band- buttons to switch between forward and reverse sweep.
- The default mode is a linear sweep
- Press the AGC button to switch muted mode on and off. Pressing the MODE button whilst in muted mode will allow you to adjust the noise cancelling, the higher the value the more noise will be removed.
- Press the STEP button to switch random sweep mode on and off (this can also be used with the muted mode).

### Audio

- Mute/Adjust Volume: Click the Vol- button to mute the speaker. To reduce the volume, press and hold down Vol-.
- The headphone jack on the reverse of the device can be used to connect headphones or an external speaker.

### Charging

- To charge the device the USB C port must be used. The USB Mini Port will not charge the device.