

## INSTRUCTION SHEET FOR THE REPLACEMENT OF BP-1010 BATTERY PACK

## TO SEPARATE:

- 1. Put ON-OFF-ARM Switch in the OFF position.
- 2. Remove the ELT and Battery Pack from the mount.
- 3. Pull the Portable Antenna to the UP position
- 4. Remove the four (4) screws that hold the Transmitter to the Battery Pack and separate the two.
- 5. Disconnect the Battery Pack wiring by pulling the Snap Connector away from the bottom of the Printed Circuit Board mating connectors.

## TO REASSEMBLE:

- 6. Connect the Battery Pack Snap Connector to the mating Connectors on the bottom of the Printed Circuit Board
- 7. Place the Transmitter into the Battery Pack, (do not pinch wires) and replace the four (4) screws that were removed in step #4, above. If the four holes do not align, turn the Battery Pack 180 degrees and re-insert.
- 8. Place the Portable Antenna into its stowed position.
- 9. Ifapplicable:
  - a. Reconnect the Co-Axial Cable (leading to the External ELT Antenna) to the mating connector on the front of the Transmitter.
  - b. Re-Insert the separator between the antenna contact and the Portable Antenna.
- c. If a Remote Control is used, re-connect the leads to the Transmitter 10. Push "G" Switch reset button and turn switch to ARM.

CAUTION- DO NOT DISPOSE OF EXPIRED BATTERY PACK IN THE FIRE