



MERL, INC.
1400 E South Blvd.
Montgomery, AL. 36116
(334) 239-8815

INSTALLATION INSTRUCTIONS FOR MERL, INC. BATTERY PACK P/N BP-1020 IN DORNE AND MARGOLIN, INC. ELT'S NUMBERED 6, 6.1, 6.1C, 8.1, AND 8.10

1. Disconnect the antenna connector and remote-control leads.
2. Remove the fasteners by holding the ELT to the airframe.
3. Remove the four (4) Phillips head screws on the bottom of the ELT and remove the plate.
4. Unfasten the two-piece connector and remove the old battery pack.
5. Insert the new battery pack (label side up) and refasten the connector.
6. Reinstall the four (4) Phillips head screws and the plate removed in Step 3.
7. Affix the supplied Expiration Date Placard to the ELT directly over the existing Expiration Date Placard.
8. Reinstall the ELT in the aircraft using the fasteners removed in Step 2.
9. Turn the switch to "ON" and monitor the operation of the ELT on a communication receiver tuned to 121.5 MHz. If the test is satisfactory, place the switch in the "ARM" position.
10. Enter in the Airframe Log Book the date of installation of the new battery pack, AND the NEXT replacement date.

WARNING!
DO NOT DISCARD OLD BATTERY IN HEAT OR FIRE!

Dispose of old batteries as per current local environmental regulations.