


FINAL CHECK LIST

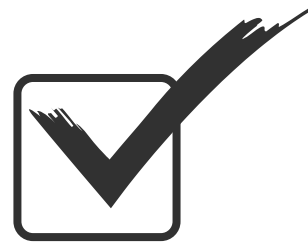

- Double check the tent poles are secure in the eyelets.
- All stakes are secured into the ground.
- Rainfly is securely attached to rings.

ONLINE VIDEO

Please watch our online video for further help.



For any questions or concerns please call our toll free customer service line.

WORLDFAMOUSSPORTS.COM

(833) 937-1234

(833) WFS-1234



INSTRUCTION MANUAL

MODEL #: TNT-10

IMPORTANT

Treat your tent seams with waterproofing. Set up your tent at home before your first camping trip. A dark campsite is no place to learn how to assemble your WORLD FAMOUS SPORTS tent. Read assembly instructions with care. When selecting a campsite, make sure you find a flat area with good drainage free from all sharp objects. Protect your investment.







This product can expose you to chemicals including Diethylhexyl Phthalate, which is known to the state of California to cause cancer, birth defects, or other reproductive harm. For more info go to: www.P65Warnings.ca.gov


PARTS

PARTS IDENTIFICATION:


- A. Tent(1)
- B. Rainfly(1)
- C. Shock Corded Fiber Glass Poles.. (6)
(4 regular, 2 curved rainfly poles)
- D. Steel Poles..... (8)
- E. Tent stakes (6)

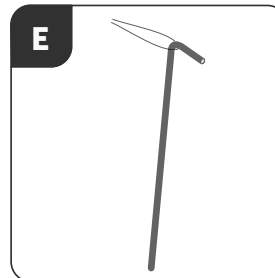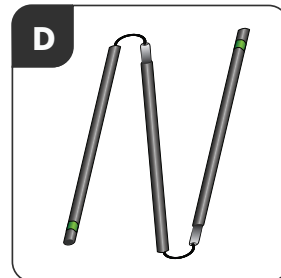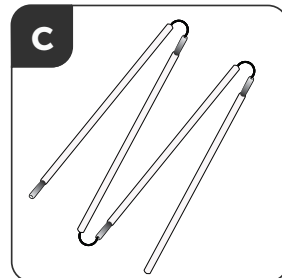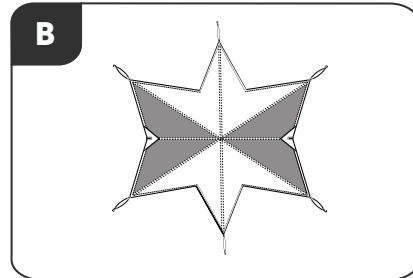



ASSEMBLY

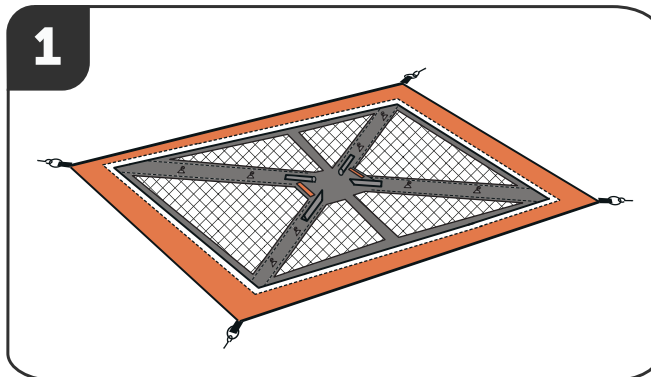


STEP 1: Unfold and spread the tent out on a clear camp area. Remove all stones and sharp objects.

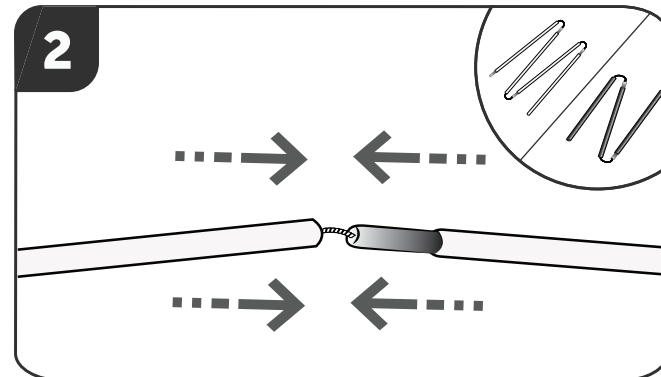


STEP 2: Assemble all shock corded poles/ steel poles by unfolding and slipping shafts together.

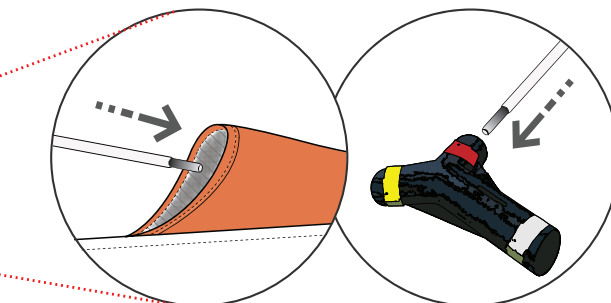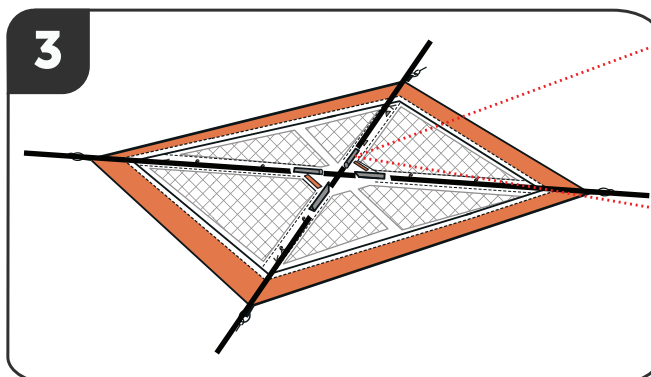


STEP 3: Lay the two longer poles assemblies across the tent to form an "X" across the tent. Run the assembled pole sections through the sleeves and insert the poles through the "red" color coated prong attached to the tent.

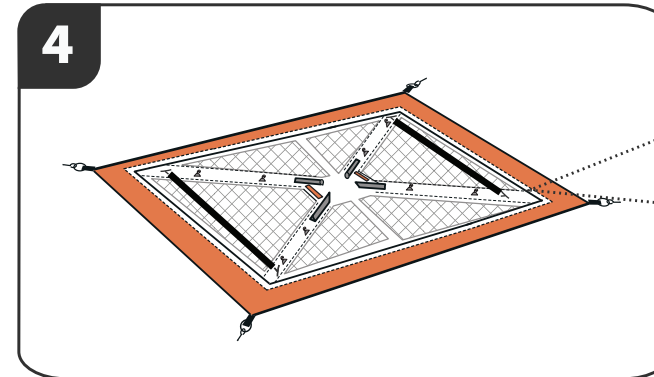


STEP 4: Insert the "yellow" color coated steel pole into the "yellow" color coated side of the prongs on both sides of the tent. (repeat for both sides)

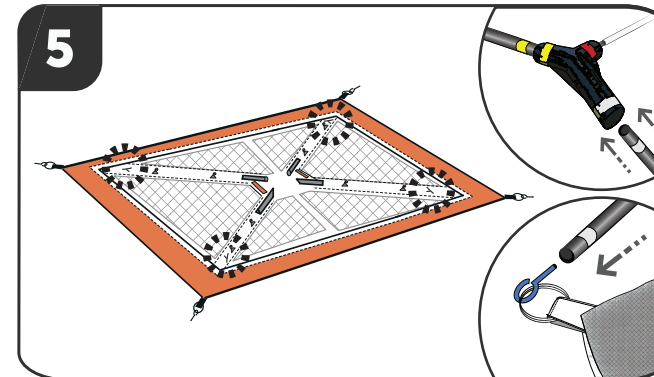


STEP 5: To erect the tent, insert the "white" color coated steel pole into the "white" color coated side of the prongs on the corners of the tent. Then insert the pin and ring attached on the corner of the tent into the open metal ferrule at the end of the pole assembly to secure the tent(repeat for all 4 corners)

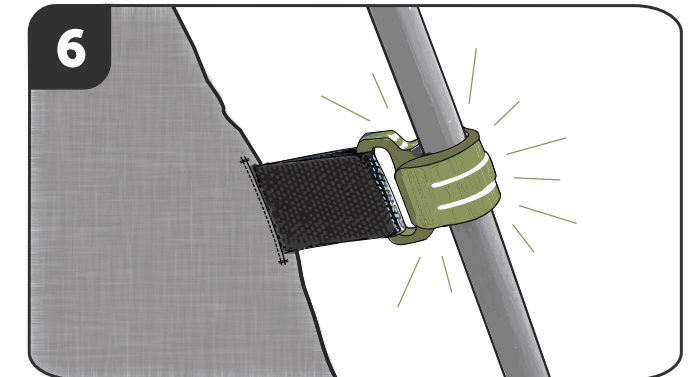


STEP 6: Fasten the tent clips to the pole assembly for further security.

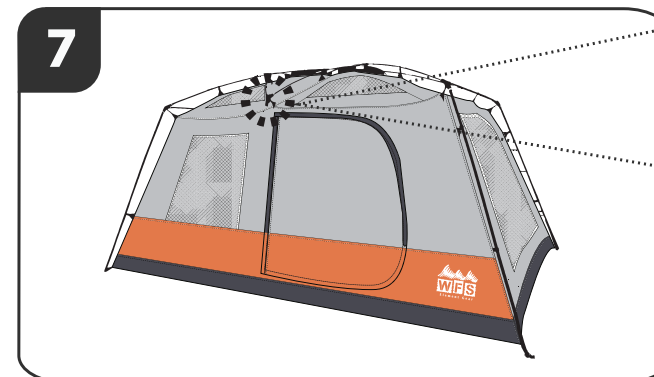

STEP 7: Slide the remaining fiber glass poles through the orange sleeves located on the top of the tent and secure them in the prong with the "green" coated tape to erect the roof.

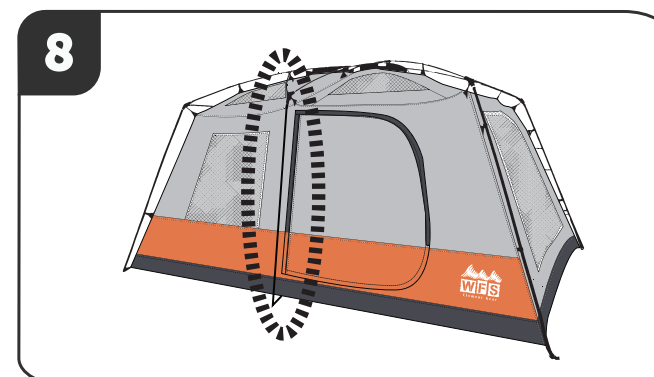

STEP 8: Insert the remaining steel poles through the "green" color coated prong to secure the middle of the tent. (Repeat for both sides)

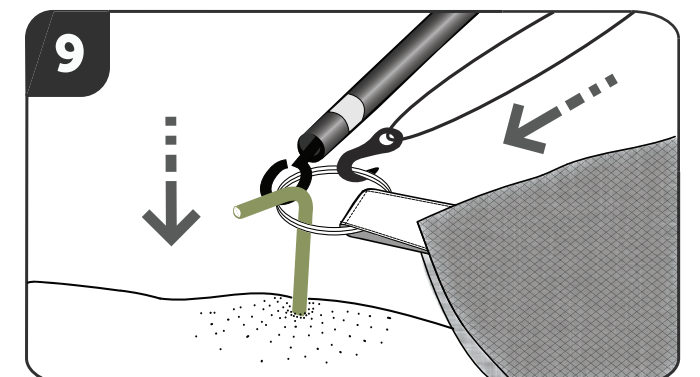

STEP 9: Securely attach the rainfly to each leg of the tent with the plastic hook, then insert tent Stake into the ground through the small pin and ring on each corner of the tent and middle of bottom.