


STEP 8: After all legs are unfolded, fold each leg onto itself towards the center of the tent.



STEP 9: Fold each leg onto itself again towards the center, and neatly roll up the tent to put away.

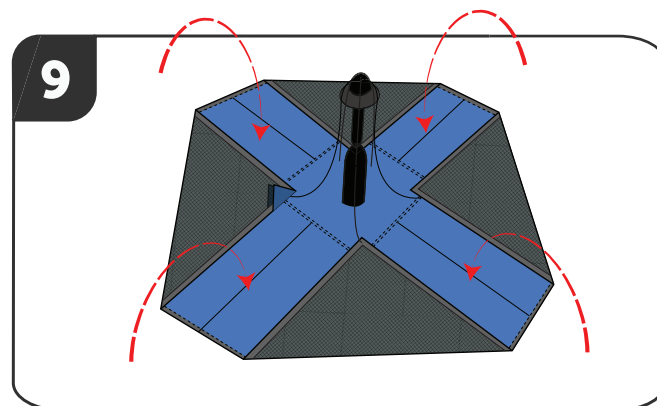

FINAL CHECK LIST

☐

Double check the tent poles are secure in the eyelets.

☐

All stakes are secured into the ground.

☐

Pop-up Mechanism is locked.

Please watch our online video "743 Pop Up Tent Instructions" for further help.



<https://www.youtube.com/watch?v=UmRFojtrJKE>

For any questions or concerns please call our toll free customer service line.

WORLDFAMOUSSPORTS.COM

(833) 937-1234

(833) WFS-1234



INSTRUCTION MANUAL

MODEL #: 743

IMPORTANT

Treat your tent seams with waterproofing. Set up your tent at home before your first camping trip. A dark campsite is no place to learn how to assemble your WORLD FAMOUS SPORTS tent. Read assembly instructions with care. When selecting a campsite, make sure you find a flat area with good drainage free from all sharp objects. Protect your investment.






This product can expose you to chemicals including Diethylhexyl Phthalate, which is known to the state of California to cause cancer, birth defects, or other reproductive harm. For more info go to: [www. P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)


PARTS

PARTS IDENTIFICATION:


- A. Tent(1)
- B. Pop-up Mechanism
- C. Carry Bag.....(1)
- D. Tent Stakes (8)

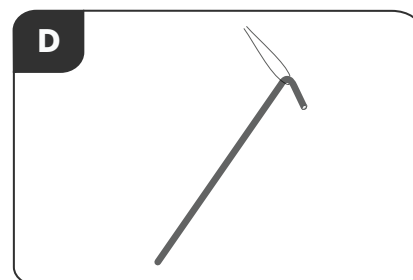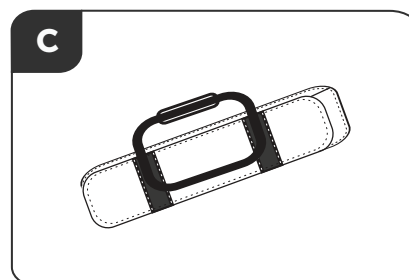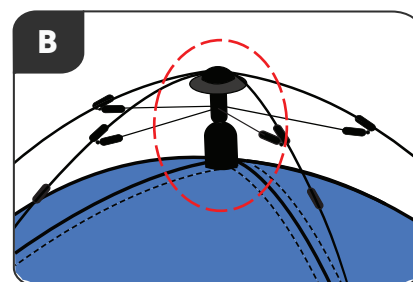



ASSEMBLY

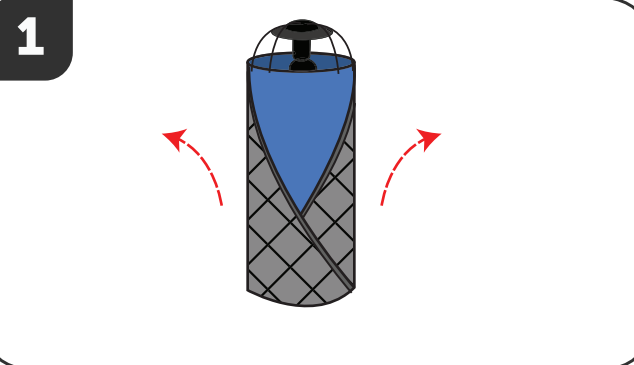

STEP 1: Erect and spread the tent out on a clear camp area. Remove all stones and sharp objects.

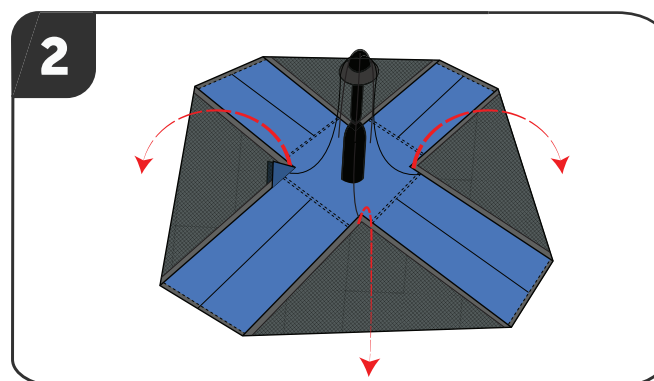


STEP 2: Unfold & spread each leg (fiberglass pole) outwards from the center.

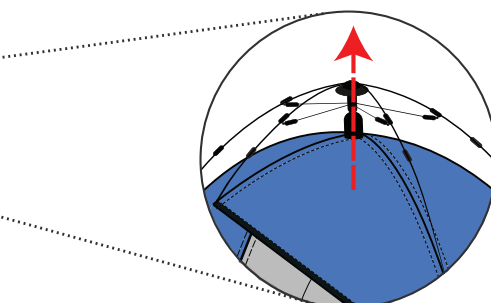
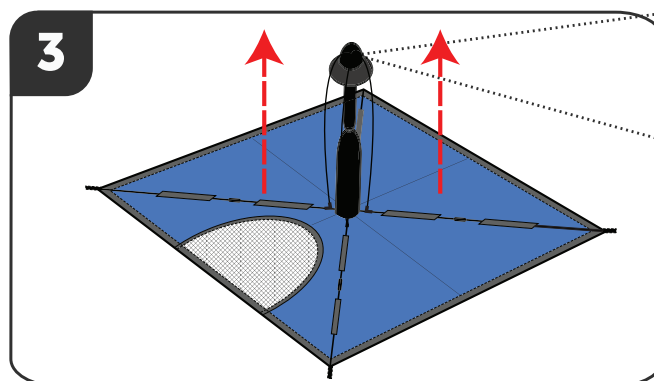


STEP 3: After all legs are unfolded, lift up from the Pop-up Mechanism to erect the tent.

4

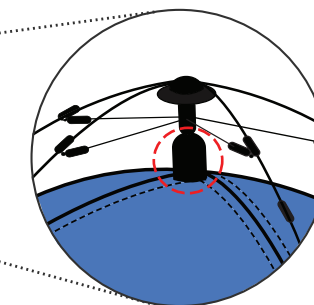


STEP 4: After successfully erecting the tent - Push down on the base of the Pop-up Mechanism to lock the tent in place.

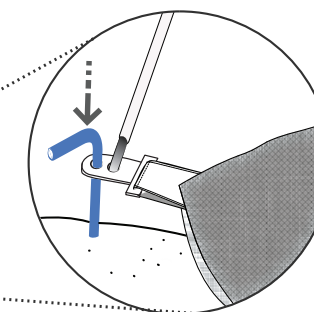
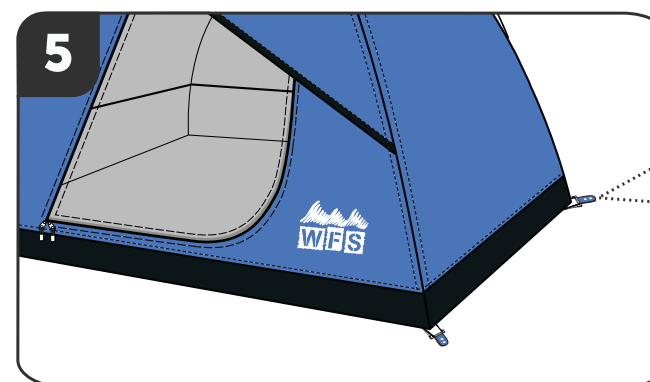


STEP 5: Securely insert a Stake into the ground through the plastic grommet attached on the corner of the tent. **Repeat for all four corners.**

DISASSEMBLY

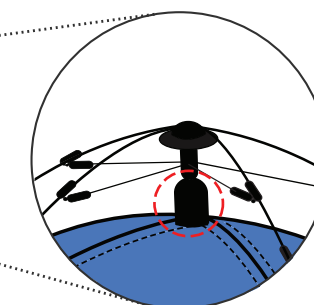

STEP 6: To disassemble, first unlock the base of the Pop-up Mechanism by pushing up on it.

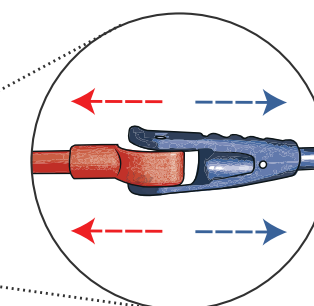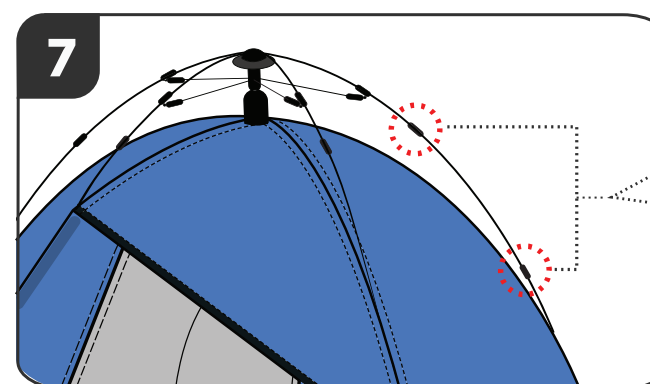

STEP 7: To fold the legs back in, pull apart at the joints to unlock the legs. **Repeat for all 4 legs of the tent.**
 (Legs do not fully separate)