FINAL CHECK LIST



Double check the tent poles are secure in the eyelets.

All stakes are secured into the ground.



Rainfly is securely attached to rings.

Enjoy your new World Famous Sports tent.



For any questions or concerns please call our toll free customer service line.

WORLDFAMOUSSPORTS.COM

(833) 937-1234 (833) WFS-1234





INSTRUCTION MANUAL MODEL #: ARROYO CREEK

IMPORTANT

Treat your tent seams with waterproofing. Set up your tent at home before your first camping trip. A dark campsite is no place to learn how to assemble your WORLD FAMOUS SPORTS tent. Read assembly instructions with care. When selecting a campsite, make sure you find a flat area with good drainage free from all sharp objects. Protect your investment.





This product can expose you to chemicals including Diethylhexyl Phthalate, which is known to the state of California to cause cancer, birth defects, or other reproductive harm. For more info go to: **www. P65Warnings.ca.gov**


PARTS

PARTS IDENTIFICATION:

- A. Tent(1)
- **B.** Rainfly(1)
- C. Shock Corded Fiber Glass Poles..(2)
- **D.** Tent Stakes (10)
- **E.** Mudflap (1)

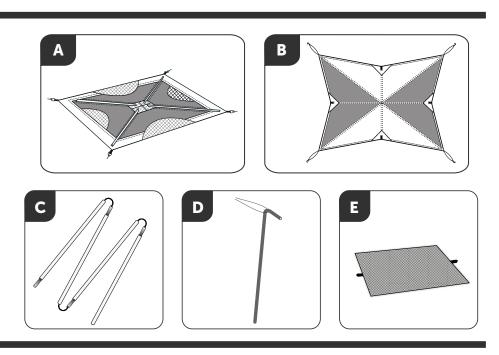


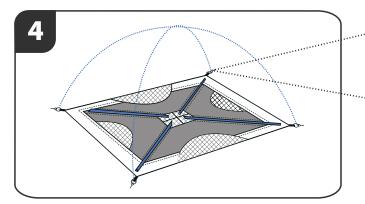

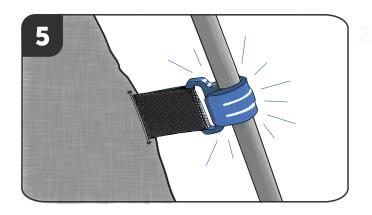


STEP 5: Fasten the tent clips to the pole assembly for further security.


ASSEMBLY

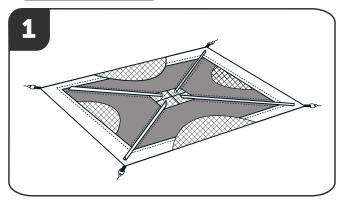


STEP 1: Unfold and spread the tent out on clear camp area. Remove all stones and sharp objects.

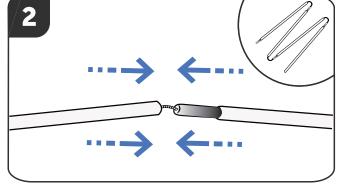



STEP 2: Assemble all shock corded poles by unfolding and slipping shafts together.

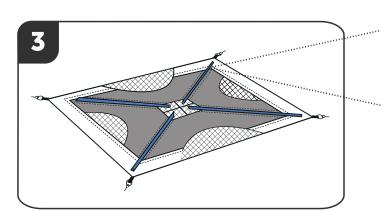

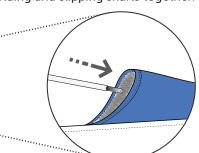


STEP 3: Lay the two pole assemblies across the tent to form an "X" across the tent. (If your tent comes with sleeves, run the assembled pole sections through the sleeves before attempting to erect the tent).

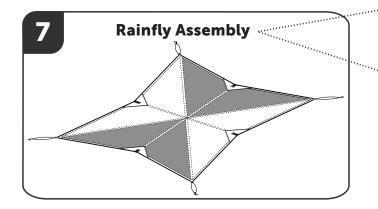


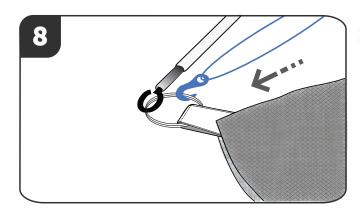


STEP 8: Each corner of the rainfly has a bungee cord with plastic "S" hooks - Attach each "S" hook to tent's pin and ring.

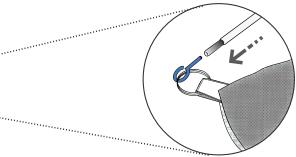


STEP 4: Insert the pin and ring attached on the corner of the tent into the open metal furrule at the end of the pole assembly, **Repeat for all four corners.** In repeating the procedure, you have now formed two arches.

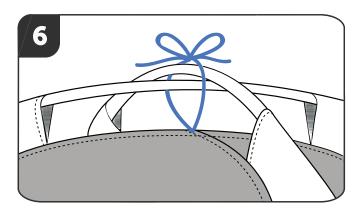

STEP 6: Tie the two arched pole assemblies together with the ties at the top of the tent.

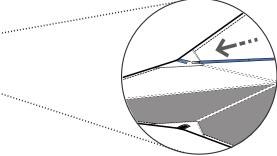

STEP 7: Spread out the rainfly over the top of the tent to prevent debris from entering the tent.

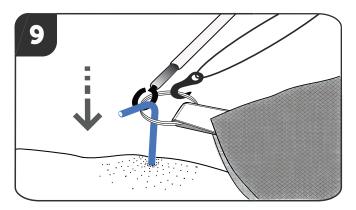

STEP 9: Securely insert tent Stake into the ground through the small pin and ring on each corner of the tent and middle of bottom.