


FINAL CHECK LIST

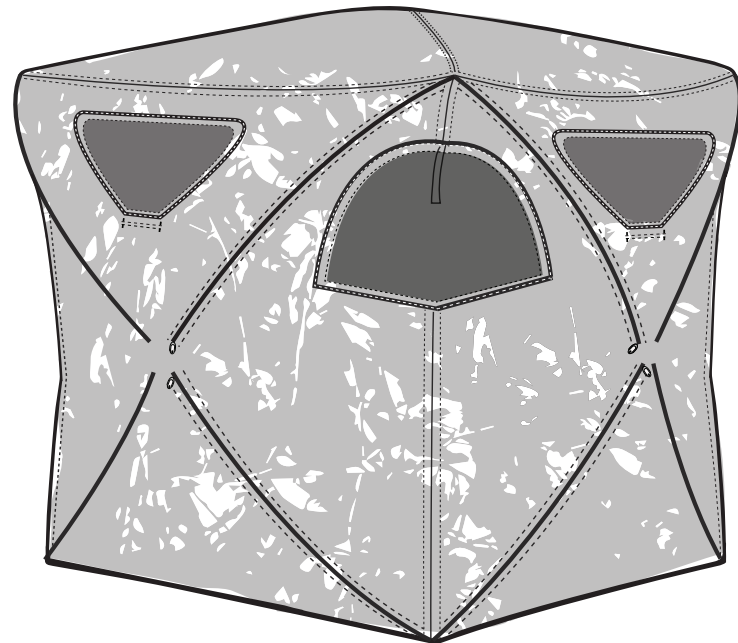

- Double check all web handles are fully extended.
- Roof top is securely attached to the hunting blind.
- All stakes are secured into the ground.

Enjoy your new **World Famous Sports**
Hunting Blind.



For any questions or concerns please call our toll free customer service line.


WORLDFAMOUSSPORTS.COM

(833) 937-1234

(833) WFS-1234



" THE HILLTOP "

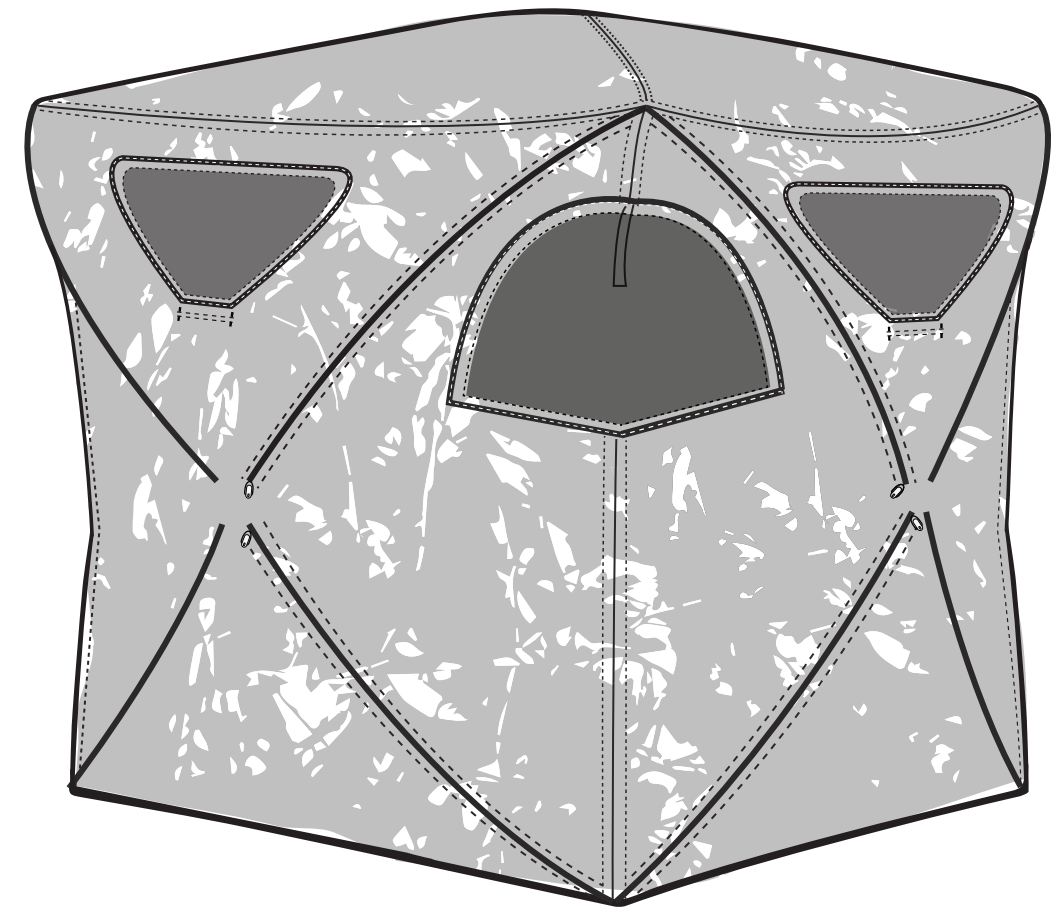

INSTRUCTION MANUAL

MODEL #: HB-8222

IMPORTANT

Read assembly instructions with care. When selecting a hunting site, make sure you find a flat area with good drainage free from all sharp objects. This product is not fire proof, the fabric will burn if it comes into contact with an open flame or fuel source, keep product away from direct flame. Protect your investment.






This product can expose you to chemicals including Diethylhexyl Phthalate, which is known to the state of California to cause cancer, birth defects, or other reproductive harm. For more info go to: [www. P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)


PARTS

PARTS IDENTIFICATION:


- A. Hunting Blind(1)
- B. Carry Bag(1)
- C. Stakes (4)

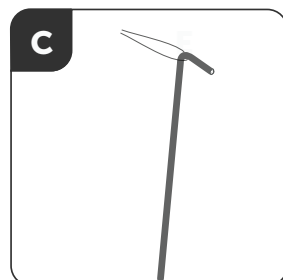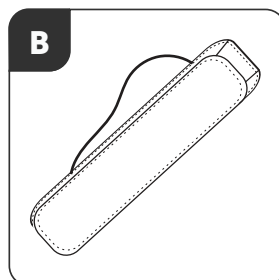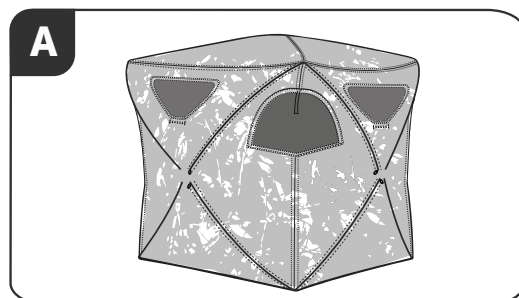



ASSEMBLY

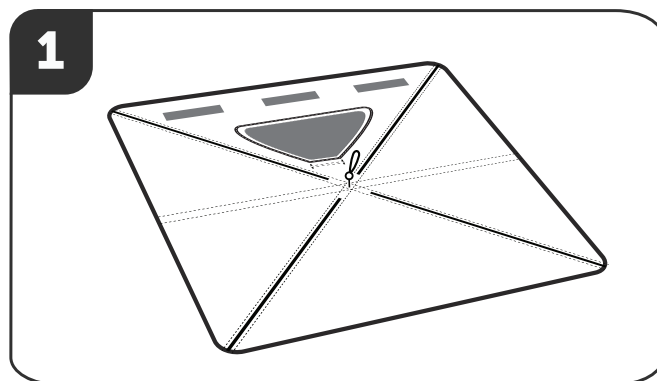

STEP 1: Unfold and spread the Hunting Blind out on a clear hunting area. Remove all stones and sharp objects.


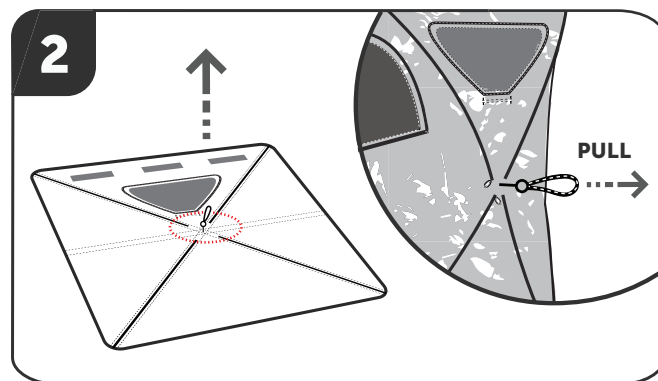


STEP 2: Pull firmly on the web handle located on the sides of the Hub. **(Repeat for all 4 sides)**

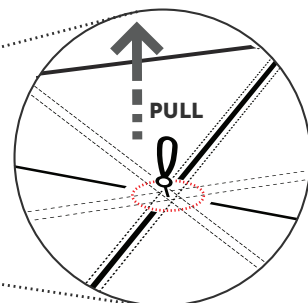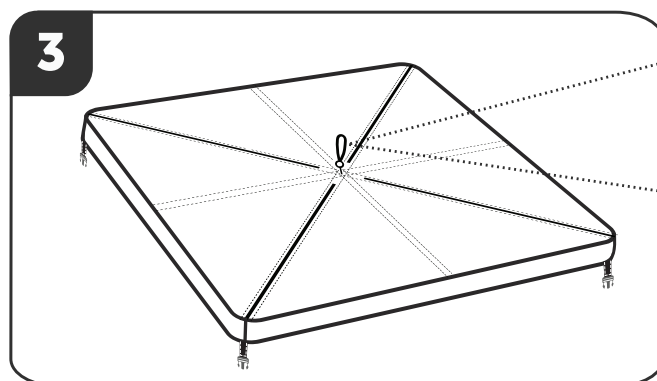


STEP 3: Unfold and spread the separated roof out on a clear hunting area. Then pull firmly on the web handle located on the top of the roof.

4

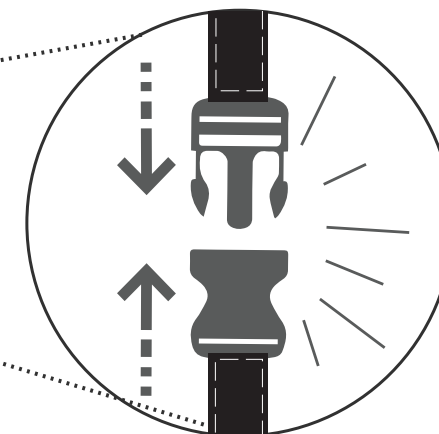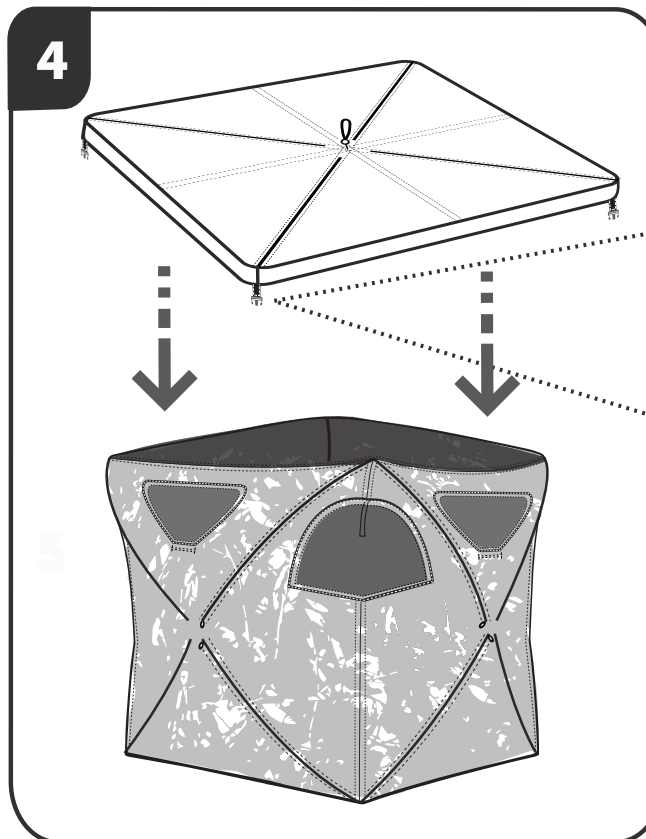


STEP 4: After the roof is fully assembled, attach the roof to the top of the Hunting Blind by fastening the buckles located on the corners of the roof and the corners of the Hub.


DISASSEMBLY

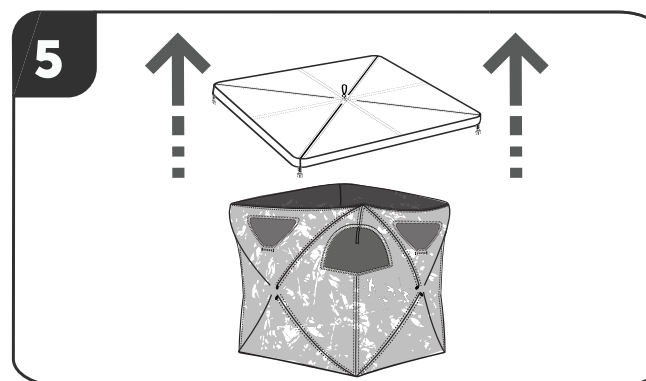

STEP 5: To disassemble, first detach and remove the roof of the Hunting Blind. Firmly push in on the web handle to correctly close the roof.

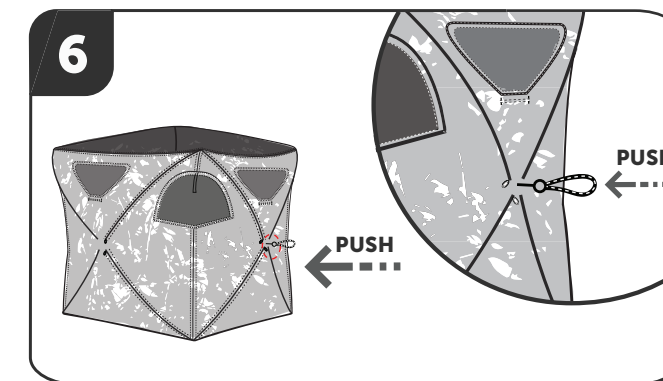

STEP 6: To take down the hub, push firmly on the web handle located on the sides of the Hub. **(Repeat for all 4 sides)**

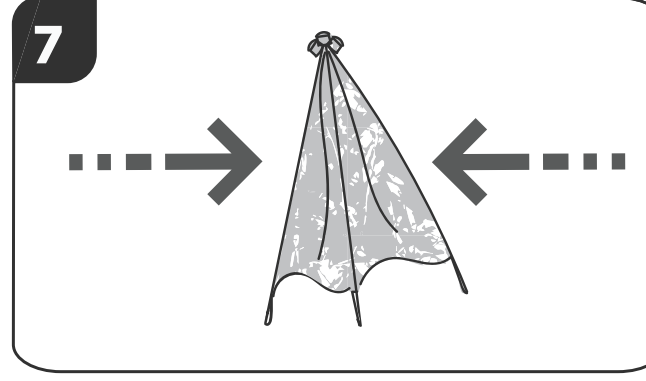

STEP 7: Finally, neatly fold and close up the Hunting Blind and place back into carry bag for safe keeping.