


" THE LOOKOUT "

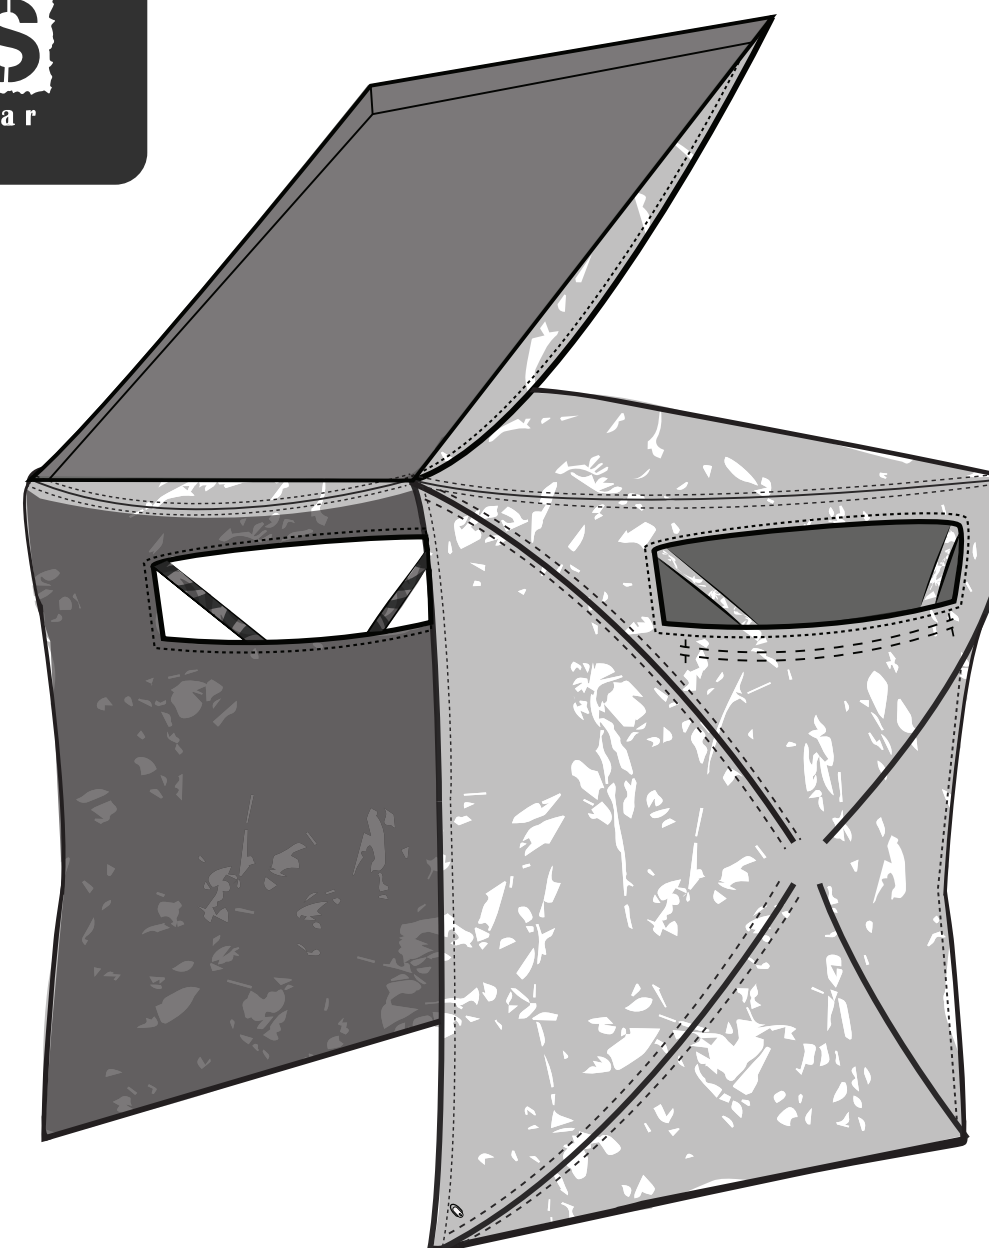

INSTRUCTION MANUAL

MODEL #: HB-8223

For any questions or concerns please call our toll free customer service line.

WORLDFAMOUSSPORTS.COM

(833) 937-1234

(833) WFS-1234

IMPORTANT

Read assembly instructions with care. When selecting a hunting site, make sure you find a flat area with good drainage free from all sharp objects. This product is not fire proof, the fabric will burn if it comes into contact with an open flame or fuel source, keep product away from direct flame. Protect your investment.






This product can expose you to chemicals including Diethylhexyl Phthalate, which is known to the state of California to cause cancer, birth defects, or other reproductive harm. For more info go to: [www. P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)


PARTS

PARTS IDENTIFICATION:


- A. Hunting Blind(1)
- B. Carry Bag(1)
- C. Stakes (4)

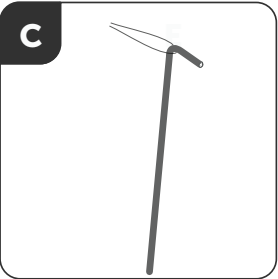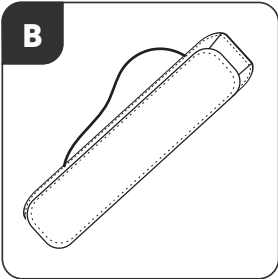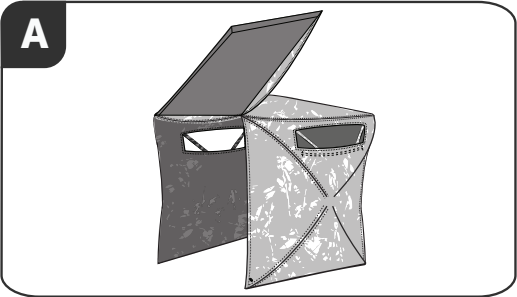


ASSEMBLY

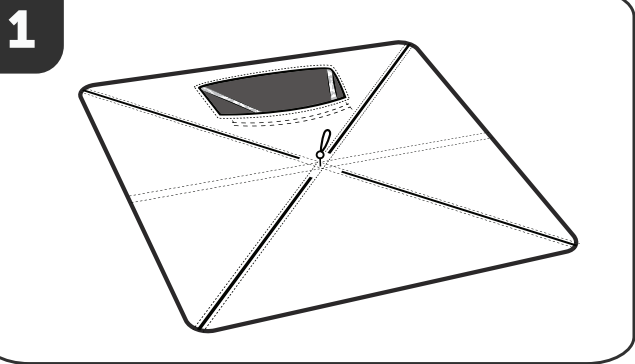

STEP 1: Unfold and spread the Hunting Blind out on a clear hunting area. Remove all stones and sharp objects.

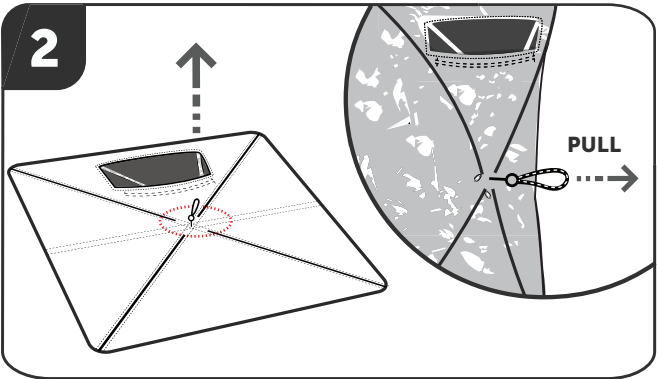


STEP 2: Pull firmly on the web handle located on the sides of the Hub. **(Repeat for all sides)**

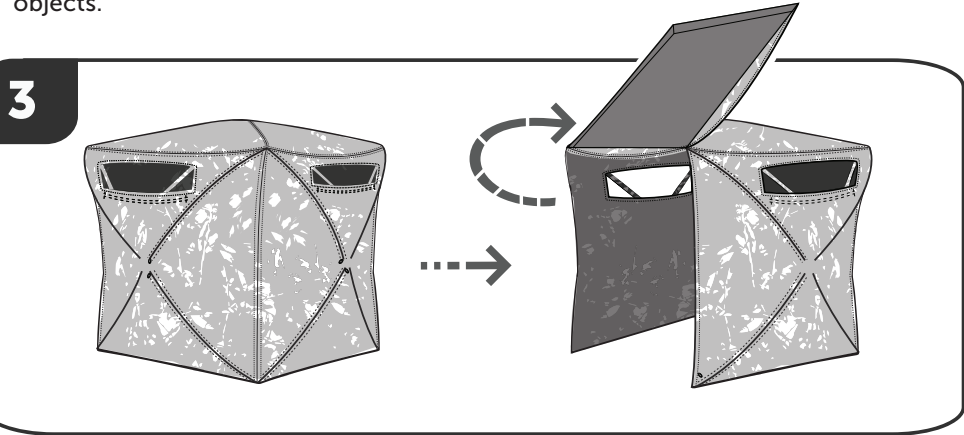


STEP 3: After all 4 sides are fully engaged, the Hunting Blind should be fully erect. After the Hunting Blind is fully erected, you should be able to enter/exit through the garage door by swinging the door upward.

DISASSEMBLY

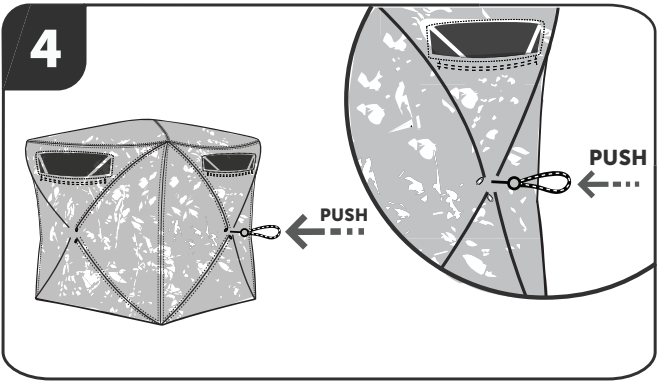

STEP 4: To take down the Hunting Blind, push firmly on the web handle located on the sides of the Hub. **(Repeat for all sides)**

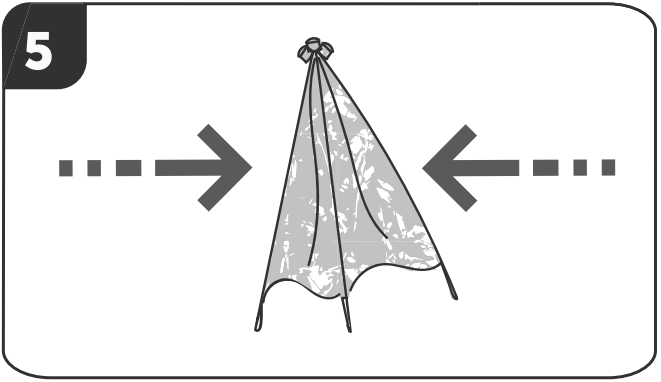

STEP 5: Finally, neatly fold and close up the Hunting Blind and place back into carry bag for safe keeping.

FINAL CHECK LIST



- ☐ Double check all web handles are fully extended.
- ☐ Garage door is fully open/closed.
- ☐ All stakes are secured into the ground.

Enjoy your new **World Famous Sports** Hunting Blind.