 
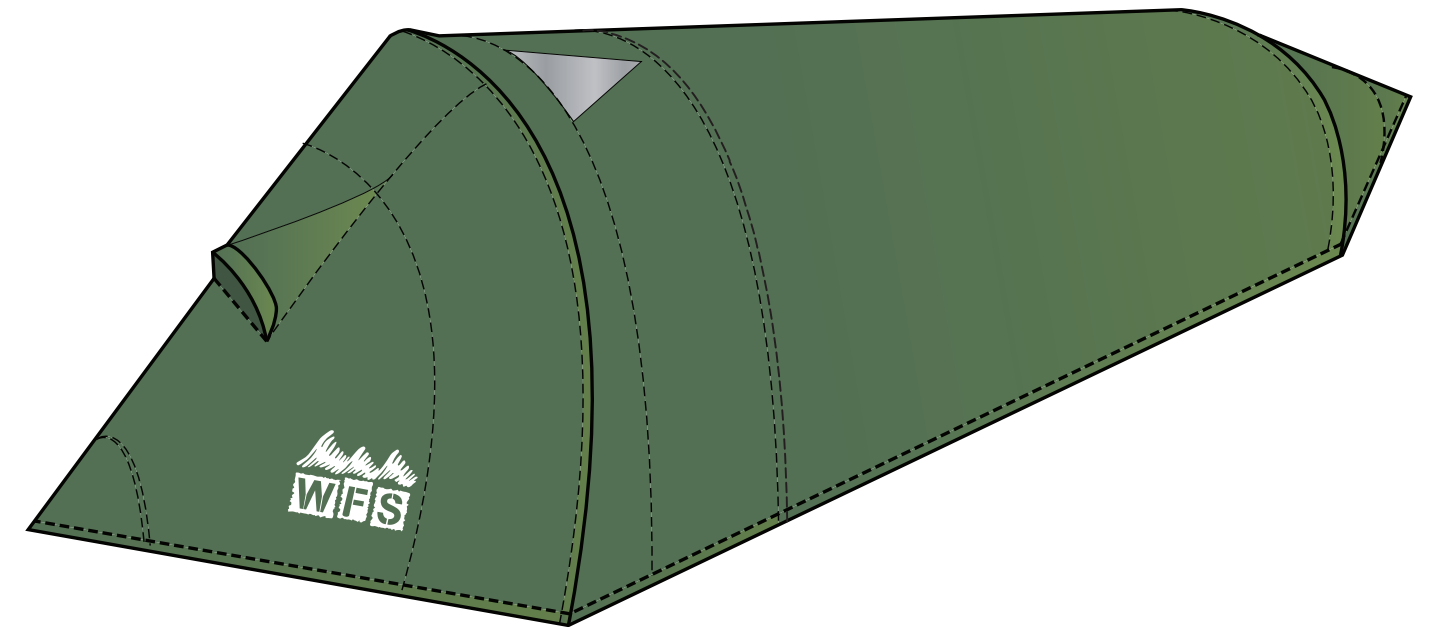 


**Enjoy your new
World Famous Sports tent.**

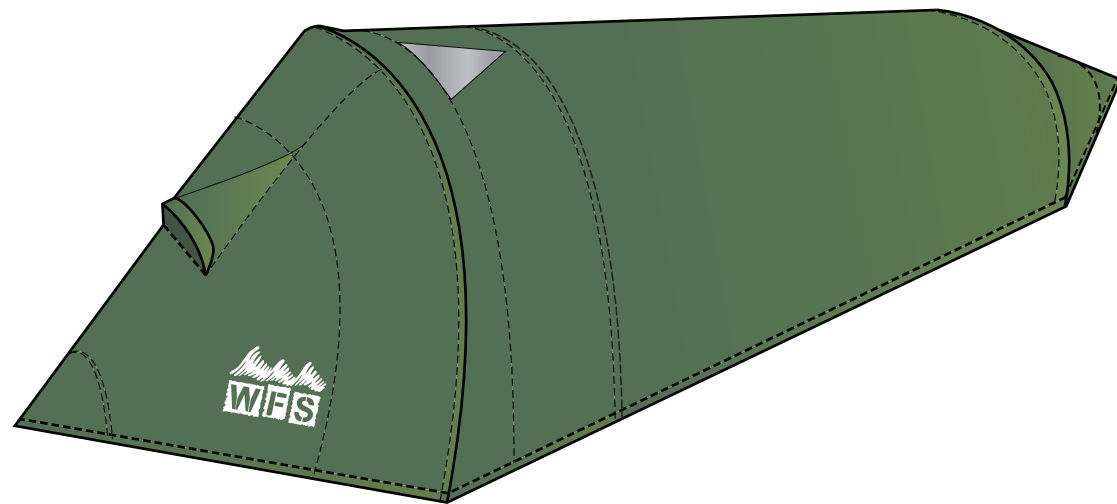

For any questions or concerns please call our toll free customer service line.

WORLDFAMOUSSPORTS.COM

(833) 937-1234

(833) WFS-1234

INSTRUCTION MANUAL

MODEL #: T-BIVY

IMPORTANT

Treat your tent seams with waterproofing. Set up your tent at home before your first camping trip. A dark campsite is no place to learn how to assemble your WORLD FAMOUS SPORTS tent. Read assembly instructions with care. When selecting a campsite, make sure you find a flat area with good drainage free from all sharp objects. Protect your investment.

 
 
 
 


This product can expose you to chemicals including Diethylhexyl Phthalate, which is known to the state of California to cause cancer, birth defects, or other reproductive harm. For more info go to: www.P65Warnings.ca.gov


PARTS

PARTS IDENTIFICATION:


- A. Tent(1)
- B. Rainfly(1)
- C. Carry Bag.....(1)
- D. Shock Corded Fiber Glass Poles..(2)
- E. Tent Stakes (6)

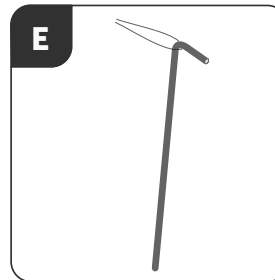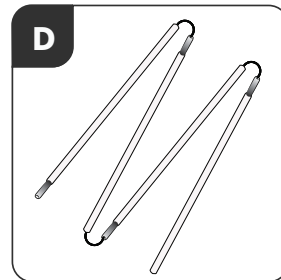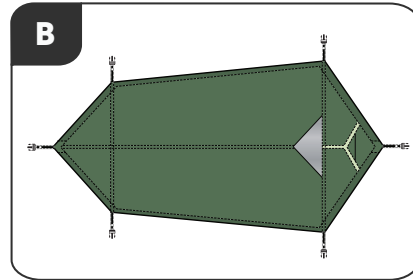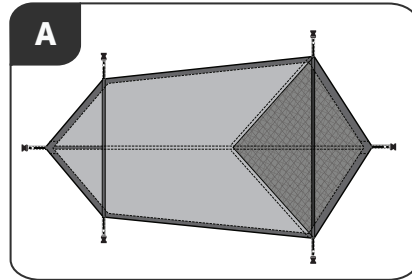


ASSEMBLY

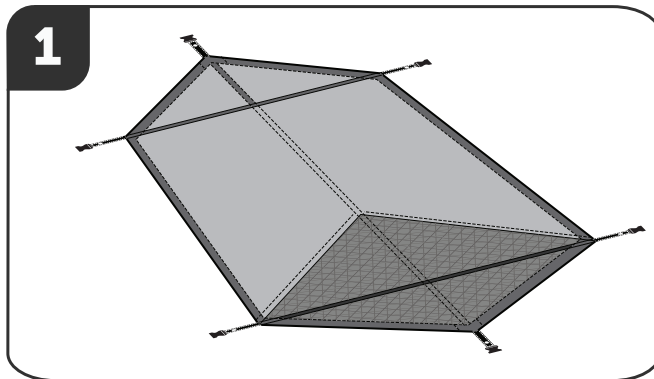 

 
STEP 1: Unfold and spread the tent out on clear camp area. Remove all stones and sharp objects.

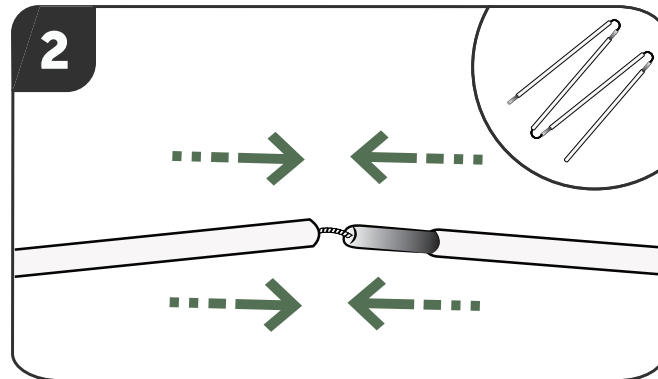

 
STEP 2: Assemble all shock-corded poles by unfolding and slipping shafts together.

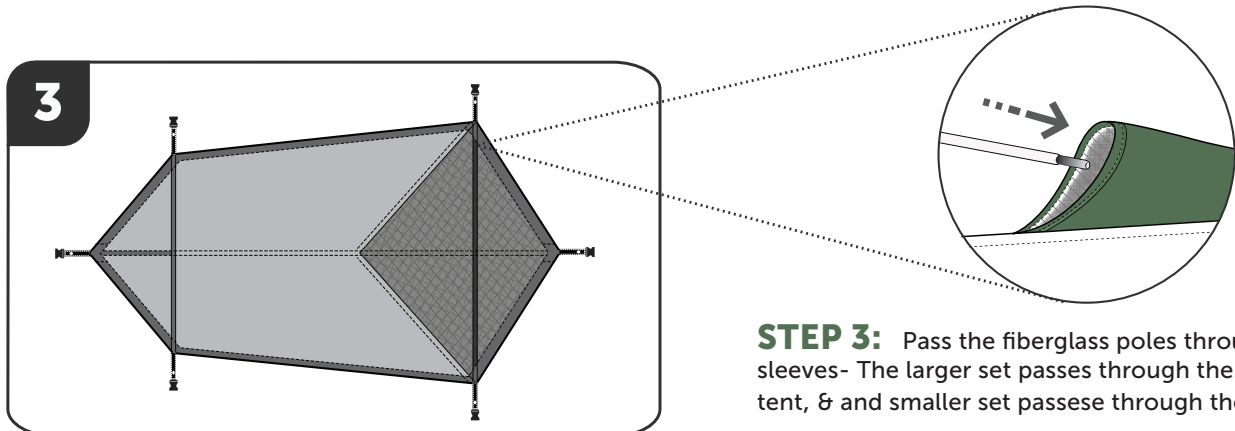

 
STEP 3: Pass the fiberglass poles through the tent sleeves- The larger set passes through the wider side of the tent, & smaller set passes through the narrow side.

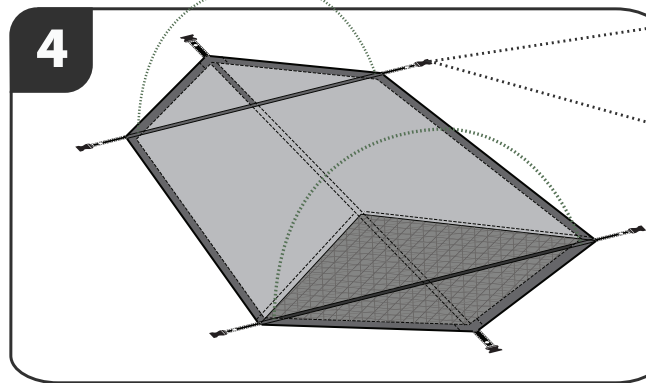

 STEP 4: Insert the poles into the grommet attached to the corner of the tent. **Repeat for all four corners.** In repeating the procedure, you have now erected the tent.

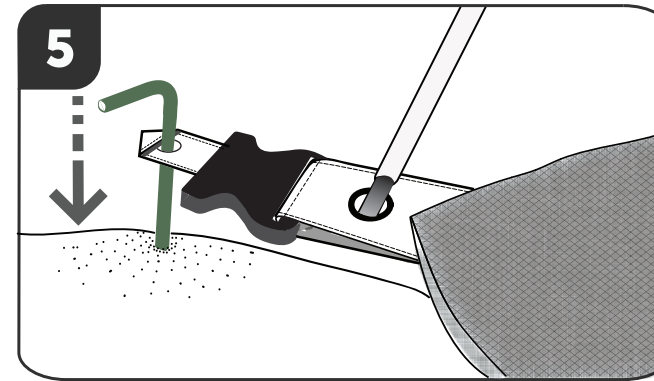

 STEP 5: To keep the tent erect, securely insert a peg into the ground through the small loops found on each corner of the straps with buckles.

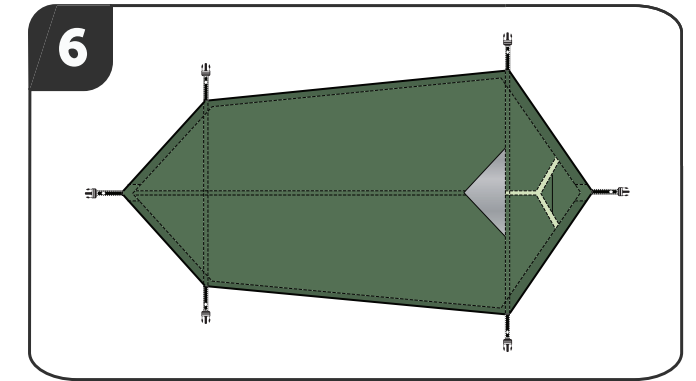

STEP 6: Spread the rainfly over the top of the tent- The view through window corresponds with the mesh side.



STEP 7: Each corner of the rainfly has a shock-cord with plastic buckles- Attach each plastic buckle from the rainfly to its corresponding part from the tent.

FINAL CHECK LIST



- Double check the tent poles are secure in the eyelets.
- All stakes are secured into the ground.
- Rainfly is securely attached to buckles.