

Regular maintenance on your trailer is as important.. Neglecting your trailer maintenance could lead to potential hazards on the road which could be dangerous. Below is our recommended maintenance schedule and checklist to keep your trailer safe and road worthy all year round.

For Each Trip:

- **Tires -** Check tire pressure and tread wear before every road trip, no matter how short the trip is.
- · **Lights** Check to make sure your lights are connected and functioning properly
- · Breakaway switch Pull pin and test for proper function
- · Breakaway battery Check battery charge level
- · Trailer Brakes Test braking function and performance

Every 3,000 miles or 3 months:

Lug nuts (wheel bolts) - Make sure your wheel bolts are tightened to the specified torque

Every 6,000 miles or 6 months:

Brake adjustment (this is not required for Nev-R-Adjust brakes) - Test for proper drag (light drag) and adjust as needed

Every 12,000 miles or 12 months:

- · Wheels Check for cracks or dents See: How to inspect a trailer wheel
- · Hub and drum assemblies Check for scoring or wear
- · Wheel bearings Repack bearings and check for damage or wear
- · Seals-Check for damage or leaks
- · Brake assemblies Check internal parts for wear, leaks, or damage
- · Brake magnets Check for wear and replace if surface is grooved or copper windings are exposed
- · Hydraulic brakes Bleed brakes and change brake fluid
- · Springs Check for broken or flattened springs
- · Suspension Check for worn or loose fasteners and shackle link wear

We have a full service garage for any trailer maintenance or modifications you may need.