
HOW TO INSTALL

Once ECM tuner is installed and fairing speedometer cluster is back together

You will go to Apple or Google Play and download the recommended app or scan the barcode on the box provided.

Next step once the app is downloaded use CODE 0101 TO ACTIVATE APP. It will instruct you to turn the ignition on and hold the throttle wide open to recognizing the ECM PROVIDED

(DO NOT START THE BIKE, JUST HAVE THE IGNITION ON)

Then follow app instructions to program the ECM and off you go.

To use the lock function and park function hold the icon down till the screen opens and set a 3-digit password to your liking.


Remember you can also have the app automatically remember the last position you had set, or you can have it also turn off so you must turn the app on for your last setting.

ECM POSITION

INSIDE ODOMETER BY REMOVING IT



ROAD GLIDE ALL MODELS

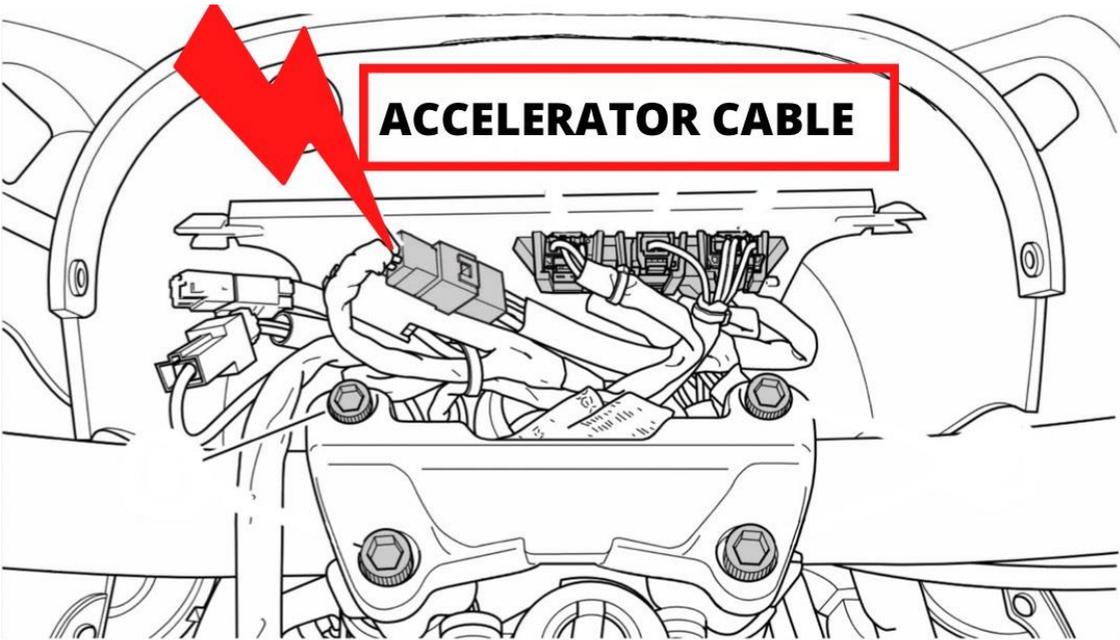


**INSIDE OF THE ODOMETER OF THE
ROAD GLIDE FROM 2008 TO 2022**

ECM POSITION

INSIDE BATWING BY REMOVING IT



STREET GLIDE ALL MODELS

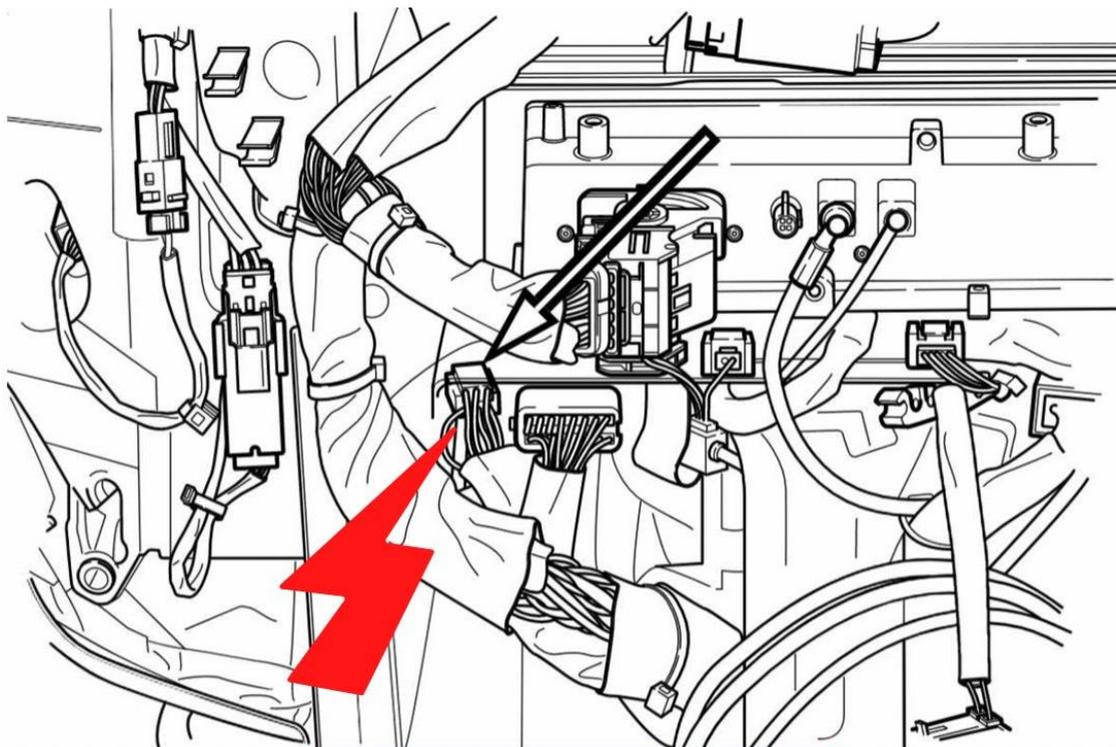

ACCELERATOR CABLE

**UNDER THE BATWING OF THE
STREET GLIDE FROM 2008 TO 2022**


ECM POSITION

**INSIDE CHASSIS BY REMOVING
THE RUBBER ON THE LEFT SIDE**



SOFTAIL M8 107-114-117

ACCELERATOR CABLE

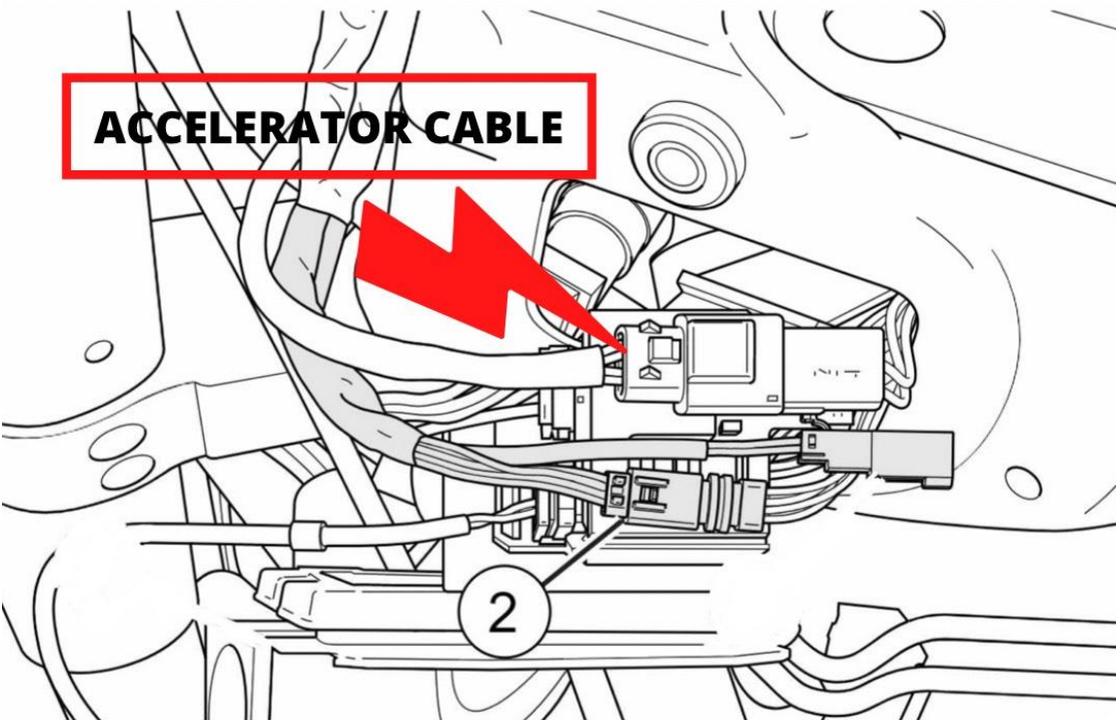

**SOFTAIL MODELS
FROM 2016 TO 2022
107-114-117**


**IN THE LEFT SIDE OF THE CHASSIS
UNDER THE RUBBER NEAR THE FORK**

ECM POSITION

**BEHIND FRONT LIGHT LEFT SIDE
NOTHING TO REMOVE**



ROAD KING M8

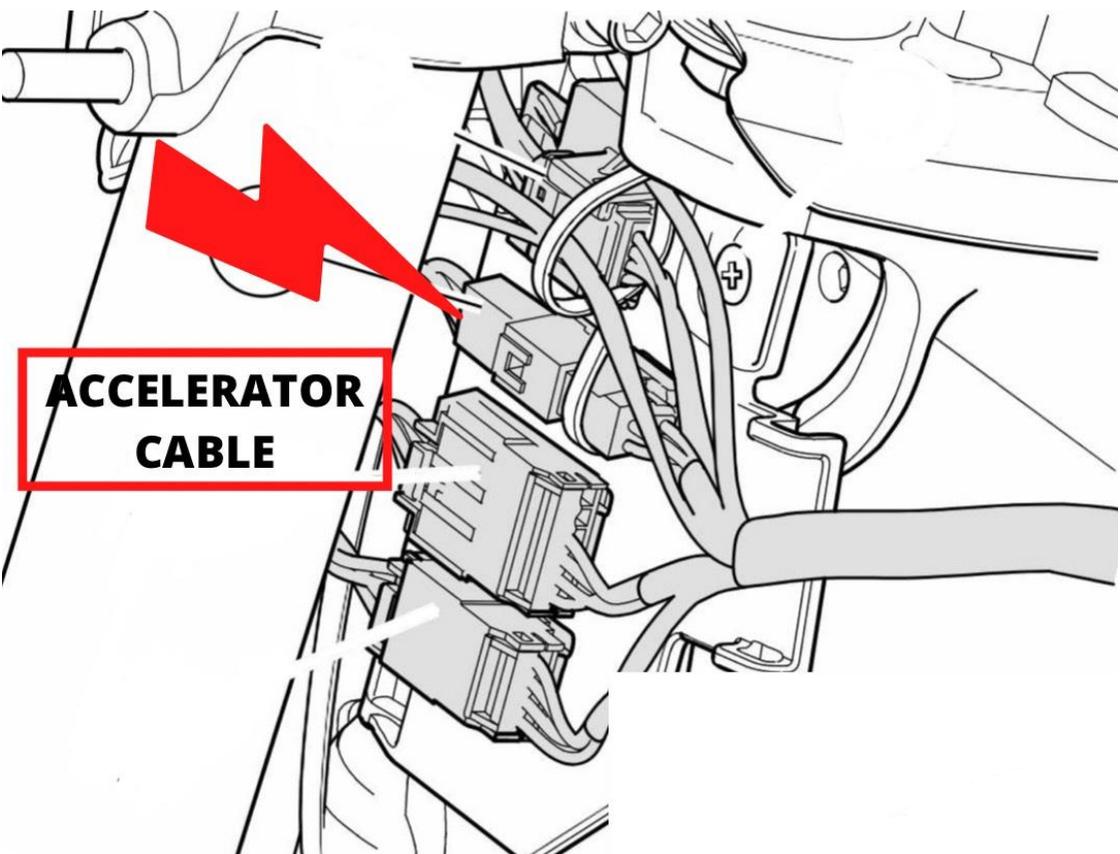

**ACCELERATOR
CABLE**

ROAD KING FROM 2016

**BEHIND THE FRONT LIGHT
ON THE LEFT SIDE**

ECM POSITION

**INSIDE OF THE FRONT LIGHT
BY REMOVING IT**




ROAD KING 2008-2015

ECM POSITION

UNDER TANK RIGHT SIDE



DYNA S110-103

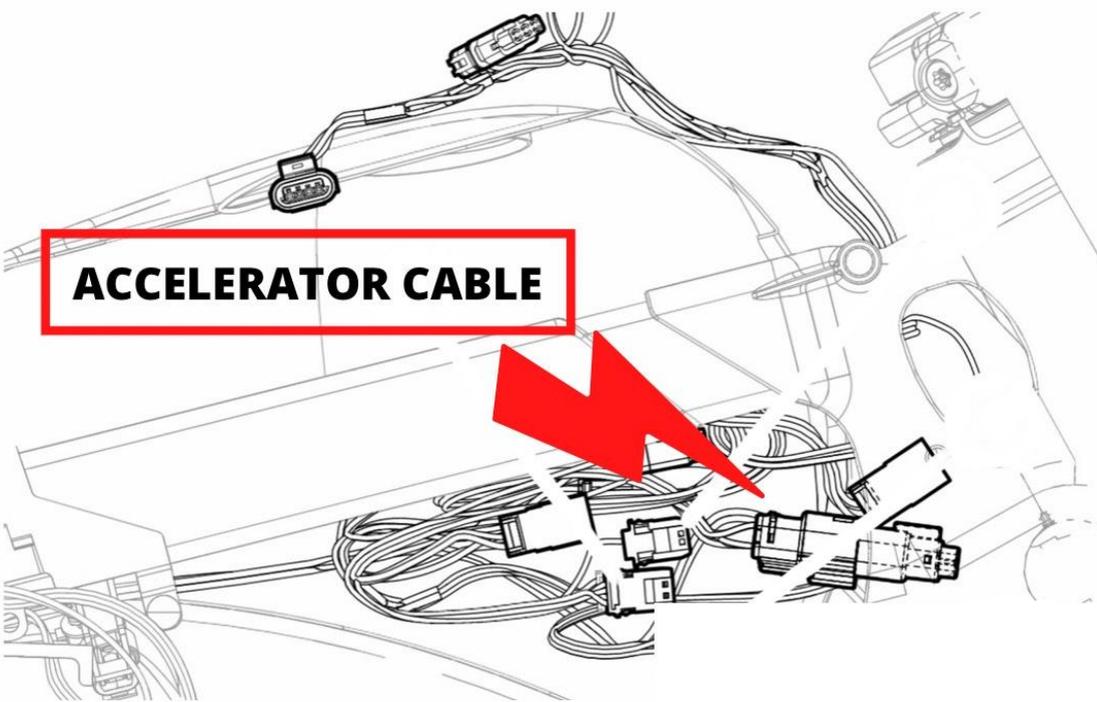


ACCELERATOR CABLE

**DYNA S 110 SOFTAIL 103
2016-2017**


**UNDER THE PETROL TANK
ON THE RIGHT SIDE**




THE UNIT IS POSITIONED INSIDE THE ODOMETER

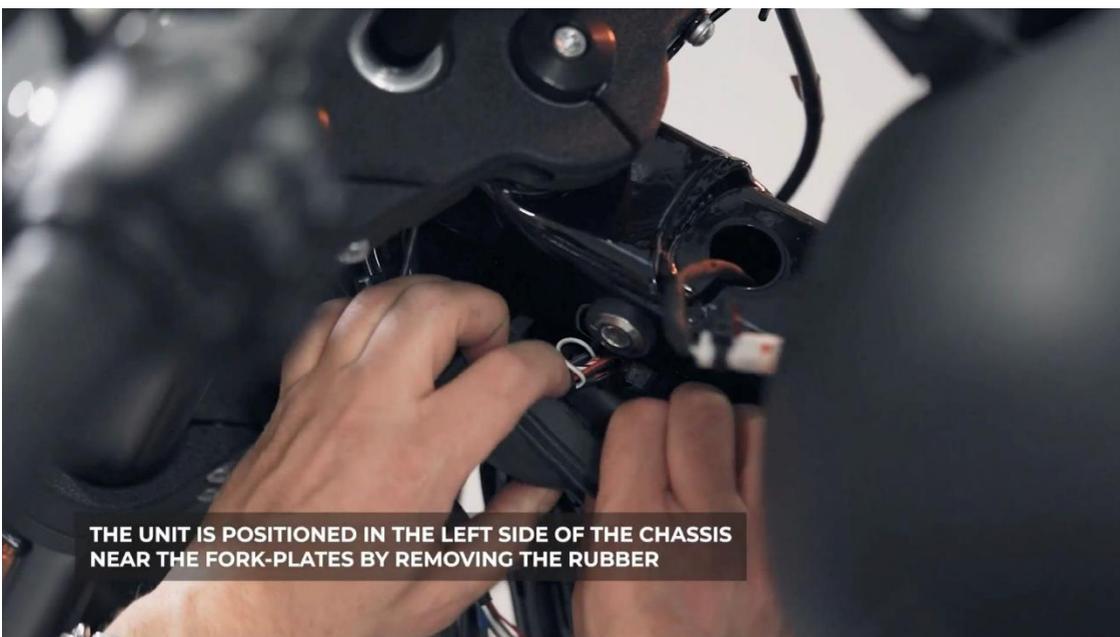

**THE UNIT IS POSITIONED IN THE LEFT SIDE OF THE CHASSIS
NEAR THE FORK-PLATES BY REMOVING THE RUBBER**

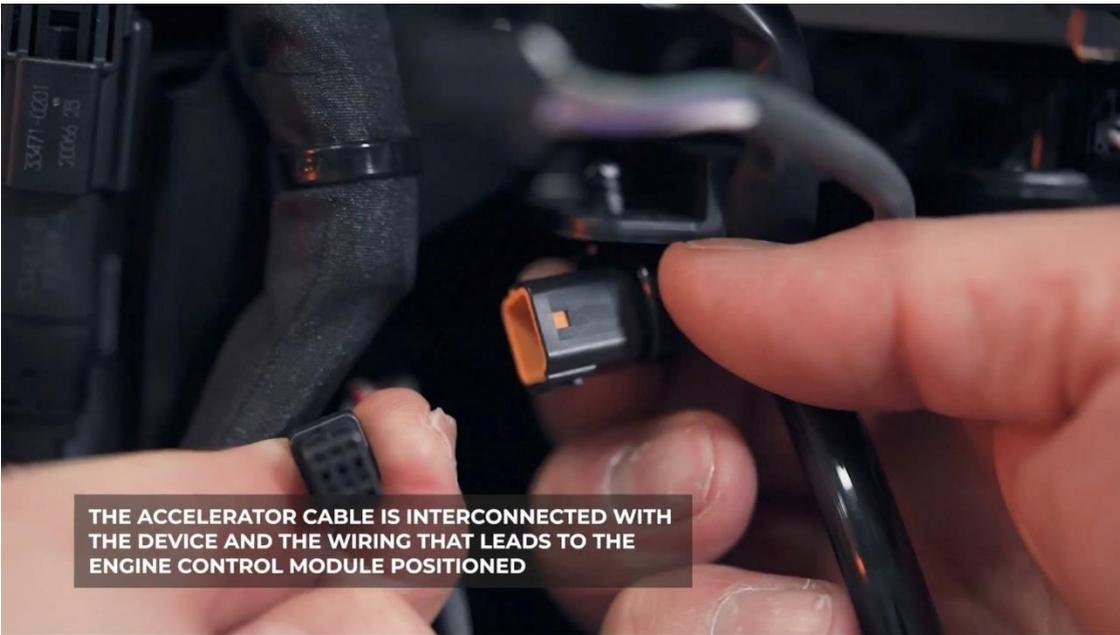

THE ACCELERATOR CABLE IS INTERCONNECTED WITH THE DEVICE AND THE WIRING THAT LEADS TO THE ENGINE CONTROL MODULE POSITIONED

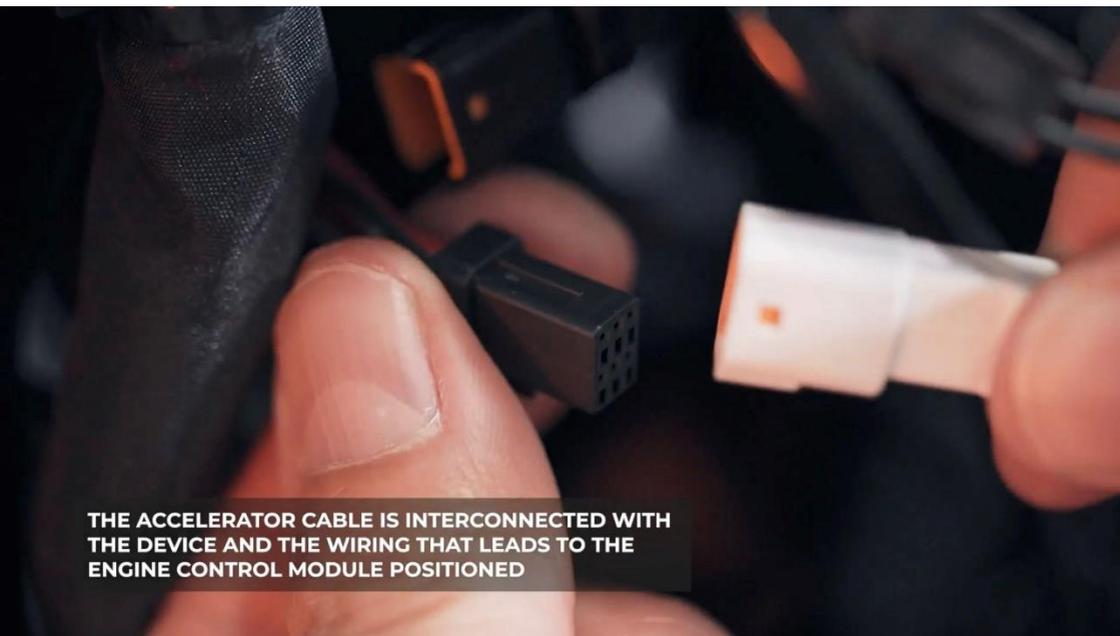


THE ACCELERATOR CABLE IS INTERCONNECTED WITH THE DEVICE AND THE WIRING THAT LEADS TO THE ENGINE CONTROL MODULE POSITIONED



THE ACCELERATOR CABLE IS INTERCONNECTED WITH THE DEVICE AND THE WIRING THAT LEADS TO THE ENGINE CONTROL MODULE POSITIONED



THE ACCELERATOR CABLE IS INTERCONNECTED WITH THE DEVICE AND THE WIRING THAT LEADS TO THE ENGINE CONTROL MODULE POSITIONED

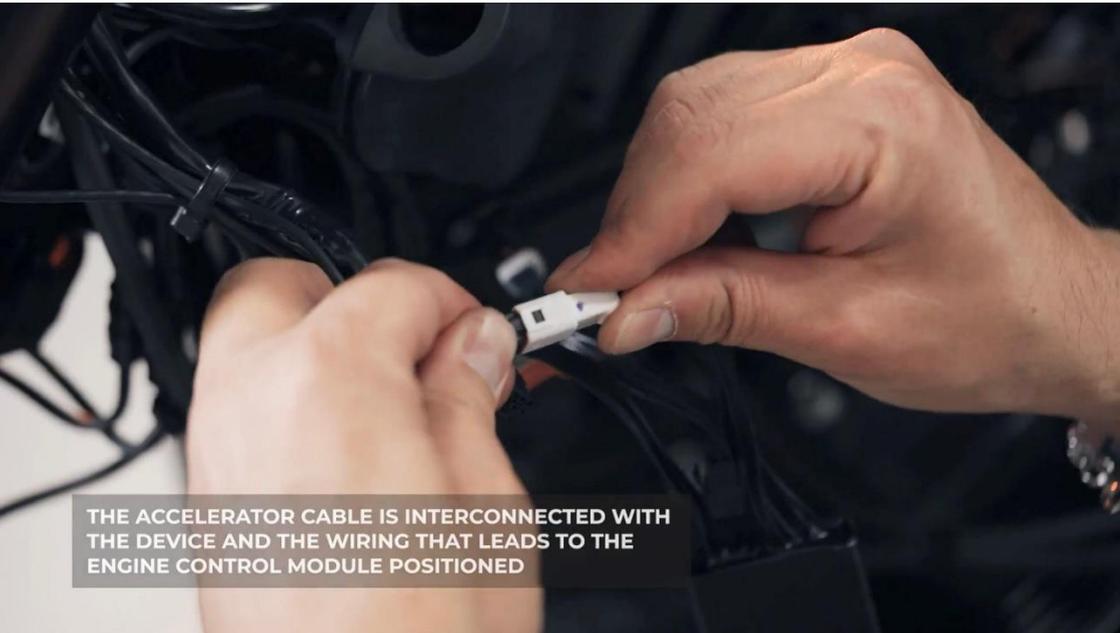

THE ACCELERATOR CABLE IS INTERCONNECTED WITH THE DEVICE AND THE WIRING THAT LEADS TO THE ENGINE CONTROL MODULE POSITIONED