

Technical:

Voltage: AC110-220V 50/60HZ

Power supply: 180W

Light source: 3W*54PCS

Color: RGBW single color LEDs

Channel:8/4CH

Operation: DMX512, Auto, Sound, Master-slave

Package: 12PCS/CARTON



LED Stage Lighting Operating Manual

54LED PAR Light

Thank you so much for choosing this product; it is adopting the most advanced lamps, which are called LED lamps. It conquers a lot of disadvantages such as power wasting, short use life, high temperature, etc. It has advantages of power saving, long life (it can reach 60,000.00 hours in general circs), high brightness, fresh colors...It is the best stage illuminating and various effect decorative products.

DMX512Control: 8 Channel Model(A001)

CH	Display	Function
CH1	Dimmer	R、G、B、W dimmer: from dark to bright
CH2	R dimmer	R dimmer: from dark to bright
CH3	G dimmer	G dimmer: from dark to bright
CH4	B dimmer	B dimmer: from dark to bright
CH5	W dimmer	W dimmer: from dark to bright
CH6	Strobe	R、G、B、W strobe: from slow to fast
CH7	Function choice	0~50: DMX 8CH Control. 51~100: Different Colors Output 101~150: Colors Jump Change. 151~200: Colors Gradate. 201~250: Colors Pulse Change. 251~255: Sound-Active
CH8	Function speed	Speed function, from slow to fast

DMX512Control: 4Channel Model(D001)

Channel	Function	Instruction
CH1	R Dimmer	Dimmer- Dark to Bright
CH2	G Dimmer	Dimmer- Dark to Bright
CH3	B Dimmer	Dimmer- Dark to Bright
CH4	W Dimmer	Dimmer- Dark to Bright

FUNCTION:

No	Show	Function	Instruction
1	d001	DMX Address (001~512)	DMX-512 address set, 4 Channels mode
2	A001	DMX Address (001~512)	DMX-512 address set, 8 Channels mode
3	r255	Red (000~255)	UP、DOWN Change brightness
4	G255	Green (000~255)	UP、DOWN Change brightness
5	b255	Blue (000~255)	UP、DOWN Change brightness
6	u255	white (000~255)	UP、DOWN Change brightness
7	FH99	Strobe flash (01~99)	UP、DOWN Change the speed
8	CL01	Different Colors Output (01~08)	UP、DOWN Change brightness
9	CC99	Colors Jump Change (01~99)	UP、DOWN Change the speed
10	DE99	Colors Gradate (01~99)	UP、DOWN Change the speed
11	CP99	Colors Pulse Change (01~99)	UP、DOWN Change the speed
12	SU01	Colors sound-Active (01~09)	UP、DOWN Change the effects