

BLINDER 400 IP


WATERPROOF 4X100 COB



USER MANUAL

KEEP THIS USER MANUAL FOR FUTURE NEEDS

1.Menu:

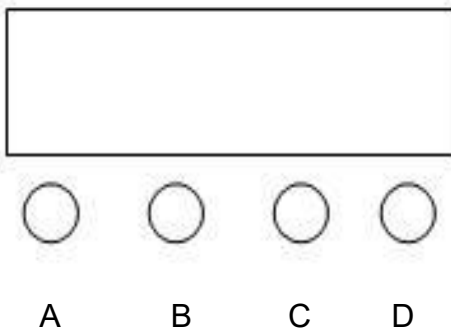

- A. Menu
- B. Up
- C. Down
- D. Enter

Operation instructions: Press the function key A to circulate 10 different function effects, the first two digits of the digital tube represent the current function (refer to the function table). The last two digits represent the location of the function. Address code, or speed, parameters. Press B or C to change its parameter value. Press D to confirm.

2. DMX table of LED display window functions in console mode, (Press D to confirm all functions selected)

No.	Display	Detail
1	A001	DMX address, (001—512) B、C Key to add or subtract address values
2	6CH-12CH-8 CH-4CH-2CH	<u>Multiple channel modes to choose</u>
3	CC00	Jumping (00—12) B、C to change effect
4	LL50	Jumping speed (00—12) B、C to change effect speed
5	CP99	fade, (01—99) B、C fade,pulse speed
6	DE99	Strobe (01—99) B、C to change fade,pulse speed
7	BE BE	Sound
8	o255	W color, (000—255) B、C change
9	Y255	Y color, (000—255) B、C change
10	n000	strobe (000—255) B、C to change the strobe speed
11	-ON- / -OFF	Display saver on/off

3. LED background display window function comparison table (in A001 mode, press the function key for 10 seconds to enter the background to modify parameters, and press the confirm key to save and exit)

No.	Display	Detail
1	R235	COB1 Warm White current 20-255 B、C to change
2	G235	COB1 Cool White current 20-255 B、C to change
3	B235	COB2 Warm White current 20-255 B、C to change
4	o235	COB2 Cool White current 20-255 B、C to change
5	Y235	COB3 Warm White current 20-255 B、C to change
6	P235	COB3 Cool White current 20-255 B、C to change
7	A235	COB4 Warm White current 20-255 B、C to change
8	n235	COB4 Cool White current 20-255 B、C to change
9	T080	DMX dimmer speed0-255 B、C to change
10	C-60	Temperature Control Sets the temperature 40-70 degree B、C to change

4. DMX512 6CH

No.	Function	Detail
1CH	Dimmer	COB dimmer,liner dimmer,from the dark to bright
2CH	Strobe	Strobe from slow to fast

3CH	Function	0-5 Null 6--20: Jumping1; 21—35: Jumping2; 36—50: Jumping3; 51—65: Jumping4; 66—80: Jumping5; 81—95: Jumping6; 96—105: Jumping7; 106—110: Jumping8; 111—125: Jumping9; 126—140: Jumping10; 141—155: Jumping11; 156—170: Jumping12; 170—185: Jumping1; 186—200: Jumping2; 201—215: Jumping3; 216—230: Strobe; 231--255: Strobe by Sound;
4CH	Function Speed	Function speed, from slow to fast
5CH	warm color dimmer	warm color dimmer,liner dimmer,from the dark to bright
6CH	cool color dimmer	cool color dimmer,liner dimmer,from the dark to bright

5. DMX512 12CH

No.	Function	Detail
1CH	Dimmer	COB dimmer,liner dimmer,from the dark to bright
2CH	Strobe	Strobe from slow to fast
3CH	Function	0-5 Null 6--20: Jumping1; 21—35: Jumping2; 36—50: Jumping3; 51—65: Jumping4; 66—80: Jumping5; 81—95: Jumping6; 96—105: Jumping7; 106—110: Jumping8; 111—125: Jumping9;

		126—140: Jumping10; 141—155: Jumping11; 156—170: Jumping12; 170—185: Jumping1; 186—200: Jumping2; 201—215: Jumping3; 216—230: Strobe; 231--255: Strobe by Sound;
4CH	Function Speed	Function speed, from slow to fast
5CH	1warm color dimmer	COB1 warm color dimmer,liner dimmer,from the dark to bright
6CH	1cool color dimmer	COB1 cool color dimmer,liner dimmer,from the dark to bright
7CH	2warm color dimmer	COB2 warm color dimmer,liner dimmer,from the dark to bright
8CH	2cool color dimmer	COB2 cool color dimmer,liner dimmer,from the dark to bright
9CH	3warm color dimmer	COB3 warm color dimmer,liner dimmer,from the dark to bright
10CH	3cool color dimmer	COB3 cool color dimmer,liner dimmer,from the dark to bright
11CH	4warm color dimmer	COB4 warm color dimmer,liner dimmer,from the dark to bright
12CH	4cool color dimmer	COB4 cool color dimmer,liner dimmer,from the dark to bright

6. DMX512 8CH

No.	Function	Detail
CH1	1warm color dimmer	COB1 warm color dimmer,liner dimmer,from the dark to bright
CH2	1cool color dimmer	COB1 cool color dimmer,liner dimmer,from the dark to bright
CH3	2warm color dimmer	COB2 warm color dimmer,liner dimmer,from the dark to bright
CH4	2cool color dimmer	COB2 cool color dimmer,liner dimmer,from the dark to bright

CH5	3warm color dimmer	COB3 warm color dimmer,liner dimmer,from the dark to bright
CH6	3cool color dimmer	COB3 cool color dimmer,liner dimmer,from the dark to bright
CH7	4warm color dimmer	COB4 warm color dimmer,liner dimmer,from the dark to bright
CH8	4cool color dimmer	COB4 cool color dimmer,liner dimmer,from the dark to bright

7. DMX512 4CH

No.	Function	Detail
CH1	Dimmer	COB dimmer,liner dimmer,from the dark to bright
CH2	warm color dimmer	warm color dimmer,liner dimmer,from the dark to bright
CH3	cool color dimmer	cool color dimmer,liner dimmer,from the dark to bright
CH4	Strobe	Strobe from slow to fast

8. DMX512 2CH

No.	Function	Detail
CH1	warm color dimmer	warm color dimmer,liner dimmer,from the dark to bright
CH2	cool color dimmer	cool color dimmer,liner dimmer,from the dark to bright

9. Feature:

Operation is very simple, humanized design, dimming without flicker, jitter phenomenon. Can be adapted to photography, photography, television and other lighting requirements of the occasion.