



User's Manual



**19×15W RGBW 4in1 Zoom LED Wash Moving Head Light
(With fully premixed color)**

Table of Contents

1. Installation Notes

2. Features

3. Parameters

4. Menu Function

5. DMX512 Channel


14 channels

25 channels

Installation Notes

1. Safety instructions

The product is in good condition. To maintain the good condition of the product and to ensure safe operation, please follow the safety precautions and the warning in this manual.

 Important: Damage caused by not following the specification is not covered by the warranty. Suppliers thus do not responsible for these problems. If the product has been exposed to extreme unstable temperatures environment (eg: after transportation), Please do not connect the power supply immediately, because water droplets due to temperature changes could damage the product. Please use the product after it returns to normal temperature.

The product can be used in the 90-260V voltage range, it is indoor using product. Make sure the scope of the using voltage is not higher than the product can bear! Power plug must be plugged into a good protection class 1 outlet. Green or Green tea conductor must be grounded.

Please check the product grade power cord often. Make sure the power cord is not folded or damaged scratches, and doesn't connect with the other line! Special attention is required when connecting the power cord or associated wiring. Be sure to unplug the power when not using the product or in a clean.

Before using the product, please be familiar with the operating functions of the product. Please do not let the children or non-professional person to contact with the product.

Please do not shake the product. Do not use brute force when installing or operating the product. Do not let the non-professionals to operate the product. Most of the damage was caused due to non-professional operation.

The product is not equipped with related maintenance accessories. Maintenance and repair of the product can only be carried out by professionals!

Please do not change the product, otherwise it may damage the product, so the damage caused is not under warranty. Moreover, not professional operation may cause a short circuit, burns or electric shock, etc.

2. Operating instructions

This product is moving head wash light, used to create the effect of dyeing performance.

If the product through a large temperature difference after (for example, after transportation), do not launch the product immediately, because the heat shrink account will damage to the product. Please wait for the device to normal room temperature before starting the product.

Note shock. The product installation process to avoid strong impact.

Do not lift the product by the cap, such as mechanical equipment may be damaged.

Make sure that the product is not exposed to the heat, too wet or dusty places when selecting the installation site. Please do not put any wires placed in the ground, or it may be a risk of electric shock.

Before installing the product, make sure to install point safety

Keep the product on a safety rope, and check all the screws are correct at the time of installation

Make sure the lens is in good condition. When the lens is scratched or damaged, replace the lens.

This product is recommended by the familiar technical personnel to operate the product. Prohibit non-technical personnel to operate the equipment, because the loss is as a result of many non-professional operation.

Keep packaging materials in case you need for secondary transport.

If there is no manufacturer or distributor of the guide, please do not change the product.

Failure to operate using the instructions provided any equipment failures caused by this device are not covered by the warranty. And any damage due to short circuit, injury, electric shock, UV-induced thereby caused, lamp explosion accidents etc. not covered under warranty.

3. Maintenance and Cleaning Products

Upon detecting this product, please note the following:

- ✓ All the screws and parts to install the product must be closely connected, not rust
- ✓ Housings, lenses, fasteners and installation location (such as smallpox, hangers, truss, etc.) can not be deformed
- ✓ Mechanical moving parts can not wear, not unbalanced rotation.
- ✓ Power line can not have any damage, material fatigue or precipitation

Installation and use of the product must be by a trained professional and technical personnel, must ensure that exclude security risks.

To maintain a good state of products, extend the service life, we recommend regular cleaning of the product.

- ✓ Each week on the external and internal lens lens cleaning products, to prevent dust caused light output lens products weakened.
- ✓ Each week the fan for cleaning.
- ✓ Every three months by a professional electrical engineer the product detailed circuit checks to ensure good contact circuit to prevent overheating circuit contacts due to aging.

We recommend that the product should be cleaned on a regular basis, please be careful not to use wet or linen, do not use alcohol or solvents for cleaning.

This product is not equipped with replacement parts, please refer to the "Installation Instructions" section.

If you need any spare parts, please buy from your local dealer.

Features

Uses TFT LCD with lap controllable effects (three rings)

Menu language switching, the menu can be easily switched Chinese or English. To meet different customer needs.

655 536 brightness levels, truly a 16 dimming, dimming eliminates the eight low-intensity jitter problems, so dimming becomes softer.

Master and slave, every single light is off when the console can be used as a host, led the other lights

Parameters

Input Voltage: AC100-240V, 50Hz/60Hz

Maximum power: 300W

Light Source: 19x15w RGBW 4in1 LEDs + 30pcs RGB 3in1 LEDs

Beam Angle: 8-60°

Pan Movement Rang: 540°

Tilt Movement Rang: 240°

Strobe: 1-20 times / sec

Color: RGBW color mixing system, color uniformity bright

DMX Channel: 14CH/25CH

Control Mode: Auto, Sound, DMX, master and slave

Function: RGBW color mixing system,Lap control effect,color uniformity bright beam effects. Dimming, strobe XY axis shaking his head and speed control, fan intelligent control. Lighting temperature automatically detected.

Power Connect: Powercon in & out.

Dimensions: 30.5×23×37cm

Carton Size: 45×26×39cm (1in1)

N.W: 8kg

G.W: 10kg

Menu Function

| | | | |
|----------|--------------|--------------|---------------------|
| Address | 001-512 | | |
| Run | DMX512 | | |
| | Auto 1 | | |
| | Auto 2 | | |
| | Sound 1 | | |
| | Sound 2 | | |
| DMX MODE | STD (14CH) | | |
| | ETX (25CH) | | |
| TEST | LED | | |
| SET | Disp.setting | Shutoff time | 02-60m (02-60 mins) |
| | | Filp display | ON/OFF |
| | | Key lock | ON/OFF |
| | | Disp flash | ON/OFF |
| INFO | Time info | Power on | Xxxx (Hours) |
| | | Ttl life Hrs | Xxxx (Hours) |
| | | Last Run Hrs | Xxxx (Hours) |
| | Software V. | Vx.xx | |
| MANUAL | Pan | | |
| | Tilt | | |
| | Speed | | |
| | Functions | | |
| | Red | | |
| | Green | | |
| | Blue | | |
| | White | | |
| | Colour | | |
| | Zoom | | |
| | Strobe | | |
| | Dimmer | | |
| RESET | All Reset | No/Yes | |

DMX512 Channel

| Channel | | Value | Function |
|---------|-------------------------------|--------------------------------|-----------------------------------------------|
| Std. | Ext. | | |
| 1 | 1 | Beam electronic shutter effect | |
| | | 0-19 | Shutter closed |
| | | 20-24 | Shutter open |
| | | 25-64 | Strobe 1 (fast to slow) |
| | | 65-69 | Shutter open |
| | | 70-84 | Strobe 2: opening pulse (fast to slow) |
| | | 85-89 | Shutter open |
| | | 90-104 | Strobe 3: closing pulse (fast to slow) |
| | | 105-109 | Shutter open |
| | | 110-124 | Strobe 4: random strobe (fast to slow) |
| | | 125-129 | Shutter open |
| | | 130-144 | Strobe 5: random opening (fast to slow) |
| | | 145-149 | Shutter open |
| | | 150-164 | Strobe 6: random opening pulse (fast to slow) |
| | | 165-169 | Shutter open |
| | | 170-184 | Strobe 7: burst pulse (fast to slow) |
| | | 185-189 | Shutter open |
| | | 190-204 | Strobe 8: random burst pulse (fast to slow) |
| | | 205-209 | Shutter open |
| | | 210-224 | Strobe 9: sine wave (fast to slow) |
| 225-229 | Shutter open | | |
| 230-244 | Strobe 10: burst (fast- slow) | | |
| 245-255 | Shutter open | | |
| 2 | 2 | Beam dimmer | |
| | | 0-255 | 0-100% linear dimming |
| 3 | 3 | Zoom | |
| | | 0-255 | Beam angle from wide to narrow |
| 4 | 4 | Pan (8 bit) | |
| | | 0-255 | Pan Movement |
| 5 | 5 | Pan fine (16 bit) | |
| | | 0-255 | Fine control of Pan Movement |
| 6 | 6 | Tilt (8 bit) | |
| | | 0-255 | Tilt Movement |
| 7 | 7 | Tilt fine (16 bit) | |
| | | 0-255 | Fine control of Tilt Movement |
| 8 | 8 | Fixture control settings | |
| | | 0-9 | No function |

| | | | |
|---|---|--------------|-----------------------------------------------|
| | | 10-14 | Reset entire fixture |
| | | 15-39 | No function |
| | | 40-44 | PTSP=NORM |
| | | 45-49 | PTSP=FAST |
| | | 50-54 | PTSP=SLOW |
| | | 55-89 | No function |
| | | 90-94 | Calibrated color output mode Color CALIB=ON |
| | | 95-99 | No function |
| | | 100-104 | Raw color output mode Color CALIB=OFF |
| | | 105-109 | No function |
| | | 110-114 | Fast dimming, speed of changes unrestricted |
| | | 115-119 | No function |
| | | 120-124 | Smooth dimming, speed of changes unrestricted |
| | | 125-255 | No function |
| | | Color effect | |
| | | 0-9 | Open RGBW color mixing enabled |
| | | 10-14 | LEE-790-Moroccan pink |
| | | 15-19 | LEE157-Pink |
| | | 20-24 | LEE 332- Special rose pink |
| | | 25-29 | LEE 328 - Follies pink |
| | | 30-34 | LEE 345 - Fuchsia pink |
| | | 35-39 | LEE 194-Surprise pink |
| | | 40-44 | LEE 181-Congo Blue |
| | | 45-49 | LEE 071-Tokyo Blue |
| | | 50-54 | LEE 120- Deep Blue |
| | | 55-59 | LEE 079-Just Blue |
| | | 60-64 | LEE 132-Medium Blue |
| | | 65-69 | LEE 200-Double CT Blue |
| | | 70-74 | LEE 161-Slate Blue |
| | | 75-79 | LEE 201-Full CT Blue |
| | | 80-84 | LEE 202-Half CT Blue |
| | | 85-89 | LEE 117-Steet Blue |
| | | 90-94 | LEE 353-Lighter Blue |
| | | 95-99 | LEE 118-Light Blue |
| | | 100-104 | LEE 116-Medium Blue Green |
| | | 105-109 | LEE 124 -Dark Green |
| | | 110-114 | LEE 139 -Primary Green |
| | | 115-119 | LEE 089 -Moss Green |
| | | 120-129 | LEE 738- JAS Green |
| | | 130-134 | LEE 088 - Lime Green |
| | | 135-139 | LEE 100 -Sring Yellow |
| | | 140-144 | LEE 104 -JAS Green |
| | | 145-149 | LEE 179- Chrome Orange |
| 9 | 9 | | |

| | | | |
|----|----|--------------------------------|-----------------------------------|
| | | 150-154 | LEE 105- Orange |
| | | 155-159 | LEE 021 - Gold Amber |
| | | 160-164 | LEE 778- Millennium Gold |
| | | 165-169 | LEE 135-Deep Golden Amber |
| | | 170-174 | LEE 164-flame Red |
| | | 175-179 | Open |
| | | Color fotation effect | |
| | | 180-201 | Counter-clockwise, fast-slow |
| | | 202-207 | Stop |
| | | 208-229 | Counter-clockwise, slow-fast |
| | | 230-234 | Open |
| | | Random color | |
| | | 235-239 | Fast |
| | | 240-244 | Medium |
| | | 245-249 | Slow |
| | | 250-255 | Open |
| 10 | 10 | Red color | |
| | | 0-255 | Red linear dimming 0-100% |
| 11 | 11 | Green color | |
| | | 0-255 | Green linear dimming 0-100% |
| 12 | 12 | Blue color | |
| | | 0-255 | Blue linear dimming 0-100% |
| 13 | 13 | White color | |
| | | 0-255 | White linear dimming 0-100% |
| 14 | 14 | Color Temperature adjust | |
| | | 0-7 | CTC disabled |
| | | 8-255 | CTC 10000k-2500k |
| | 15 | FX1 select | |
| | | 0-255 | Pre-programmed effect 1 selection |
| | 16 | FX1 adjust, sync speed adjust | |
| | | 0-255 | Zero-Maximum |
| | 17 | FX2 select | |
| | | 0-255 | Pre-programmed effect 2 selection |
| | 18 | FX2 adjust, sync speed adjust | |
| | | 0-255 | |
| | 19 | Sync (FX synchronization) | |
| | | 0-49 | No sync |
| | | 50 | Sync |
| | | 51-169 | Sync shift |
| | | 170-209 | Sync random |
| | | 210-255 | No sync, random |
| | 20 | Aura shutter and strobe effect | |
| | | 0-19 | Shutter closed |

| | | | |
|--|----|-------------------------|-----------------------------------------------|
| | | 20-24 | Shutter open |
| | | 25-64 | Strobe 1 (fast - slow) |
| | | 65-69 | Shutter open |
| | | 70-84 | Strobe 2 : opening pulse (fast - slow) |
| | | 85-89 | Shutter open |
| | | 90-104 | Strobe 3 : opening pulse (fast - slow) |
| | | 105-109 | Shutter open |
| | | 110-124 | Strobe 4 : random strobe (fast - slow) |
| | | 125-129 | Shutter open |
| | | 130-144 | Strobe 5 : random opening pulse (fast - slow) |
| | | 145-149 | Shutter open |
| | | 150-164 | Strobe 6 : random closing pulse (fast - slow) |
| | | 165-169 | Shutter open |
| | | 170-184 | Strobe 7 : burst pulse (fast - slow) |
| | | 185-189 | Shutter open |
| | | 190-204 | Strobe 8 : random burst pulse(fast - slow) |
| | | 205-209 | Shutter open |
| | | 210-224 | Strobe 9 : sine wave (fast - slow) |
| | | 225-229 | Shutter open |
| | | 230-244 | Strobe 10: burst (fast - slow) |
| | | 245-255 | Shutter open |
| | 21 | Aura dimmer | |
| | | 0-255 | Linear Dimming 0-100% |
| | 22 | Aura color wheel effect | |
| | | 0-9 | Open RGBW color mixing enabled |
| | | 10-14 | LEE-790-Moroccan pink |
| | | 15-19 | LEE157-Pink |
| | | 20-24 | LEE 332- Special rose pink |
| | | 25-29 | LEE 328 -Follies pink |
| | | 30-34 | LEE 345 - Fuchsia pink |
| | | 35-39 | LEE 194-Surprise pink |
| | | 40-44 | LEE 181-Congo Blue |
| | | 45-49 | LEE 071-Tokyo Blue |
| | | 50-54 | LEE 120- Deep Blue |
| | | 55-59 | LEE 079-just Blue |
| | | 60-64 | LEE 132-Medium Blue |
| | | 65-69 | LEE 200-Double CT Blue |
| | | 70-74 | LEE 161-slate Blue |
| | | 75-79 | LEE 201-full CT Blue |
| | | 80-84 | LEE 202-Half CT Blue |
| | | 85-89 | LEE 117-Steet Blue |
| | | 90-94 | LEE 353 - Lighter Blue |
| | | 95-99 | LEE 118-Light Blue |

| | | | |
|--|----|-----------------------|------------------------------|
| | | 100-104 | LEE 116-Medium Blue Green |
| | | 105-109 | LEE 124 -Dark Green |
| | | 110-114 | LEE 139 -Primary Green |
| | | 115-119 | LEE 089 -Moss Green |
| | | 120-129 | LEE 738- JAS Green |
| | | 130-134 | LEE 088 - Lime Green |
| | | 135-139 | LEE 100 -Sring Yellow |
| | | 140-144 | LEE 104 -JAS Green |
| | | 145-149 | LEE 179- Chrome Orange |
| | | 150-154 | LEE 105- Orange |
| | | 155-159 | LEE 021 - Gold Amber |
| | | 160-164 | LEE 778- Millennium Gold |
| | | 165-169 | LEE 135-Deep Golden Amber |
| | | 170-174 | LEE 164-flame Red |
| | | 175-179 | Open |
| | | Color fotation effect | |
| | | 180-201 | Counter-clockwise, fast-slow |
| | | 202-207 | Stop |
| | | 208-229 | Counter-clockwise, slow-fast |
| | | 230-234 | Open |
| | | Random color | |
| | | 235-239 | Fast |
| | | 240-244 | Medium |
| | | 245-249 | Slow |
| | | 250-255 | Open |
| | 23 | Aura red | |
| | | 0-255 | Red linear dimming 0-100% |
| | 24 | Aura green | |
| | | 0-255 | Green linear dimming 0-100% |
| | 25 | Aura blue | |
| | | 0-255 | Blue linear dimming 0-100% |