

OIL FILLER CAP INSTRUCTIONS



First, remove the old oil seal from the original cap. Use a fine-tipped tool to do this, and slowly work the seal upward towards the end of the cap.

Install the seal to your new cap in the same orientation as the original.



You may twist your cap into place and find its upside down not to worry we have included some shims to fix the strange issue of Mazda casting the tread in several directions.



The 2mm shim will flip the cap 180 degrees the 1mm shim 90 degrees and the 0.50mm will allow minor adjustments please fit the shims towards the top on the rubber seal and not directly to the cam cover

if you have any questions or issues installing your cap please email us support@js-id.com

