


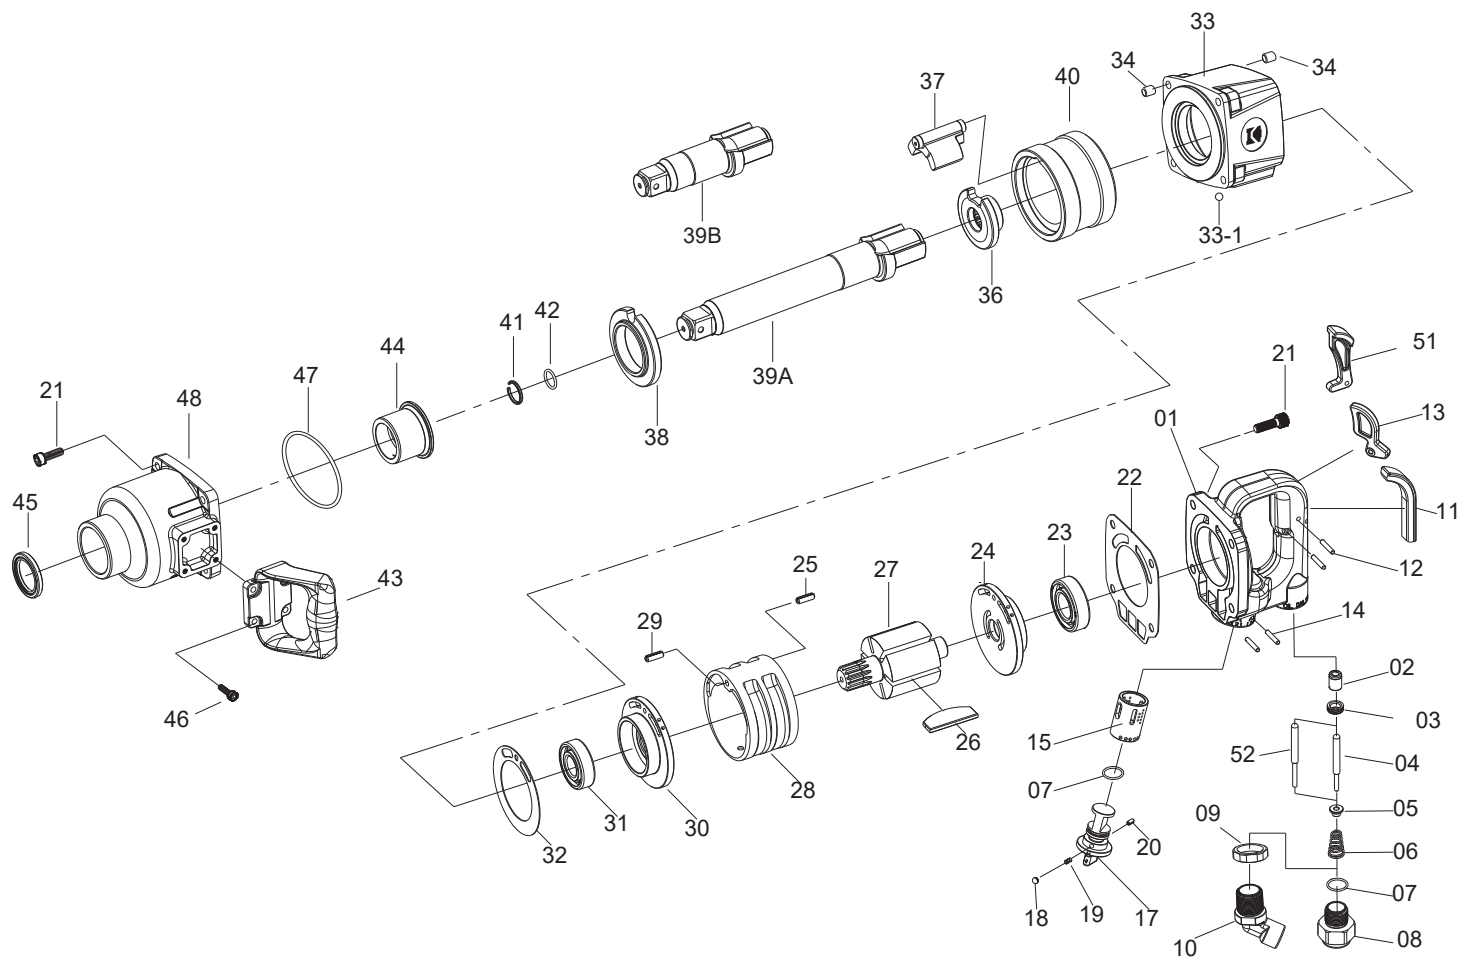

NO.	PART NO.	DESCRIPTION	Qty	NO.	PART NO.	DESCRIPTION	Qty
★ 1	103 33 314 001	Backhead Assembly (incl.2.15)	1	28	103 33 314 028	Cylinder	1
2	103 33 314 002	Bushing	1	29	103 33 314 029	Spring Pin	1
3	103 33 314 003	Throttle Valve Seat	1	★ 30	103 33 314 030	Front End Plate Assembly (incl.31)	1
4	103 33 314 004	Throttle Valve Plunger (For Inside Trigger)	1	31	103 33 314 031	Ball Bearing	1
5	103 33 314 005	Throttle Valve	1	32	103 33 314 032	Gasket	1
6	103 33 314 006	Spring	1	★ 33	103 33 314 033	Housing Assembly { incl.33-1 (4).34 (8) }	1
7	103 33 314 007	O-Ring	2	33-1	103 33 314 233	Steel Ball	4
8	103 33 314 008	Straight Air Inlet (Option)	1	34	103 33 314 034	Heli-Coil	8
9	103 33 314 009	Lock Nut (Option)	1	36	103 33 314 036	Cam	1
★ 10	103 33 314 010	Air Inlet Assembly (incl.9) (Option)	1	37	103 33 314 037	Hammer	1
11	103 33 314 011	Rubber Cap (For Inside Trigger)	1	38	103 33 314 038	Axle Bushing	1
12	103 33 314 012	Pin	2	39A	103 33 314 039	6" Extended Anvil	1
13	103 33 314 013	Inside Trigger (Option)	1	39B	103 33 314 239	Standard Anvil	1
14	103 33 314 014	Spring Pin	2	40	103 33 314 040	Hammer Frame	1
15	103 33 314 015	Reverse Valve Bushing	1	41	103 33 314 041	Socket Retainer	1
★ 17	103 33 314 017	Reverse Valve Assembly (incl.20)	1	42	103 33 314 042	O-Ring	1
18	103 33 314 018	Steel Ball	1	43	103 33 314 043	Side Spade Handle	1
19	103 33 314 019	Spring	1	44	103 33 314 044	Bushing	1
20	103 33 314 020	Spring Pin	1	45	103 33 314 045	Oil Seal	1
21	103 33 314 021	Screw	8	46	103 33 314 046	Screw	4
22	103 33 314 022	Gasket	1	47	103 33 314 047	O-Ring	1
23	103 33 314 023	Ball Bearing	1	48	103 33 314 048	Hammer Case	1
★ 24	103 33 314 024	Rear End Plate Assembly (incl.23)	1	51	103 33 314 051	Outside Trigger (Option)	1
25	103 33 314 025	Spring Pin	1	52	103 33 314 052	Throttle Valve Plunger (For Outside Trigger)	1
26	103 33 314 026	Rotor Blade	6				
27	103 33 314 027	Rotor	1				

★ Must be Purchased in Assembly Set

A-BID-L85-R40T2170-6 A