


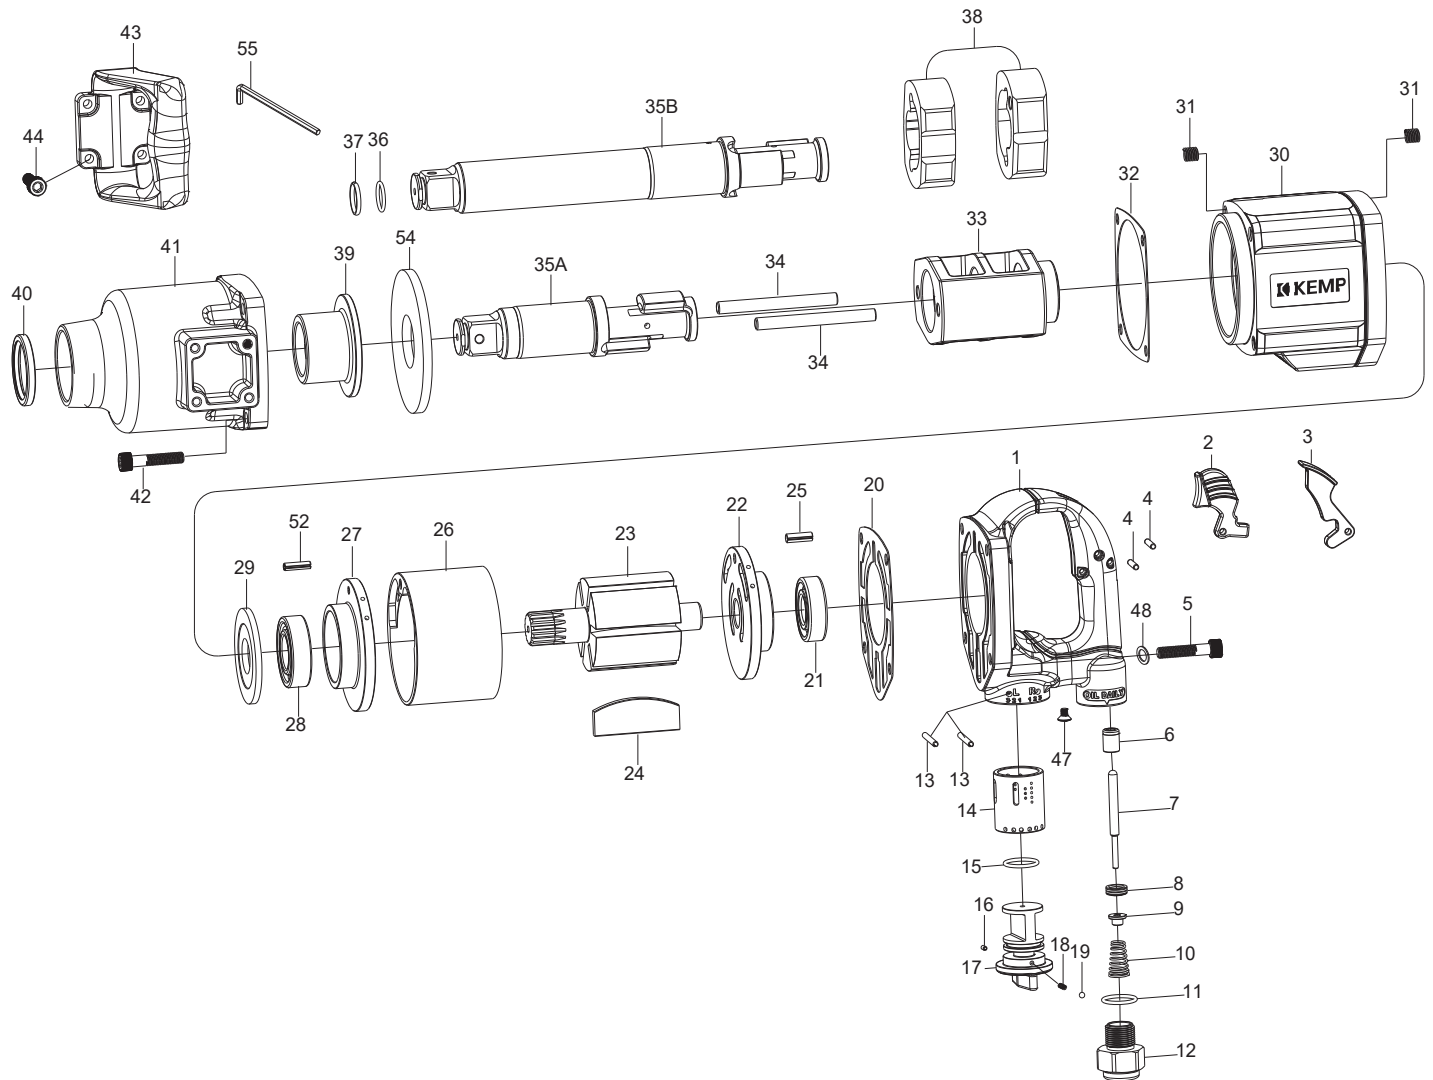

NO.	PART NO.	DESCRIPTION	Qty	NO.	PART NO.	DESCRIPTION	Qty
★ 1	103 33 318 001	Backhead Assembly (incl. 6.14)	1	★ 27	103 33 318 027	End Plate Assembly (incl. 28)	1
2	103 33 318 002	Inside Trigger (Option)	1	28	103 33 318 028	Bearing	1
3	103 33 318 003	Outside Trigger (Option)	1	29	103 33 318 029	Washer	1
4	103 33 318 004	Pin	2	30	103 33 318 030	Housing	1
5	103 33 318 005	Screw	4	31	103 33 318 031	Heil-Coil	8
6	103 33 318 006	Bushing	1	32	103 33 318 032	Gasket	1
7	103 33 318 007	Valve Stem	1	33	103 33 318 033	Hammer Frame	1
8	103 33 318 008	Throttle Valve Seat	1	34	103 33 318 034	Hammer Pin	2
9	103 33 318 009	Throttle Valve	1	35A	103 33 318 035	Standard Anvil	1
10	103 33 318 010	Spring	1	35B	103 33 318 235	6" Extended Anvil	1
11	103 33 318 011	O-Ring	1	36	103 33 318 036	O-Ring	1
12	103 33 318 012	Air Inlet	1	37	103 33 318 037	Socket Retainer	1
13	103 33 318 013	Pin	2	38	103 33 318 038	Hammer	2
14	103 33 318 014	Reverse Valve Bushing	1	39	103 33 318 039	Bushing	1
15	103 33 318 015	O-Ring	1	★ 40	103 33 318 040	Seal	1
16	103 33 318 016	Pin	1	41	103 33 318 041	Hammer Case Assembly (incl. 39.40)	1
17	103 33 318 017	Reverse Valve	1	42	103 33 318 042	Screw	4
18	103 33 318 018	Spring	1	43	103 33 318 043	Side Spade Handle	1
19	103 33 318 019	Steel Ball	1	44	103 33 318 044	Screw	4
20	103 33 318 020	Gasket	1	47	103 33 318 047	Screw	1
21	103 33 318 021	Bearing	1	48	103 33 318 048	Washer	4
★ 22	103 33 318 022	End Plate Assembly (incl. 21)	1	52	103 33 318 052	Pin	1
23	103 33 318 023	Rotor	1	54	103 33 318 054	Washer	1
24	103 33 318 024	Rotor Blade	6	55	103 33 318 055	Hex Key Wrench	1
25	103 33 318 025	Pin	1				
26	103 33 318 026	Cylinder	1				