


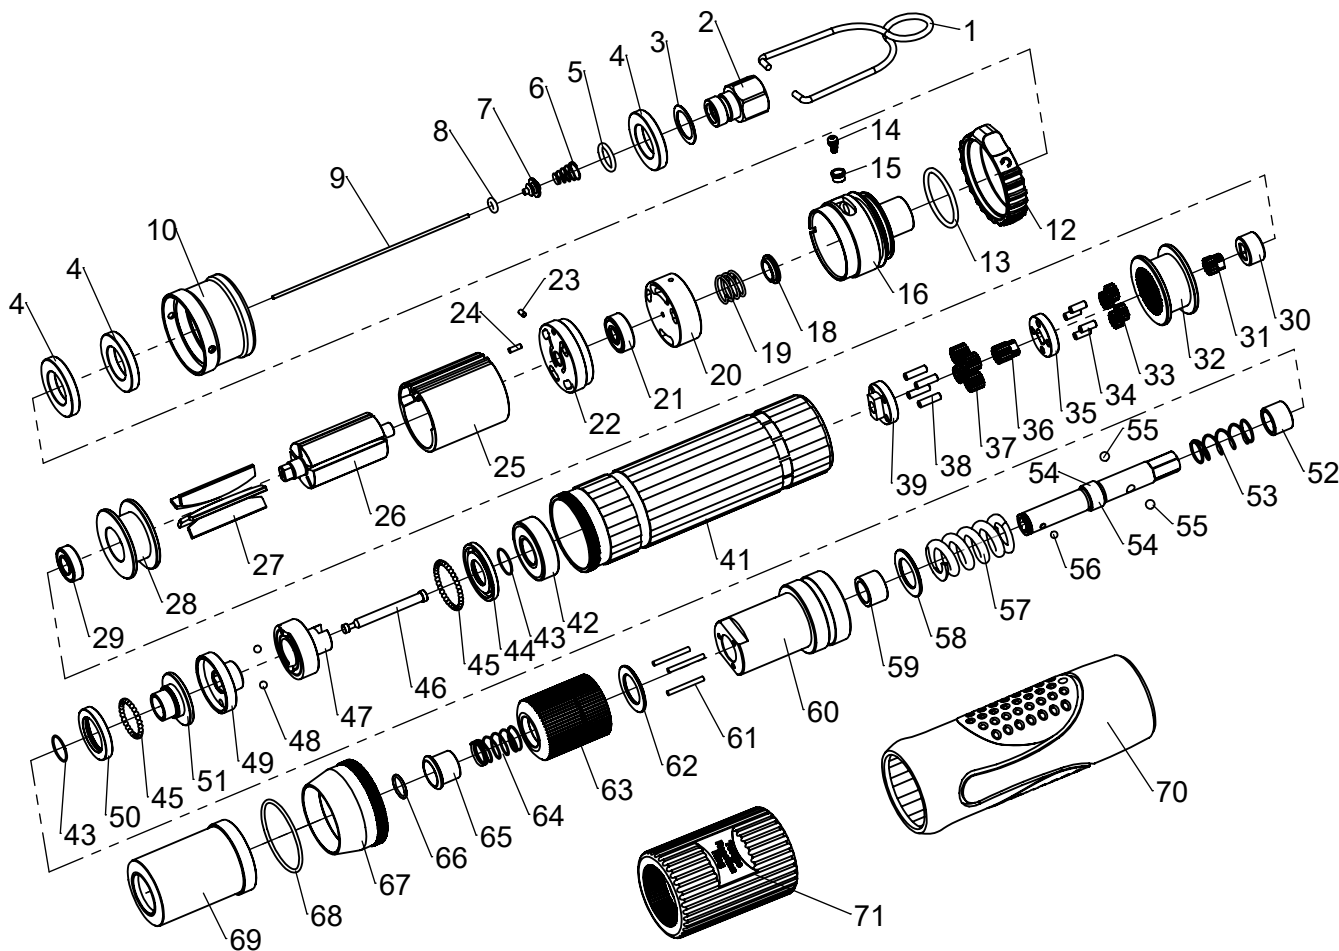

NO.	PART NO.	DESCRIPTION	Qty	NO.	PART NO.	DESCRIPTION	Qty
1	104 04 107 001	Suspension Ring	1	37	104 04 107 037	Second Gear	4
2	104 04 107 002	Inlet Bushing	1	38	104 04 107 038	Pin	4
3	104 04 107 003	Washer	1	39	104 04 107 039	Second Gear Cage	1
4	104 04 107 004	First Silencer	3	41	104 04 107 041	Housing	1
5	104 04 107 005	O-RING(Φ9.8X1.9)	1	42	104 04 107 042	Bearing	1
6	104 04 107 006	Spring	1	43	104 04 107 043	Ring	2
7	104 04 107 007	Valve Plate	1	44	104 04 107 044	Ball Race	1
8	104 04 107 008	O-RING(Φ3X2)	1	45	104 04 107 045	Ball(Φ2)	60
9	104 04 107 009	Operating Rod	1	46	104 04 107 046	Poilt Pin	1
10	104 04 107 010	Exhaust Deflector	1	47	104 04 107 047	Rear Clutch	1
12	104 04 107 012	Reverse Valve	1	48	104 04 107 048	Ball(Φ3.175)	2
13	104 04 107 013	O-Ring(Φ24.5x2)	1	49	104 04 107 049	Center Clutch	1
14	104 04 107 014	Screw	1	50	104 04 107 050	Ball Race	1
15	104 04 107 015	Screw Guide	1	51	104 04 107 051	End Clutch	1
16	104 04 107 016	Valve Housing	1	52	104 04 107 052	Slide Base	1
18	104 04 107 018	Washer	1	53	104 04 107 053	Spring	1
19	104 04 107 019	Spring	1	54	104 04 107 054	Anvil	1
20	104 04 107 020	Valve Body	1	55	104 04 107 055	Ball(Φ4)	2
21	104 04 107 021	Ball Bearing(606ZZ)	1	56	104 04 107 056	Ball(Φ2.375)	1
22	104 04 107 022	End Plate	1	57	104 04 107 057	Spring	1
23	104 04 107 023	Pin(Φ2x3.8)	1	58	104 04 107 058	Washer	1
24	104 04 107 024	Pin(Φ2x5.8)	1	59	104 04 107 059	Anvil Bushing	1
25	104 04 107 025	Cylinder	1	60	104 04 107 060	Torque Adjust	1
26	104 04 107 026	Rotor	1	61	104 04 107 061	Pin(Φ2x18.8)	3
27	104 04 107 027	Rotor Blade	5	62	104 04 107 062	Regulation Washer	1
28	104 04 107 028	Front Plate	1	63	104 04 107 063	Torque Ring	1
29	104 04 107 029	Bearing(688)	1	64	104 04 107 064	Spring	1
30	104 04 107 030	Connect	1	65	104 04 107 065	Bit Slide Sleeve	1
31	104 04 107 031	Transform Gear	1	66	104 04 107 066	Ring	1
32	104 04 107 032	Internal Gear	1	67	104 04 107 067	Rear Housing	1
33	104 04 107 033	Second Gear	4	68	104 04 107 068	O-Ring(Φ32x1.5)	1
34	104 04 107 034	Pin	4	69	104 04 107 069	Torque Cover	1
35	104 04 107 035	Second Gear Base	1	70	104 04 107 070	Cover	1
36	104 04 107 036	Transform Gear	1	71	104 04 107 071	Torque Reaction Ring	1