


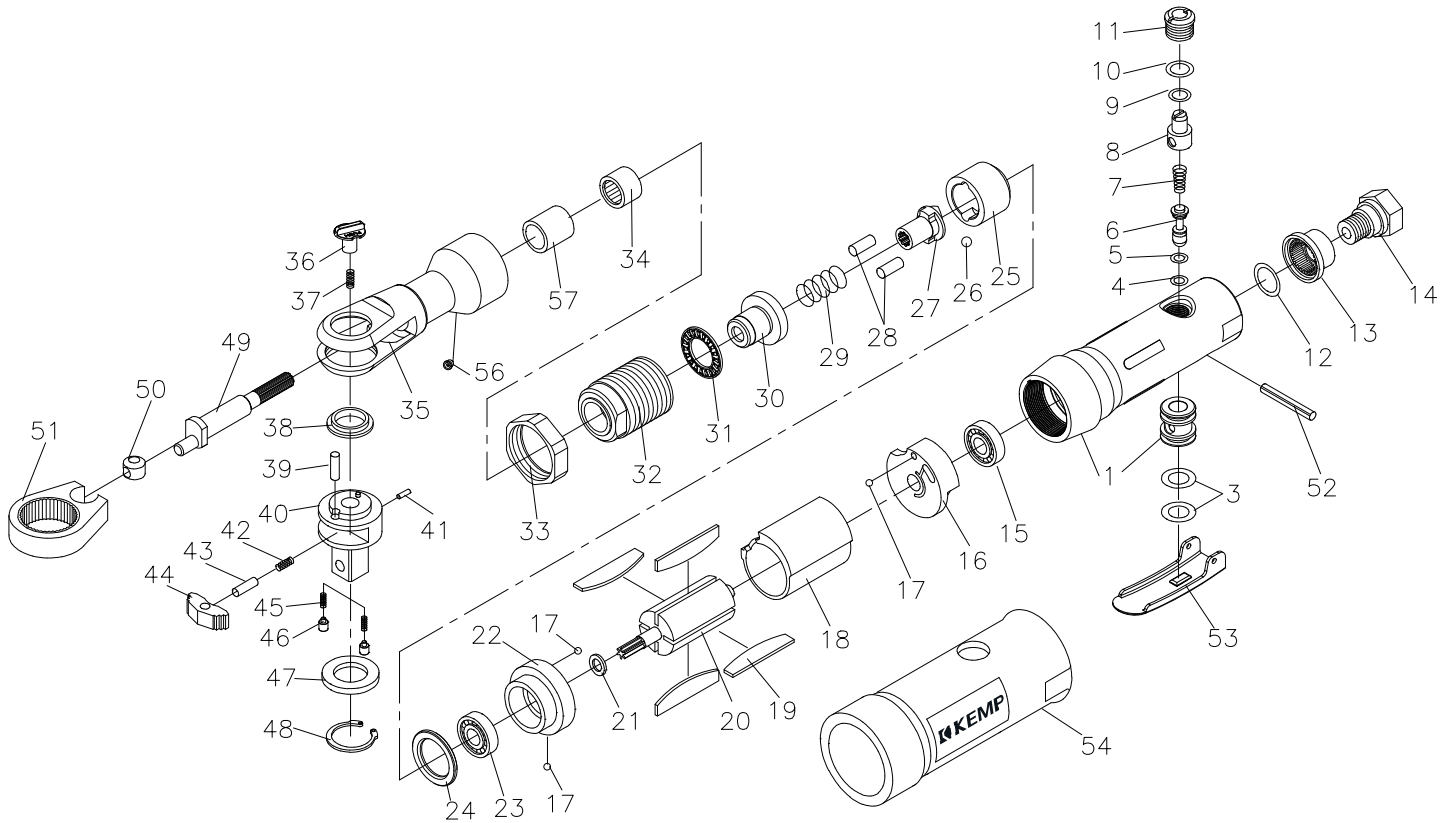

NO.	PART NO.	DESCRIPTION	Qty	NO.	PART NO.	DESCRIPTION	Qty
01	105 35 110 001	Motor Housing w/Bushing	1	30	105 35 110 030	Mechanism Cover	1
03	105 35 110 003	O-Ring	2	31	105 35 110 031	Thrust Bearing	1
04	105 35 110 004	O-Ring	1	32	105 35 110 032	Coupling Nut	1
05	105 35 110 005	O-Ring	1	33	105 35 110 033	Lock Nut	1
06	105 35 110 006	Throttle Pin	1	34	105 35 110 034	Needle Bearing	1
07	105 35 110 007	Spring	1	35	105 35 110 035	Ratchet Housing	1
08	105 35 110 008	Air Regulator	1	36	105 35 110 036	Reverse Button	1
09	105 35 110 009	O-Ring	2	37	105 35 110 037	Spring	1
10	105 35 110 010	O-Ring	1	38	105 35 110 038	Washer	1
11	105 35 110 011	Valve Plug	1	39	105 35 110 039	Pin	1
12	105 35 110 012	O-Ring	1	40	105 35 110 040	3/8"Ratchet Anvil	1
13	105 35 110 013	Muffler	1	41	105 35 110 041	Pin	1
14	105 35 110 014	Air Inlet	1	42	105 35 110 042	Spring	1
15	105 35 110 015	Ball Bearing	1	43	105 35 110 043	Lock Pin	1
16	105 35 110 016	Rear End Plate	1	44	105 35 110 044	Ratchet Pawl	1
17	105 35 110 017	Steel Ball	3	45	105 35 110 045	Spring	2
18	105 35 110 018	Cylinder	1	46	105 35 110 046	Pin	2
19	105 35 110 019	Rotor Blade	4	47	105 35 110 047	Thrust Washer	1
20	105 35 110 020	Rotor	1	48	105 35 110 048	Retainer Ring	1
21	105 35 110 021	Spindle Collar	1	49	105 35 110 049	Crank Shaft	1
22	105 35 110 022	Front End Plate	1	50	105 35 110 050	Drive Bushing	1
23	105 35 110 023	Ball Bearing	1	51	105 35 110 051	Ratchet Yoke	1
24	105 35 110 024	Washer	1	52	105 35 110 052	Pin	1
25	105 35 110 025	Hammer Cage	1	53	105 35 110 053	Throttle Lever	1
26	105 35 110 026	Steel Ball	1	54	105 35 110 054	Comfort Grip	1
27	105 35 110 027	Mechanism Anvil	1	56	105 35 110 056	Grease Fitting	1
28	105 35 110 028	Hammer Pin	2	57	105 35 110 057	Bushing	1
29	105 35 110 022	Spring	1				