


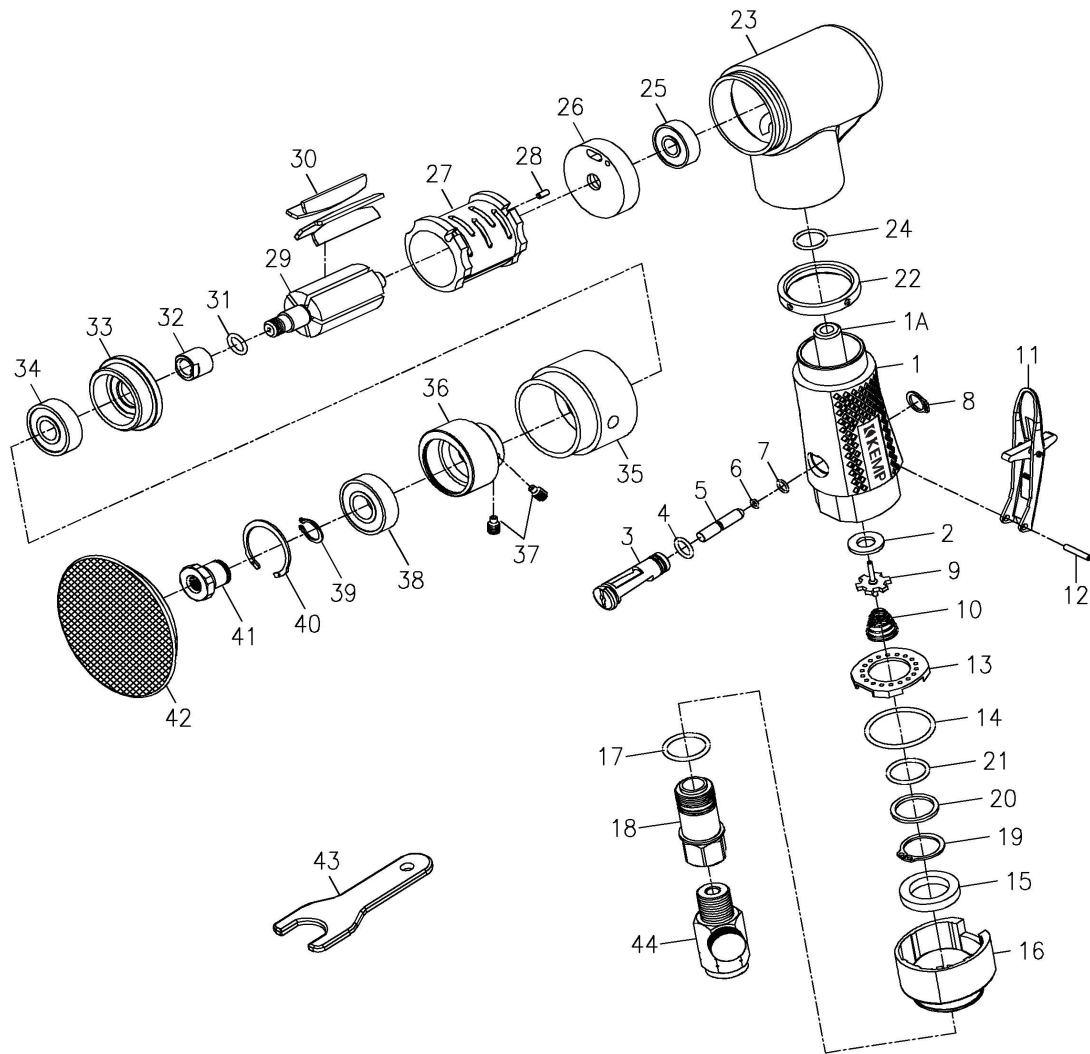

NO.	PART NO.	DESCRIPTION	Qty	NO.	PART NO.	DESCRIPTION	Qty
1	151 02 130 001	Housing	1	23	151 02 130 023	Motor Housing	1
1A	151 02 130 201	Insert	1	24	151 02 130 024	O-Ring	1
2	151 02 130 002	Seal	1	25	151 02 130 025	Ball Bearing	1
3	151 02 130 003	Regulator	1	26	151 02 130 026	Rear End Plate	1
4	151 02 130 004	O-Ring	1	27	151 02 130 027	Cylinder	1
5	151 02 130 005	Valve Stem	1	28	151 02 130 028	Pin	1
6	151 02 130 006	O-Ring	1	29	151 02 130 029	Rotor	1
7	151 02 130 007	O-Ring	1	30	151 02 130 030	Rotor Blade	5
8	151 02 130 008	Spring Ring	1	31	151 02 130 031	Spacer	1
9	151 02 130 009	Throttle	1	32	151 02 130 032	Nut	1
10	151 02 130 010	Spring	1	33	151 02 130 033	Front End Plate	1
11	151 02 130 011	Safety Lever	1	34	151 02 130 034	Ball Bearing	1
12	151 02 130 012	Lever Pin	1	35	151 02 130 035	Front Cover	1
13	151 02 130 013	Air Control Ring	1	36	151 02 130 036	Balancer	1
14	151 02 130 014	O-Ring	1	37	151 02 130 037	Set Screw	2
15	151 02 130 015	Felt	1	38	151 02 130 038	Ball Bearing	1
16	151 02 130 016	Rear Cap	1	39	151 02 130 039	Snap Ring	1
17	151 02 130 017	O-Ring	1	40	151 02 130 040	Snap Ring	1
18	151 02 130 018	Air Inlet	1	41	151 02 130 041	Shaft	1
19	151 02 130 019	Ring	1	42	151 02 130 042	3" Pad	1
20	151 02 130 020	Spacer	1	43	151 02 130 043	Spanner	1
21	151 02 130 021	O-Ring	1	44	151 02 130 044	Air Inlet	1
22	151 02 130 022	Lock Nut	1				