


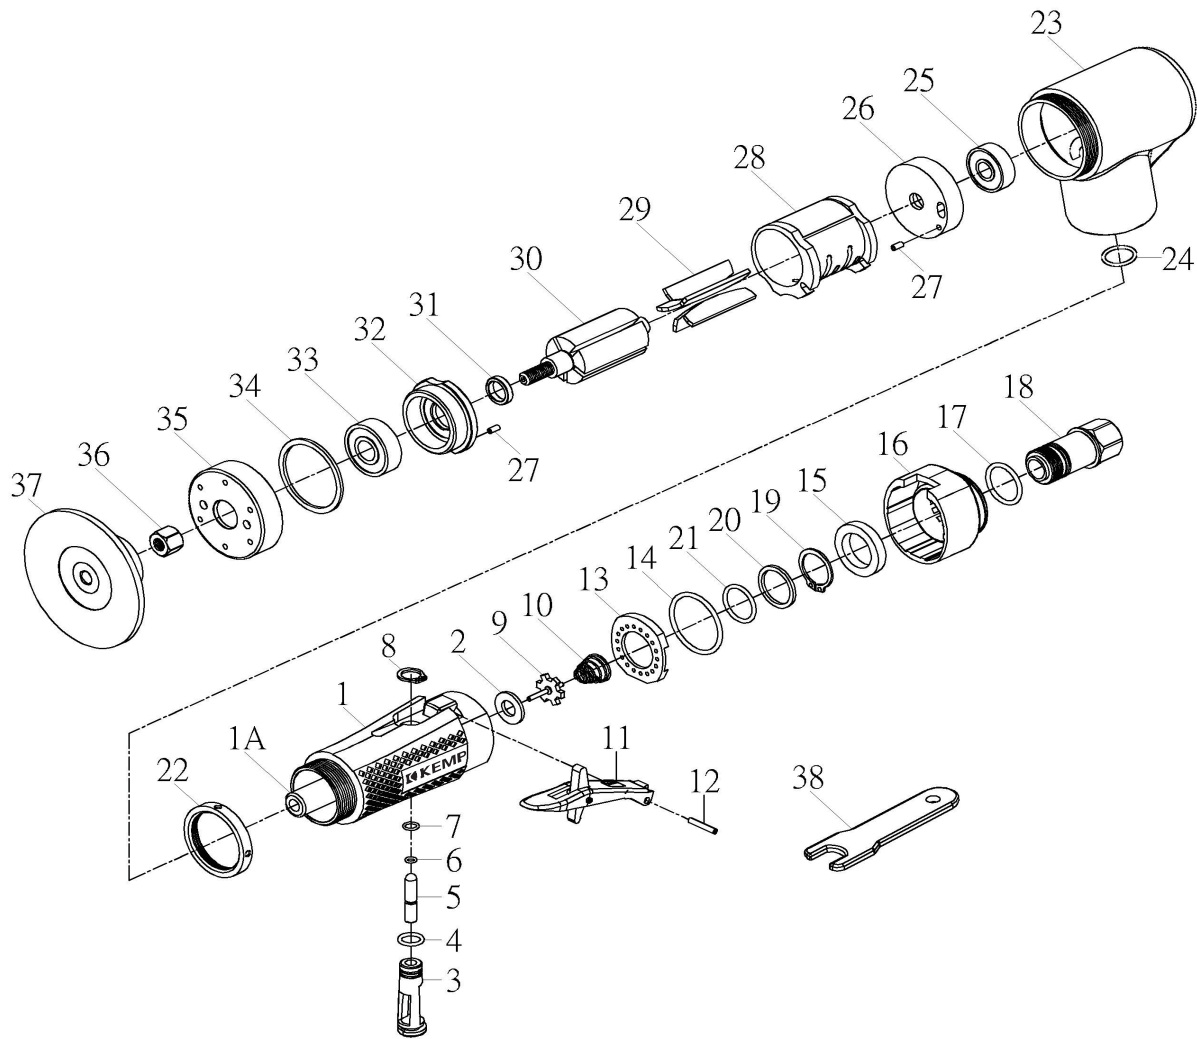

NO.	PART NO.	DESCRIPTION	Qty	NO.	PART NO.	DESCRIPTION	Qty
1	152 02 230 001	Housing	1	20	152 02 230 020	Spacer	1
1A	152 02 230 201	Insert	1	21	152 02 230 021	O-Ring	1
2	152 02 230 002	Seal	1	22	152 02 230 022	Lock Nut	1
3	152 02 230 003	Regulator	1	23	152 02 230 023	Motor Housing	1
4	152 02 230 004	O-Ring	1	24	152 02 230 024	O-Ring	1
5	152 02 230 005	Valve stem	1	25	152 02 230 025	Bearing	1
6	152 02 230 006	O-Ring	1	26	152 02 230 026	Rear End Plate	1
7	152 02 230 007	O-Ring	1	27	152 02 230 027	Pin	2
8	152 02 230 008	Spring Ring	1	28	152 02 230 028	Cylinder	1
9	152 02 230 009	Throttle	1	29	152 02 230 029	Blade	5
10	152 02 230 010	Spring	1	30	152 02 230 030	Rotor	1
11	152 02 230 011	Safety Lever	1	31	152 02 230 031	Washer	1
12	152 02 230 012	Lever Pin	1	32	152 02 230 032	Front End Plate	1
13	152 02 230 013	Air Control Ring	1	33	152 02 230 033	Bearing	1
14	152 02 230 014	O-Ring	1	34	152 02 230 034	Felt	1
15	152 02 230 015	Felt	1	35	152 02 230 035	Cover	1
16	152 02 230 016	Rear Cap	1	36	152 02 230 036	Nut	1
17	152 02 230 017	O-Ring	1	37	152 02 230 037	3" Pad	1
18	152 02 230 018	Air Inlet	1	38	152 02 230 038	Spanner	1
19	152 02 230 019	Ring	1				