


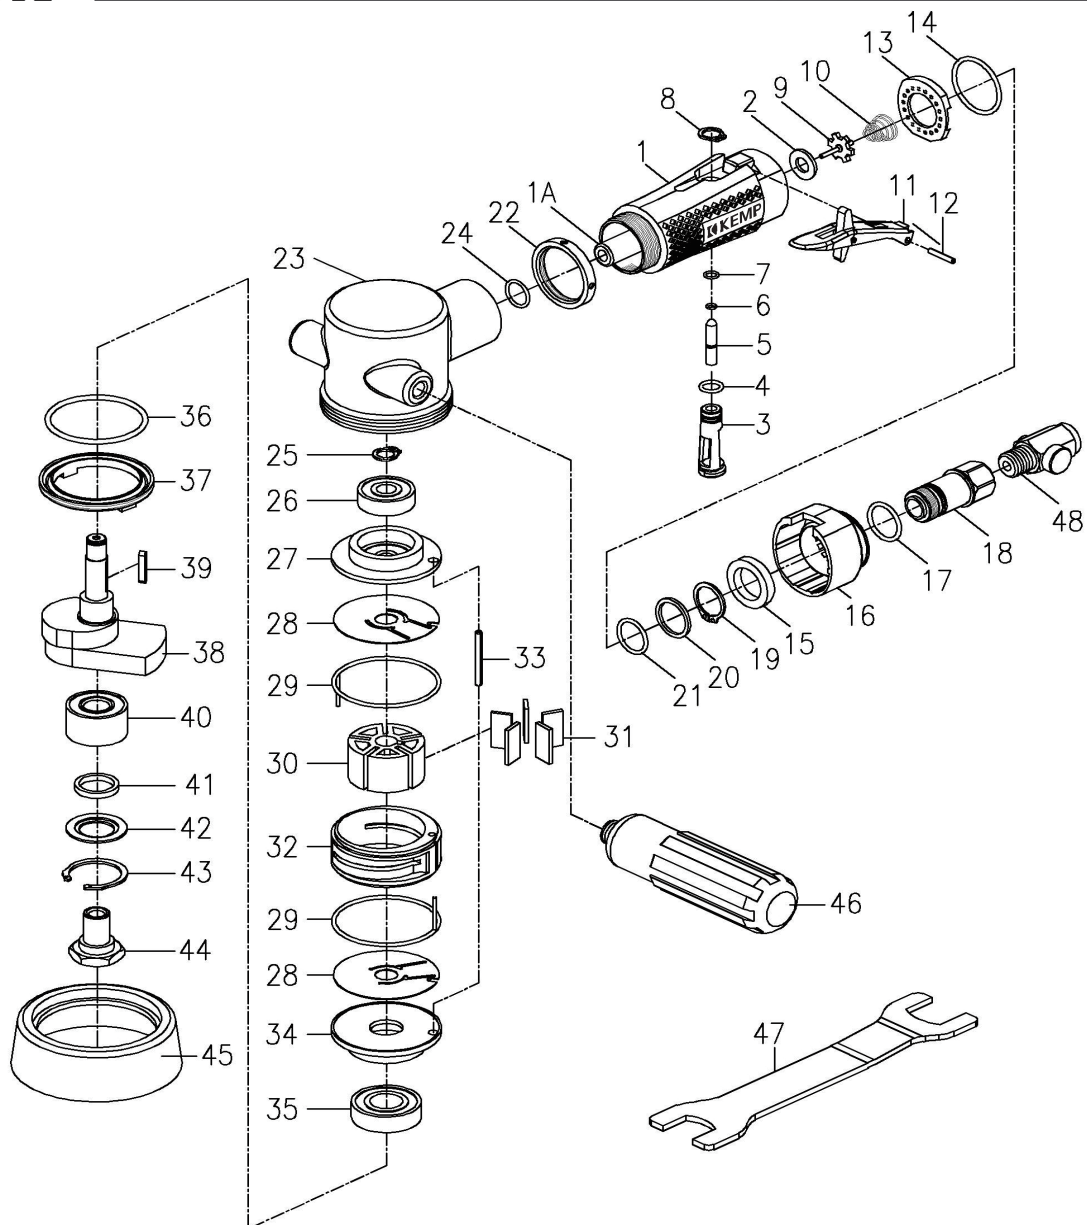

NO.	PART NO.	DESCRIPTION	Qty	NO.	PART NO.	DESCRIPTION	Qty
1	153 02 300 001	Housing	1	25	153 02 300 025	Snap Ring	1
1A	153 02 300 201	Insert	1	26	153 02 300 026	Ball Bearing	1
2	153 02 300 002	Seal	1	27	153 02 300 027	Rear End Plate	1
3	153 02 300 003	Regulator	1	28	153 02 300 028	Steel Plate	2
4	153 02 300 004	O-Ring	1	29	153 02 300 029	O-Ring	2
5	153 02 300 005	Valve Stem	1	30	153 02 300 030	Rotor	1
6	153 02 300 006	O-Ring	1	31	153 02 300 031	Rotor Blade	5
7	153 02 300 007	O-Ring	1	32	153 02 300 032	Cylinder	1
8	153 02 300 008	Spring Ring	1	33	153 02 300 033	Spring Pin	1
9	153 02 300 009	Throttle	1	34	153 02 300 034	Front End Plate	1
10	153 02 300 010	Spring	1	35	153 02 300 035	Ball Bearing	1
11	153 02 300 011	Safety Lever	1	36	153 02 300 036	O-Ring	1
12	153 02 300 012	Lever Pin	1	37	153 02 300 037	Safe Guard Bushing	1
13	153 02 300 013	Air Control Ring	1	38	153 02 300 038	Motor Shaft Balancer	1
14	153 02 300 014	O-Ring	1	39	153 02 300 039	Key	1
15	153 02 300 015	Felt	1	40	153 02 300 040	Ball Bearing	1
16	153 02 300 016	Rear Cap	1	41	153 02 300 041	Flet	1
17	153 02 300 017	O-Ring	1	42	153 02 300 042	Bearing Shield	1
18	153 02 300 018	Air Inlet	1	43	153 02 300 043	Snap Ring	1
19	153 02 300 019	Snap Ring	1	44	153 02 300 044	Shaft	1
20	153 02 300 020	Spacer	1	45	153 02 300 045	Shroud	1
21	153 02 300 021	O-Ring	1	46	153 02 300 046	Handle	1
22	153 02 300 022	Lock Nut	1	47	153 02 300 047	Spanner	1
23	153 02 300 023	Motor Housing	1	48	153 02 300 048	Air Regulator	1
24	153 02 300 024	O-Ring	1				