


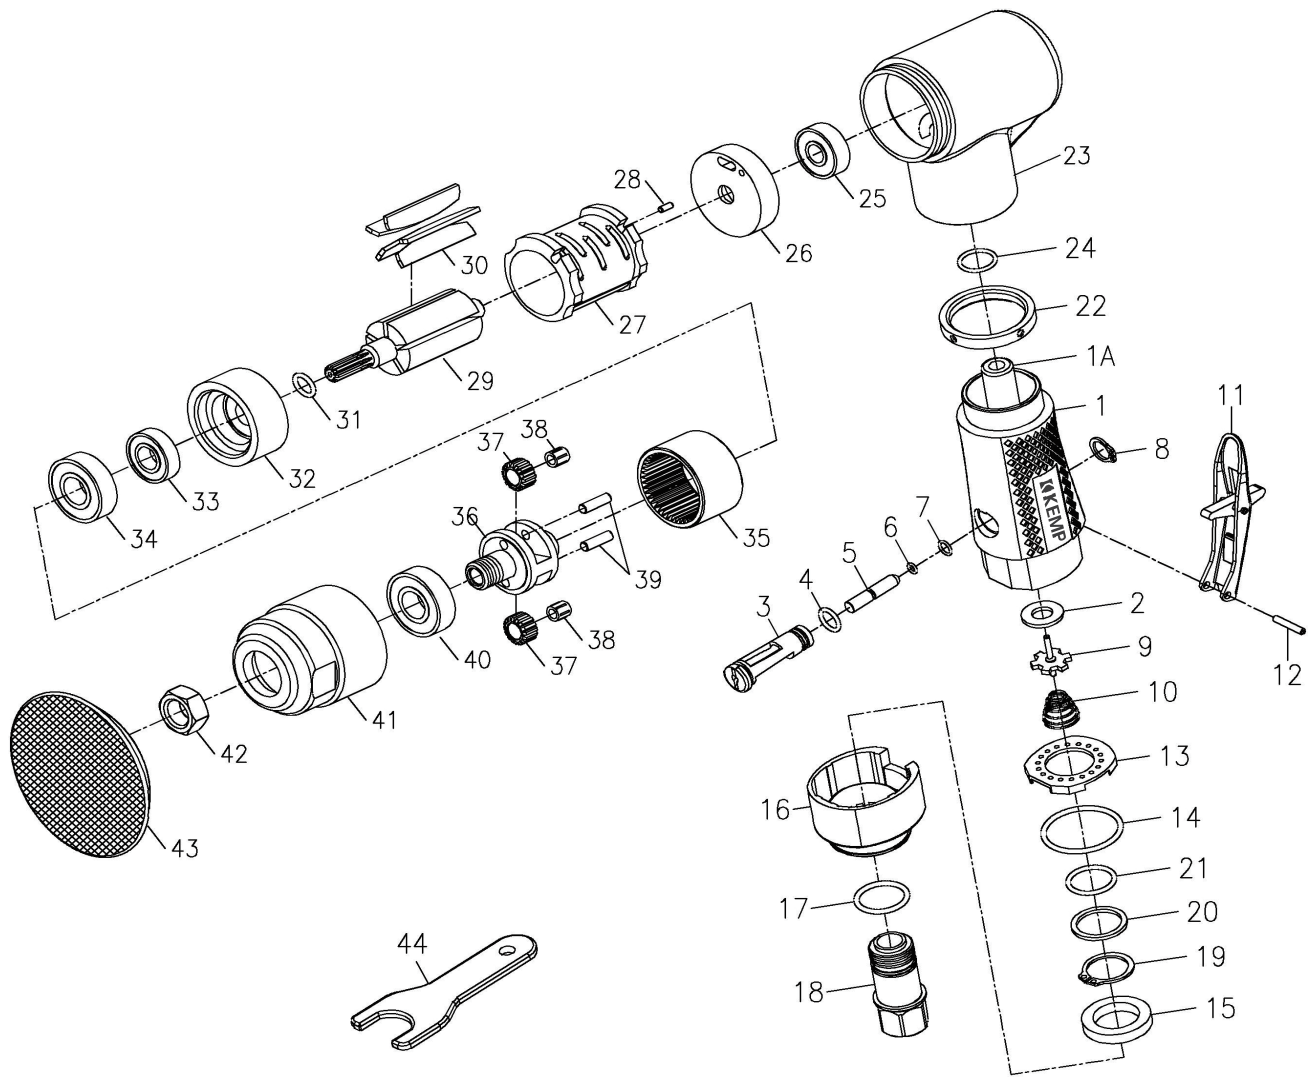

NO.	PART NO.	DESCRIPTION	Qty	NO.	PART NO.	DESCRIPTION	Qty
1	153 02 330 001	Housing	1	23	153 02 330 023	Motor Housing	1
1A	153 02 330 201	Insert	1	24	153 02 330 024	O-Ring	1
2	153 02 330 002	Seal	1	25	153 02 330 025	Ball Bearing	1
3	153 02 330 003	Regulator	1	26	153 02 330 026	Rear End Plate	1
4	153 02 330 004	O-Ring	1	27	153 02 330 027	Cylinder	1
5	153 02 330 005	Valve Stem	1	28	153 02 330 028	Pin	1
6	153 02 330 006	O-Ring	1	29	153 02 330 029	Rotor	1
7	153 02 330 007	O-Ring	1	30	153 02 330 030	Rotor Blade	5
8	153 02 330 008	Spring Ring	1	31	153 02 330 031	Spacer	1
9	153 02 330 009	Throttle	1	32	153 02 330 032	Front End Plate	1
10	153 02 330 010	Spring	1	33	153 02 330 033	Ball Bearing	1
11	153 02 330 011	Safety Lever	1	34	153 02 330 034	Ball Bearing	1
12	153 02 330 012	Lever Pin	1	35	153 02 330 035	Internal Gear	1
13	153 02 330 013	Air Control Ring	1	36	153 02 330 036	Gear Cage	1
14	153 02 330 014	O-Ring	1	37	153 02 330 037	Gear	2
15	153 02 330 015	Felt	1	38	153 02 330 038	Needle Bearing	2
16	153 02 330 016	Rear Cap	1	39	153 02 330 039	Pin	2
17	153 02 330 017	O-Ring	1	40	153 02 330 040	Ball Bearing	1
18	153 02 330 018	Air Inlet	1	41	153 02 330 041	Front Cover	1
19	153 02 330 019	Ring	1	42	153 02 330 042	Nut	1
20	153 02 330 020	Spacer	1	43	153 02 330 043	3" Pad	1
21	153 02 330 021	O-Ring	1	44	153 02 330 044	Spanner	1
22	153 02 330 022	Lock Nut	1				